ORDER NO. MAV0404001C3

Service Manual

Video Cassette Recorder

Panasonic VHS Hi-Fi PAL NTSC

NV-HV61GL / NV-HV61GC / NV-HV61GCS / NV-HV61GCSX

R4-MECHANISM

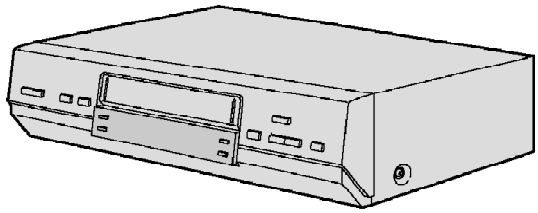

SPECIFICATIONS

SPECIFICATIONS

ITEM	SPECIFICATION		ITEM	SPECIFICATION
POWER	SOURCE: 220-240V AC 50/60 Hz (NV-HV61GL) 110-240V AC 50/60 Hz (NV-HV61GC/GCS/GCSX)		AUDIO	HEAD: 1 Stationary head (Normal-mono only) 2 channels (Hi-Fi Sound-Stereo)
	CONSUMPTION: 13 watts (NV-HV61GL) 12 watts (NV-HV61GC/GCS/GCSX)			INPUT: AUDIO IN (AV1: REAR) Connector (Phone type) -6 dBV (500mV), More than 47kΩ AUDIO IN (AV2: FRONT) Connector (Phone type) -6 dBV (500mV), More than 47kΩ
RECORDING SYSTEM	2 rotary heads, helical scanning system			OUTPUT: AUDIO OUT (AV1: REAR) Connector (Phone type) -6 dBV (500mV), Less than 1kΩ
	PAL/ NTSC		TAPE SPEED	SP: 23.39 mm/s (PAL), 33.3 mm/s (NTSC) LP: 11.695 mm/s (PAL) EP: 7.796 mm/s (PAL), 11.1 mm/s (NTSC) Record/Playback Time (PAL): SP: 4 hours with 240 min. type tape LP: 8 hours with 240 min. type tape EP: 12 hours with 240 min. type tape FF/REW Time: 60 sec. with 180 min. type tape JET REW Time: 43 sec. with 180 min. type tape
TV TUNER SYSTEM	NV-HV61GL	VHF: CH0-CH12 (PAL B) UHF: CH28-CH69 (PAL G) CATV: 45 MHz-470 MHz (PAL B)	OPERATING TEMPERATURE	5°C - 40°C
	NV-HV61GC/ GCS/GCSX	VHF: CHC1-CHC12 (PAL/SECAM D) CHF2-CHF12 (PAL /SECAM B) CHR1-CHR12 (SECAM D) UHF: CHC13-CHC57 (PAL/SECAM D) CHE21-CHE69 (PAL/SECAM G) CHE21-CHE69 (SECAM K) CHE21-CHE69 (PAL I) CATV: CHZ1-CHZ35 (PAL/SECAM D) CHS01-CHS41 (PAL/SECAM B) 44 MHz-470 MHz (SECAM D)	OPERATING HUMIDITY	35% - 80%
			DIMENSIONS	430 (W)×89 (H)×227 (D) mm
			WEIGHT	3.0 kg
RF OUT SYSTEM	NV-HV61GL	UHF: CH21-CH69 (PAL G) 71 ± 3 dBμ, 75 Ω closed	STANDARD ACCESSORIES	1 pc. DIN-RF Cable 1 pc. Infra-red Remote Controller 1 pc. AV Cable 1 ps: AC Mains Lead (NV-HV61GL/GCS/GCSX) 2 ps: AC Mains Lead (NV-HV61GC)
	NV-HV61GC/ GCS/GCSX	UHF: CHE21 CHE69 (PAL/SECAM G, SECAM K, PAL I) 71 + 3 dBμ, 75 Ω closed		
VIDEO	HEADS: 4 rotary heads 1 pair for recording and playback (L-R heads) 1 pair for trick play (L'-R' heads)		SOLDER	This model use lead free solder (PbF).
	INPUT: VIDEO IN (AV1: REAR) Connector (Phone type) 1.0 Vp-p, 75 Ω terminated VIDEO IN (AV2: FRONT) Connector (Phone type) 1.0 Vp-p, 75 Ω terminated			
	OUTPUT: VIDEO OUT (AV1: REAR) Connector (Phone type) 1.0 Vp-p, 75 Ω terminated			

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.

© 2004 Matsushita Electric Industrial Co., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

1. INTRODUCTION

1.1. INTRODUCTION

This service manual contains technical information which will allow service personnel to understand and service this model.
If the circuit is changed or modified, this information will be followed by supplementary service manual to be filed with original service manual.

Note:

1. **Adjustment procedures, Disassembly Procedures and Assembly Procedures for Mechanism Chassis are separate volume from this service manual.**
   Please refer to the service manual for R4-Mechanism Chassis. (Order No. VRD0202010C8)
2. **The Model No. is indicated on the Schematic Diagram and Circuit Board Diagrams as follows.**

Model No.	Indication Mark
NV-HV61GL	(GL)
NV-HV61GC	(GC)
NV-HV61GCS	(GCS)
NV-HV61GCSX	(GCSX)

1.2. ABOUT LEAD FREE SOLDER (PbF)

Distinction of PbF PCB:
PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:

- **Pb free solder has a higher melting point than standard solder, Typically the melting point is 50-70°F (30-40°C) higher. Please use a high temperature soldering iron. In case of soldering iron with temperature control,please set it to 700±20°F (370±10°C)**

- Pb free solder will tend to splash when heated too high (about 1100°F/600°C).

When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.

2. GENERAL DESCRIPTIONS

2.1. SERVICE CAUTION-1

When the Microprocessor IC6001 and/or Back-up battery B7751 are replaced, read the following procedure carefully and proceed it.

[REASONS]
There is a RAM in the IC6001, which is backing up:

1. Programme Navigation Data [See NOTE1]

2. TV Tuning Data

3. PG Shifter Adjustment Data

4. Option Setting Data

When IC6001 are replaced, all above listed data become not available.
These data is backed up by using the power source of:
***AC Connected: AC Power source**
***AC Disconnected: Back-up Battery (B7751) & Back-up Capacitor (C7752)**

[NOTE1]
As for your reference, without inserting a tape into a VCR, you can confirm that the NAVI data that is back up with IC6001 as shown in the following steps.

1. Indicate the "NAVI" mark on the Front Information Panel. (Press the Menu button and select the option, then set the "NAVI" to ON mode.)

2. Turn on the Service Mode and press the "NAVI" button on the Remote Controller in more than 5 seconds. The "NAVI" data list is displayed on the Monitor. (Press the "MENU" button on the Remote Controller for cancellation.)

Although stored NAVI data can be confirmed on the monitor, there is no way to transfer the NAVI data to IC6001which is newly mounted.

2.1.1. REPLACING PROCEDURE [IC6001]

[1.PREPARATION]
Before replacing IC6001:

1. Take note that stored TV broadcast channels. (Because, its user

may store TV broadcasts by manually other than "Auto Tuning" operation and it is also erased.)

NOTE:
During servicing, do not make a short circuit between IC6001-pin 37 (5V) with other line/ Components otherwise IC6001 may be broken.

CAUTION:

***When replacing the B7751, be sure to read/follow the "HOW TO REPLACE THE LITHIUM BATTERY" section.**

[2.REPLACING PROCEDURE IN STEPS]

STEP1.PREPARATION

1. **Disconnect the AC plug before removing the C.B.A. with Mechanism unit by referring to the Disassembly procedure.**

STEP2.REPLACE THE IC6001

1. **Replace the IC6001. (Do not make a short circuit between IC6001-pin37 and other pins/Components.)**

STEP3.RESET THE IC6001 AT ONCE

1. **Connect the AC plug.**
2. **Connect a jumper wire between TL7510 (RESET) and TL7509 (GND) for a second to reset the Microprocessor IC6001.**

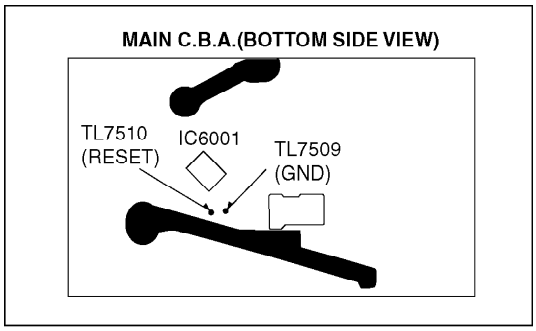

Note:
Since the resistance at pin 2 as well as pin 3 of IC6001 decides the model distinction data, there is no need to set up the Model code, which is necessary in the previous models.

STEP4.LINE-IN SETTING & ACTIVATE PLUG-IN A.T.P.
(FOR OTHER THAN NV-HV61GL)

1. **Press the Channel up and down keys simultaneously for more than 3 seconds, under the condition of the no tape is in the unit.**
2. **Confirm that "A1" and "A2" can be displayed on the FIP by pressing the CH UP and CH DOWN buttons.**

NOTE:
If "DIRECT REC" on the OPTION setting screen is set to [ON], the input signal is fixed to "A1", and the Channel up and down keys are not effective.

3. **Disconnect the AC plug for few seconds and connect it again, and press POWER button for turning the power to on from off to carry out the "Plug in Auto Tuner Preset".**
4. **Since other than the channels that can be stored by "Auto Tuning" operation are not available yet, preset manually by consulting the note of its available TV channels of which you took before.**

NOTE:
The Factory shipping condition of OSD setting is not restored by above operation.

5. **Change the OSD setting to the Factory shipping condition if necessary, by referring to Option Setting on the Operating Instructions as shown in the following chart.**

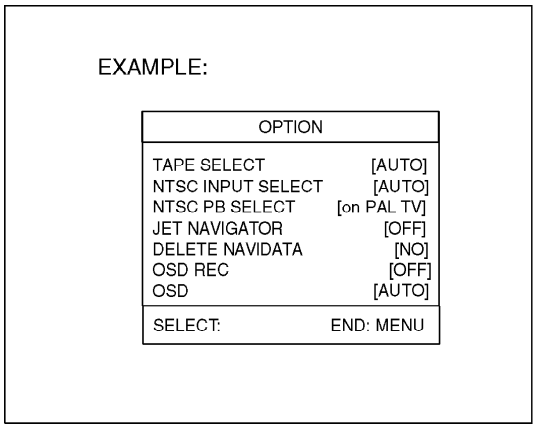

STEP5.TAPE INTERCHANGEABILITY ADJUSTMENT
Refer to the Electrical Adjustment Procedures.

2.2. HOW TO REPLACE THE LITHIUM BATTERY

2.2.1. GENERAL DESCRIPTION

There is a RAM in the IC6001, which is backing up the following data by using the power source of B7751 (Back-up Battery) and C7752 (Back-up Capacitor: Back-up time is approximately 30 minutes).

1. **Programme Navigation Data**
2. **TV Tuning Data**
3. **PG Shifter Adjustment Data**
4. **Option Setting Data**

2.2.2. REPLACEMENT PROCEDURE

NOTE:
This work should be finished within 30 minutes so that the RAM data would not be lost as running out of current from the Back-up Capacitor C7752.

1. **Remove the Top Panel and Mechanism unit with Main C.B.A by referring to the Disassembling Procedure.**
2. **Unsolder the Lithium Battery: B7751 and then replace it with a new one (See Fig. B1).**

Fig. B1

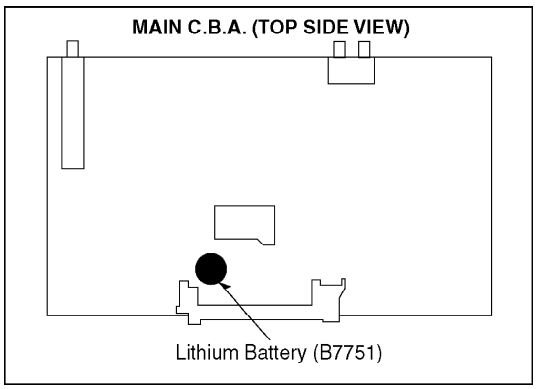

NOTE:
The lithium battery is a critical component (Manufactured by Panasonic.)

It must never be subjected to excessive heat or discharge.
It must therefore only be fitted in equipment designed specifically for its use.
Replacement batteries must be of the same type and manufacture.
They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.
Do not attempt to re-charge the battery or re-use it for any other purpose.
It should be disposed of in waste products destined for burial rather than incineration.

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the equipment manufacturer.
Discard used batteries according to manufacturer's instructions.

PRECAUTION
Le fait de remplacer incorrectement la pile peut présenter des risques d'explosion.
Remplacer la pile uniquement par une pile identique ou de type équivalent recommandée par le fabricant. Se débarrasser des piles usagées conformément aux instructions du fabricant.

VORSICHT
Bei einer falsch eingesetzten Batterie besteht Explosionsgefahr. Nur mit einer vom Hersteller empfohlenen Batterie vom gleichen Typ ersetzen.
Verbrauchte Batterien beim Fachhändler oder einer Sammelstelle für Sonderstoffe abliefern.

VARNING
Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens instruktion.

ADVARSEL!
Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.
Udskiftning má kun ske med batteri af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

VAROITUS
Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.
Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

2.3. SERVICE CAUTION-2

2.3.1. CAUTION FOR AUTO TUNING

PROCEDURE
Auto Tuning will start by the following procedure.

1. Connect the DIN-RF Cable.

2. Connect the AC Mains Lead.

3. Turn on the VCR.
Auto Tuning will start.
Auto Tuning search for TV stations from VHS minimum to UHF maximum and memorizes every tuned program position. Other program positions are skipped.

Auto Tuning takes five or more minutes to complete its search.
Do not touch the VCR during Auto Tuning.
Auto Tuning will stop halfway, if the VCR is operated or the aerial lead and/or the mains lead are disconnected.
In case the VCR stopped during Auto Tuning, the VCR has to be reset and restarted. See the following item 2.

NOTE:

1. **If the VCR is turned on with the antenna not connected, all channels are skipped. Therefore, firmly connect the antenna and then turn the VCR off and on again to execute Auto tuning.**
2. **When Auto Tuning is canceled halfway, Auto Tuning is not execute even if the VCR is turned off and then turned on again, In this case, Auto Tuning has to be restarted by the following procedures.**
   A. Press EJECT and remove the Videocassette.
   B. Keep UP and DOWN on the VCR pressed simultaneously for 3 seconds or more during the VCR on.
   The channel displayed on the VCR display disappears for moment then changes to 2.
   C. Turn off the VCR and then turn it on. Auto Tuning commences.
3. **If you turn the VCR off during Auto Tuning, Auto Tuning will stop halfway.**
   The VCR should be reset and restarted by the item 2 in order to execute Auto Tuning.
4. **If the VCR starts playback during Auto Tuning, Auto Tuning will stop halfway.**
   The VCR should be reset and restarted by the item 2 in order to execute Auto Tuning.
5. **To cancel Auto Tuning Mid-operation, press POWER During Auto Tuning (The VCR is turned off).**
6. **When the VCR is moved to the other area or country, TV broadcasts should be stored again.**

2.3.2. CHECKING OF MAIN C.B.A.

When servicing the MAIN C.B.A., take out the MAIN C.B.A. and mechanism from the frame. Turn the MAIN C.B.A. over as shown in Fig. S1.

Fig. S1

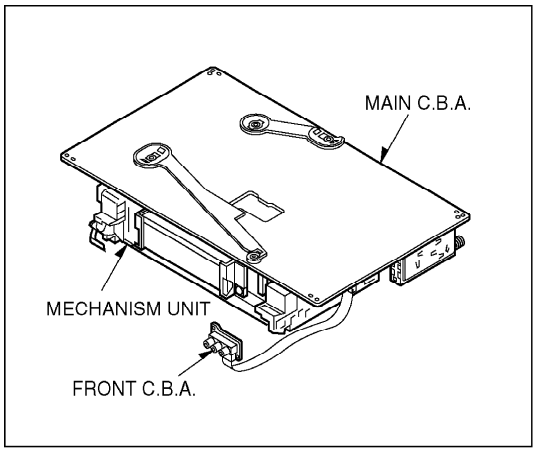

2.3.3. REMOVAL OF CASSETTE TAPE

When the cassette tape could not be uninstalled from an electrical malfunction, There are 2 ways to remove a cassette tape.

1. Removal by compulsory unloading.

A. Press FF and EJECT button simultaneously for more than 3 seconds and set the Service Mode to 7.

B. Press STOP button in order to unload the mechanism. (Pay attention to tape slack)
Service Mode Indication:
7 ** ** (STOP) → 7 0L ** (EJECT)

2. Removal by manual operation by rotating the Loading Motor with the batteries.

A. Disconnect the AC plug, and remove the Top Panel and the Front Panel by referring to the Disassembly Procedures.

B. Connect three batteries (1.5V spec.) to the Loading Motor in series for supplying 4.5V to rotate the Loading Motor as shown in Fig. S2.

Fig. S2

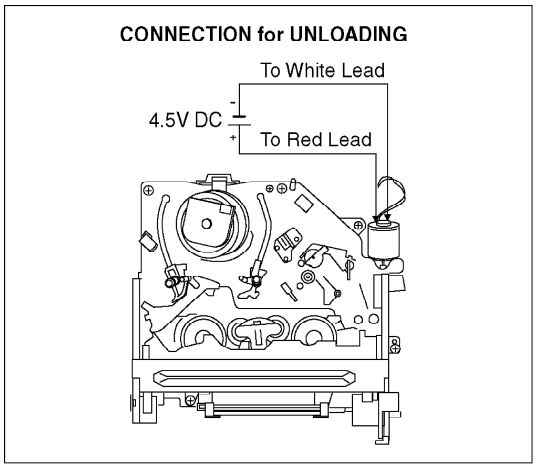

C. Stop unloading just before unloading would be completed as shown in Fig. S3.

Fig. S3

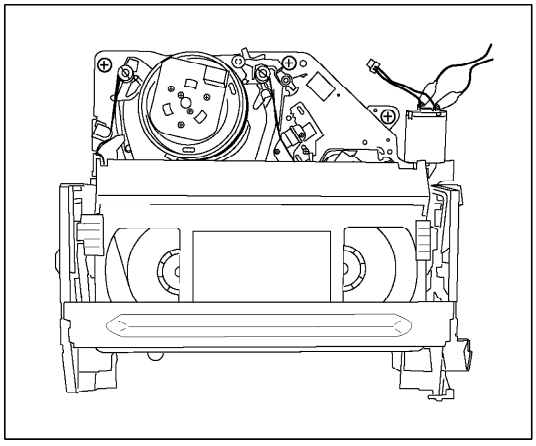

D. Then the tape becomes slack as shown in Fig. S4.

Fig. S4

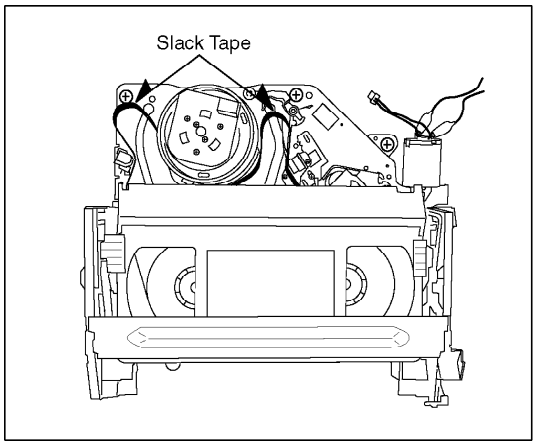

E. Rotate the S-Reel by a small minus screwdriver (Fig. S5) to remove the slack tape as shown in Fig. S6.

Fig. S5

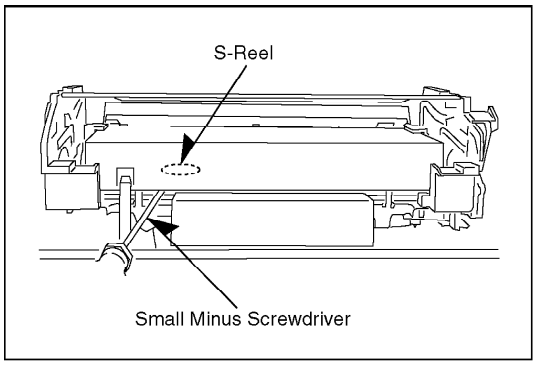

Fig. S6

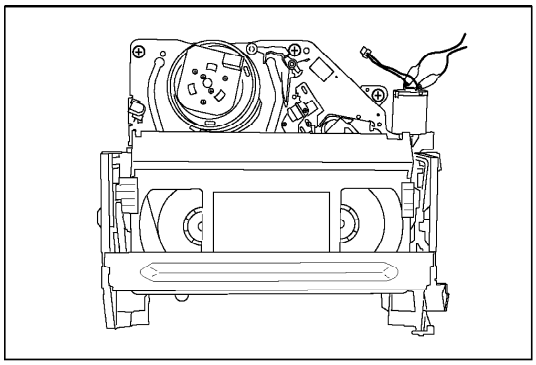

F. Then unload again to remove the cassette tape as shown in Fig. S7.

Fig. S7

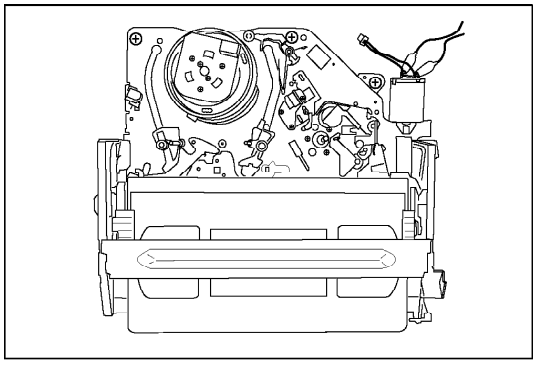

3. Removal by manual operations after uninstalling the mechanism,refer to the DISASSEMBLY METHOD of item3.1.

A. Disconnect the AC plug, and remove the Top Panel, Front Panel and the Mechanism by referring to the Disassembly Procedures.

B. Remove the Screw (S1) and remove the Loading Motor both as shown in Fig. S8.

Fig. S8

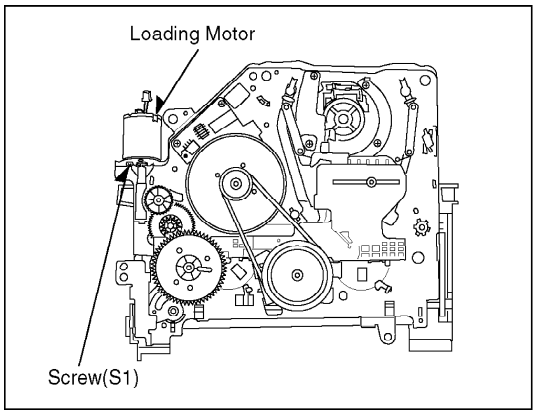

C. Rotate the Main Cam Gear counter-clockwise (Fig. S9) until just before the unloading would be completed as shown in Fig. S3.

D. Rotate the Capstan Motor clockwise (Fig. S9) to remove the slack tape as shown in Fig. S6.

Fig. S9

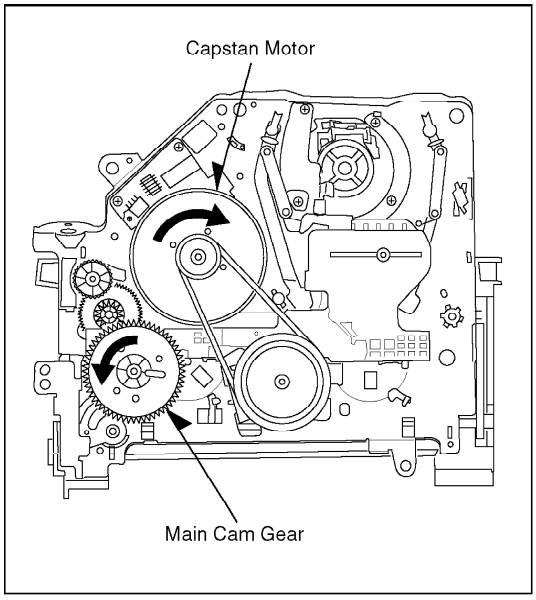

E. Rotate the Main Cam Gear counter-clockwise again (Fig. S9) to remove the cassette-tape as shown in Fig. S7.

F. Set the Position Switch to EJECT POSITION certainly as shown in Fig. S10.

Fig. S10

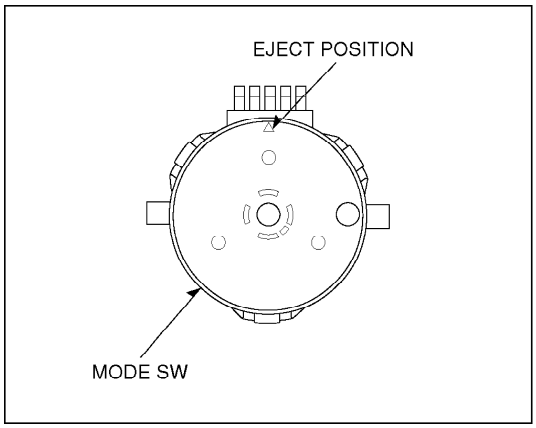

G. Install the Loading Motor and tighten screw (S1) as shown in Fig. S8.

2.3.4. CYLINDER UNIT REPLACEMENT

NOTE:
Replacing only Upper Cylinder unit of R4 Mechanism cannot be performed, as securing of RT gap is impossible out of factory, please replace the cylinder by whole Cylinder Unit. The Compatibility Adjustment should be performed after replacement ofthe DD Cylinder Unit.

1. **Remove the Mechanism Unit from Main C.B.A./Chassis by referring to "Disassembly Procedure".**
2. **Remove a red Screw (S2) and 2 gold Screws (S3) to remove the Cylinder Unit shown in Fig. S11.**

Fig. S11

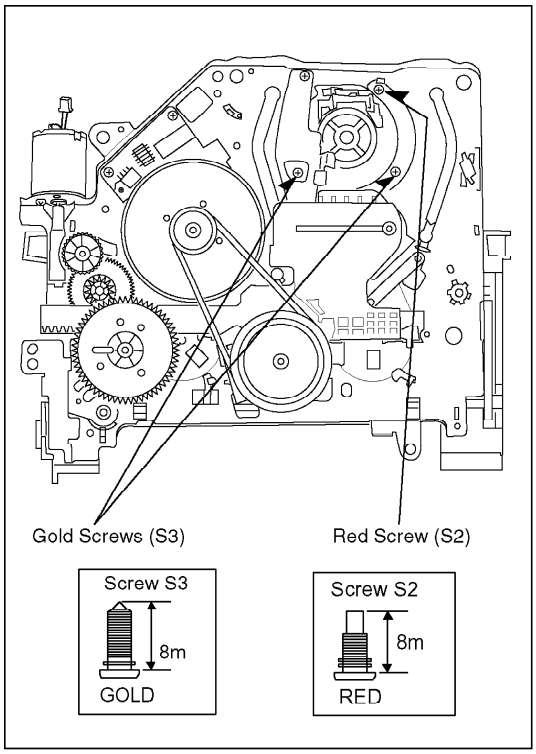

NOTE:
When reassembling, perform the steps in the reverse order, and perform the TAPE INTERCHANGEABILITY ADJUSTMENT certainly after CYLINDER UNIT REPLACEMENT.

2.3.5. ATTENTION FOR REPLACING THE CYLINDER UNIT

CAUTION:

Handle the Cylinder Flexble Card with care. When it damaged, you should replace it with a new Cylinder Unit.

1. Put the gloves on your hands.

2. Turn the Cylinder Unit over.

3. Insert the FPC HOLDER to the Cylinder Unit.

Fig. S12

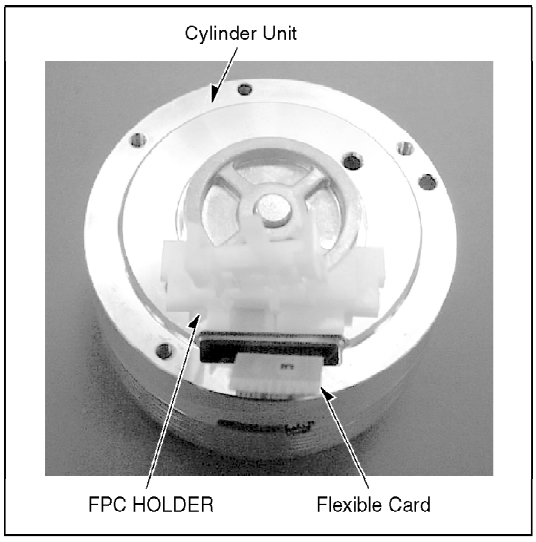

4. Hook the Flexible Card to the FPC HOLDER.

Fig. S13

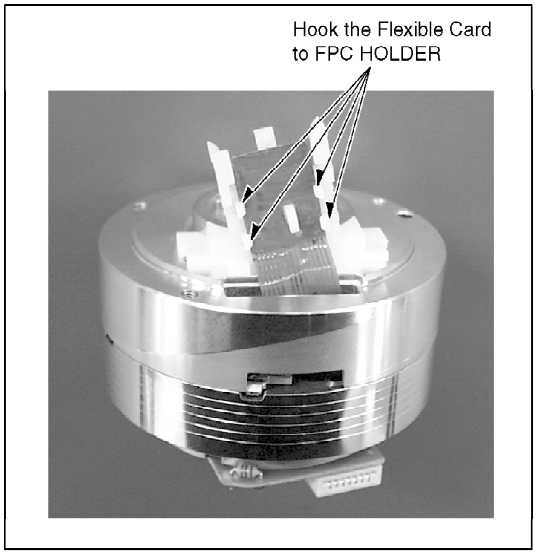

NOTE:

1. **When removing the FPC HOLDER, push stopper portion of the FPC HOLDER with a small minus screw driver and so on. And then pay attention for not to scratch the Cylinder and not to break the Head Chip.**
2. **FPC HOLDER is not reuseable.**
   If removed, install a new one.

Fig. S14

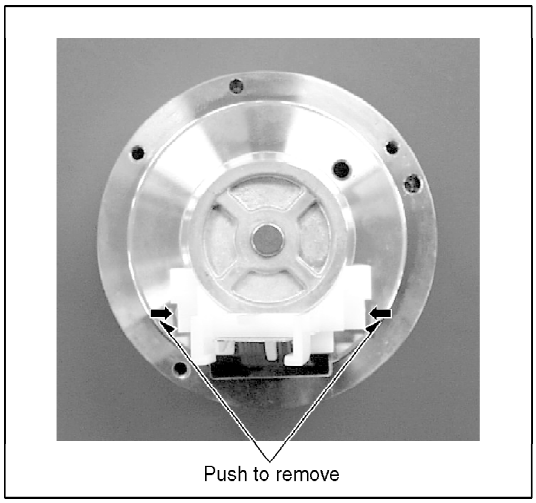

2.3.6. FLAT CARD CABLE INSTALLATION

When installing the Flat Card Cable on the connector, install the Flat Card Cable with the cable contacts facing the connector contacts.

Fig. S15

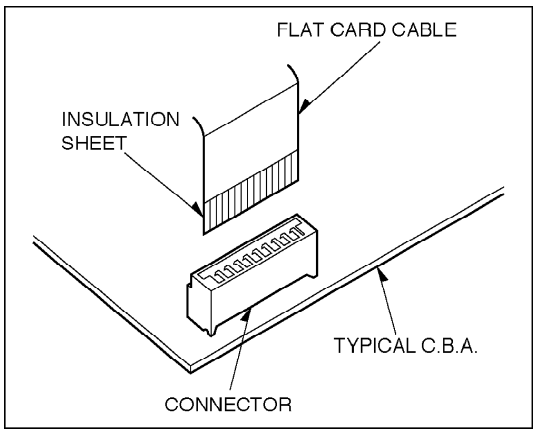

2.4. SELF-DIAGNOSIS & SERVICE INFORMATION DISPLAY

Refer to the Service Manual for R4 Mechanism Chassis.
(Order No.: VRD0202010C8).

2.5. INTRODUCTION OF VIDEO HEAD CLEANING CASSETTE / (POLISHING TYPE)

1. **We are pleased to introduce Panasonic Video Head Cleaning Cassette, VFK0923FT [for service purposes] and VFK0923FSE [for end users] for all VHS/S-VHS VCP and VCR.**
2. **These cleaning cassettes are exclusive removing the hard and sticky clogging on video heads.**
3. **These improve the efficiency of video head cleaning service and shortening cleaning time for end users.**

VFK0923FT (For Service usage)	
Type of Cassette	**Full VHS Cassette**
Cleaning Time	**10 Seconds/Time**
Tape Length	**20 m**
Usability in a Path	**180 Times**

VFK0823FSE (For end users)	
Type of Cassette	**Full VHS Cassette**
Cleaning Time	**10 Seconds/Time**
Tape Length	**3.34 m**
Usability in a Path	**30 Times**

VFK0823FSE (For end users)

Note:

The tape material itself is the same in both types.

3. ADJUSTMENT PROCEDURES

3.1. DISASSEMBLY METHOD

3.1.1. DISASSEMBLY FLOW CHART

This flow chart indicates disassembly steps of the cabinet parts and the circuit boards in order to find the necessary items for servicing.
When reassembling, perform the steps in the reverse order.

Fig. D1

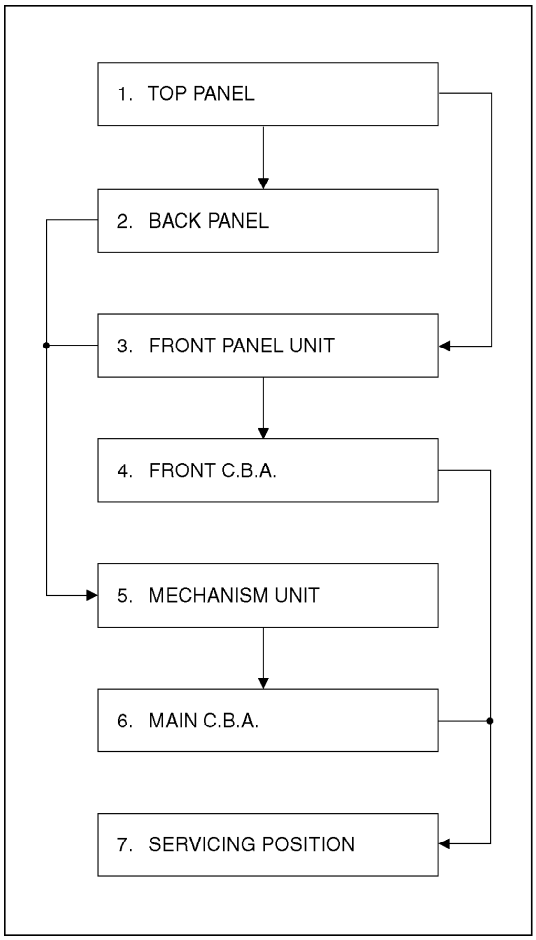

3.1.2. DETAIL OF DISASSEMBLY METHOD

1. REMOVAL OF THE TOP PANEL

Remove	**2 Screws (A)**
Remove	**2 Screws (B)**

Fig.D2

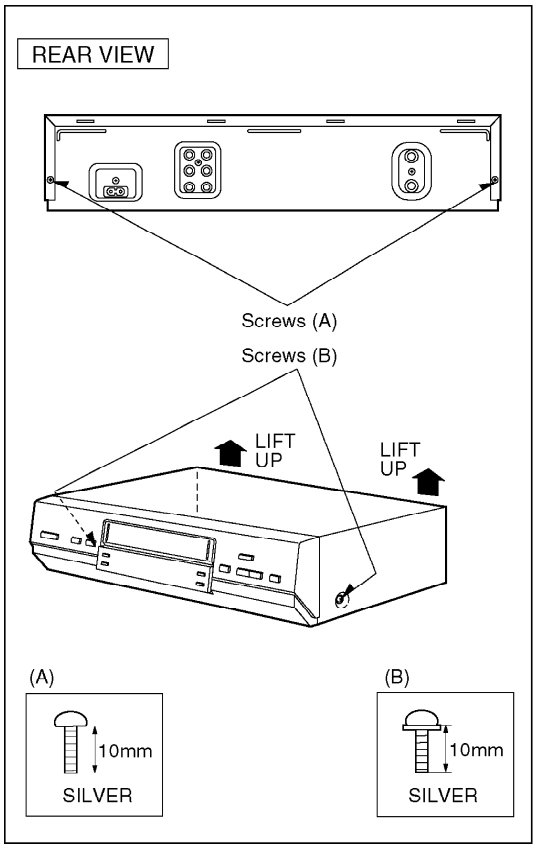

2. REMOVAL OF THE BACK PANEL

Remove	**2 Screws (C)**
Remove	**Screw (D)**
Unlock	**4 Tabs (E)**

Fig. D3

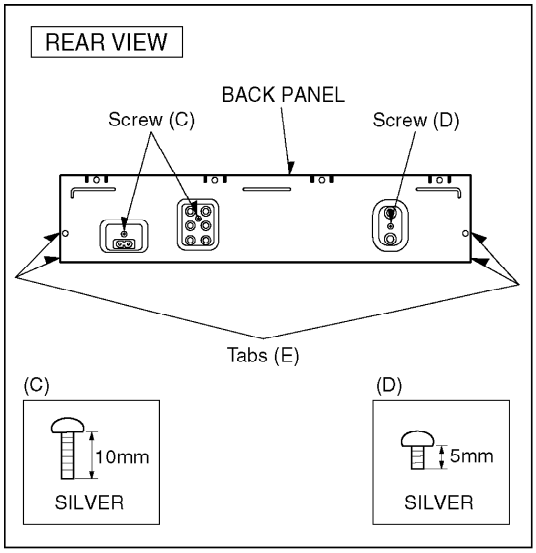

3. REMOVAL OF THE FRONT PANEL UNIT

Unlock	**7 Tabs (F)**

Fig. D4

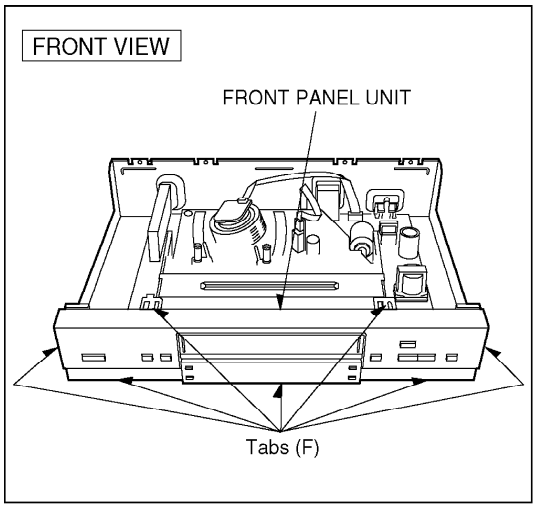

4. REMOVAL OF THE FRONT C.B.A.

Remove	**2 Screws (G)**

Fig. D5

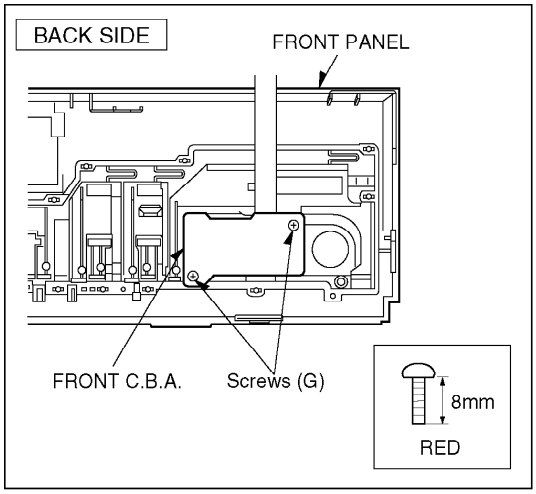

5. REMOVAL OF THE MECHANISM UNIT

Remove	**Screw (H)**
Remove	**2 Screws (I)**
Remove	**Screw (J)**
Disconnect	**Cylinder Connector**
Disconnect	**A/C Head Connector**
Disconnect	**P1531**

Fig. D6

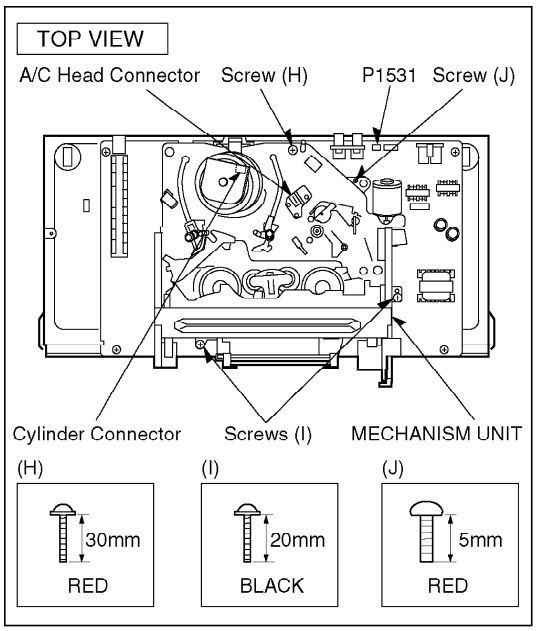

6. REMOVAL OF THE MAIN C.B.A.

Remove	**4 Screws (K)**

Fig. D7

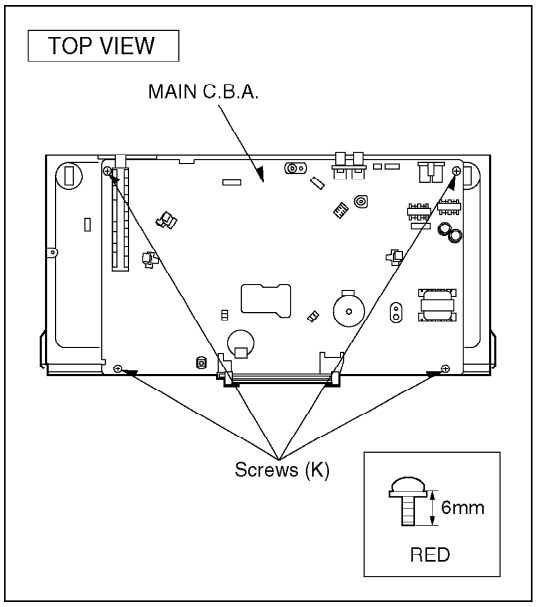

NOTE:
Before mounting the MAIN C.B.A. onto the frame, be sure to confirm that the insulation sheet is mounted on the frame as shown in Fig. D8.

Fig. D8

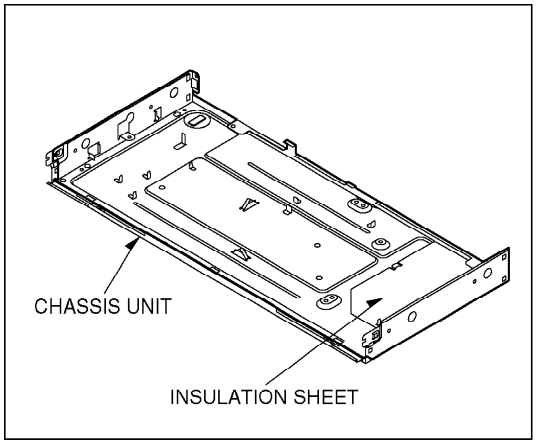

7. SERVICING POSITION

Install the Mechanism Unit on to the MAIN C.B.A..
Then fix a screw (I), and connect two frexible card Connectors (Cylinder connector, AC Head connector) and P1531 as shown in Fig. D6.

Fig. D9

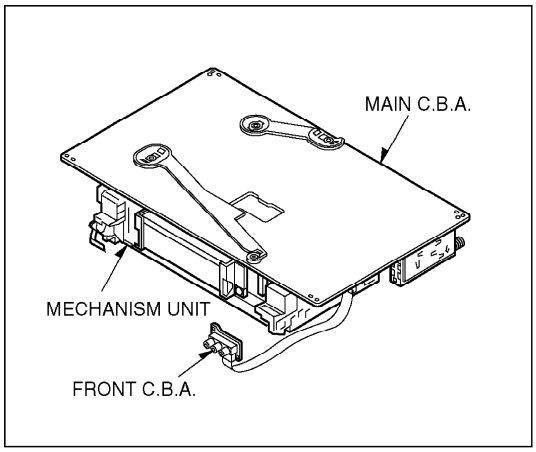

3.2. MECHANICAL ADJUSTMENT PROCEDURES

Refer to the Service Manual for R4-Mechanism Chassis.
(Order No. VRD0202010C8)

3.3. ELECTRICAL ADJUSTMENT PROCEDURES

This section provides complete adjustment procedures required for electric circuits of VCR.

3.3.1. TEST EQUIPMENT

To perform electrical adjustments following equipment is required.

1. VHS Alignment Tape. (VFJ8125H3F)
2. Monitor

3.3.2. SERVO SECTION

PG SHIFTER ADJUSTMENT

	PROCEDURE	F.I.P. DISPLAY
1.	Turn on the Service Mode 1.Press the FF key and the EJECT key simultaneously for more than 3 seconds.	
2.	Activate the Service Mode 2 While keep pressing FF key, press the EJECT key in twice.	
3.	Activate the Entering Mode. Press the EJECT key for more than 3 seconds.	
4.	Set the Mode 2. Press the CH UP key once.	
5.	Insert the alignment cassette tape (VFJ8125H3F) The PG Shifter Adjustment starts automatically.	

	PROCEDURE	F.I.P. DISPLAY
6.	When the sequence of the automatic adjustment has been terminated, the following action has been made. * SUCCEED: The cassette tape is ejected. * ERROR: The "F20", "F21", "F22" or "F23"is displayed. Refer to next PG Shifter Adjustment Self-Diagnosis Indication Table regarding the details of the indications.	
7.	Exit from Service Mode. Press FF and EJECT keys simultaneously in 6 times. Then the FIP becomes normal indication.	

PG SHIFTER AUTOMATIC ADJUSTMENT SELF-DIAGNOSIS INDICATION

F20	NG1 in the PG Shifter Automatic Adjustment (The cylinder rotation is unstable during the automatic adjustment.)
F21	NG2 in the PG Shifter Automatic Adjustment (The vertical sync signal is lacked while over 5 seconds on the alignment tape.)
F22	NG3 in the PG Shifter Automatic Adjustment (The installing position of Heads to the cylinder is our of specification.
F23	NG4 in the PG Shifter Automatic Adjustment (The servo is not locked to the cylinder for more than 10 sec.)

NOTE:
After replacing the DD Cylinder, the Tape Interchangeability adjustment (X-Value Adjustment, P2 and P3 Posts Adjustment) shown below should be performed after the PG Shifter Automatic Adjustment.

3.3.3. CIRCUIT BOARD LAYOUT

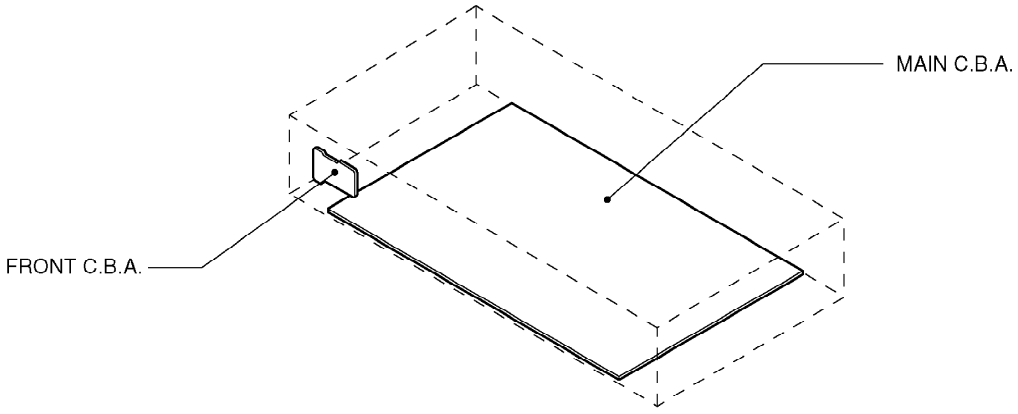

4. ABBREVIATIONS

5. INPUT / OUTPUT CHART FOR IC6001

6. WAVEFORM TABLE & VOLTAGE CHART

6.1. WAVEFORM TABLE

6.2. VOLTAGE CHART

7. BLOCK DIAGRAMS

7.1. POWER BLOCK DIAGRAM

7.2. SYSTEM CONTROL & SERVO BLOCK DIAGRAM

7.3. LUMINANCE & CHROMINANCE BLOCK DIAGRAM

7.4. AUDIO BLOCK DIAGRAM

8. SCHEMATIC DIAGRAMS

8.1. POWER TRANSFORMER SECTION IN MAIN SCHEMATIC DIAGRAM

8.2. POWER SUPPLY / RF SECTION IN MAIN SCHEMATIC DIAGRAM

8.3. TIMER SECTION IN MAIN SCHEMATIC DIAGRAM

8.4. SYSTEM CONTROL & SERVO SECTION IN MAIN SCHEMATIC DIAGRAM

8.5. LUMINANCE & CHROMINANCE / AUDIO SECTION IN MAIN SCHEMATIC DIAGRAM

8.6. Hi-Fi AUDIO SECTION IN MAIN SCHEMATIC DIAGRAM

8.7. DECODER SECTION IN MAIN SCHEMATIC DIAGRAM (NV-HV61GL)

8.8. FRONT SCHEMATIC DIAGRAM

9. CIRCUIT BOARD ASSEMBLIES

9.1. MAIN C.B.A.

9.2. FRONT C.B.A.

10. EXPLODED VIEWS

10.1. CHASSIS PARTS SECTION

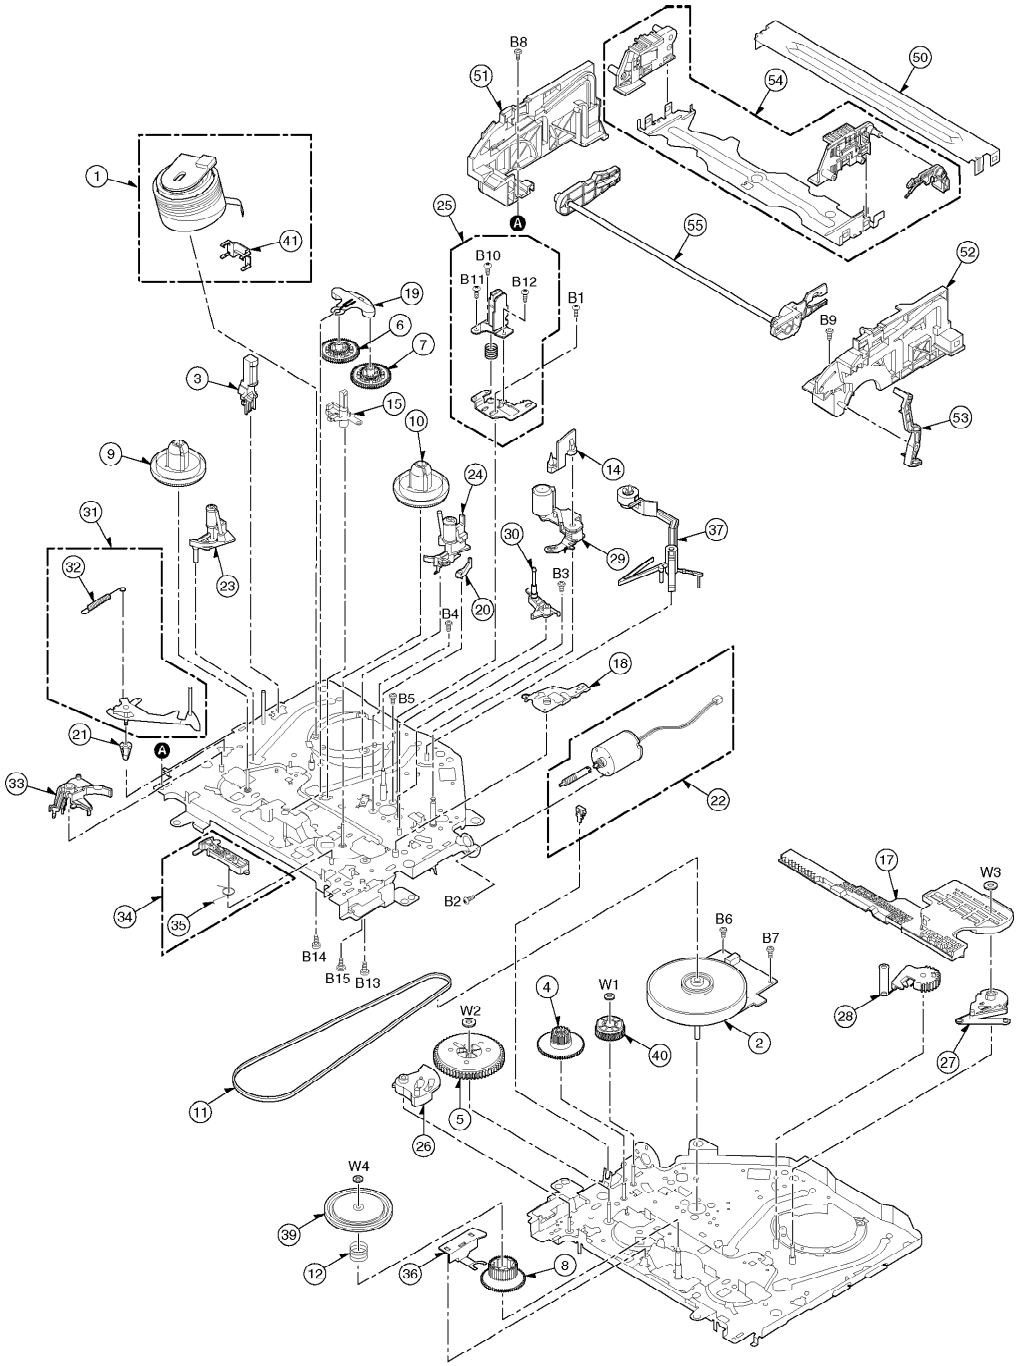

10.2. CASING PARTS SECTION

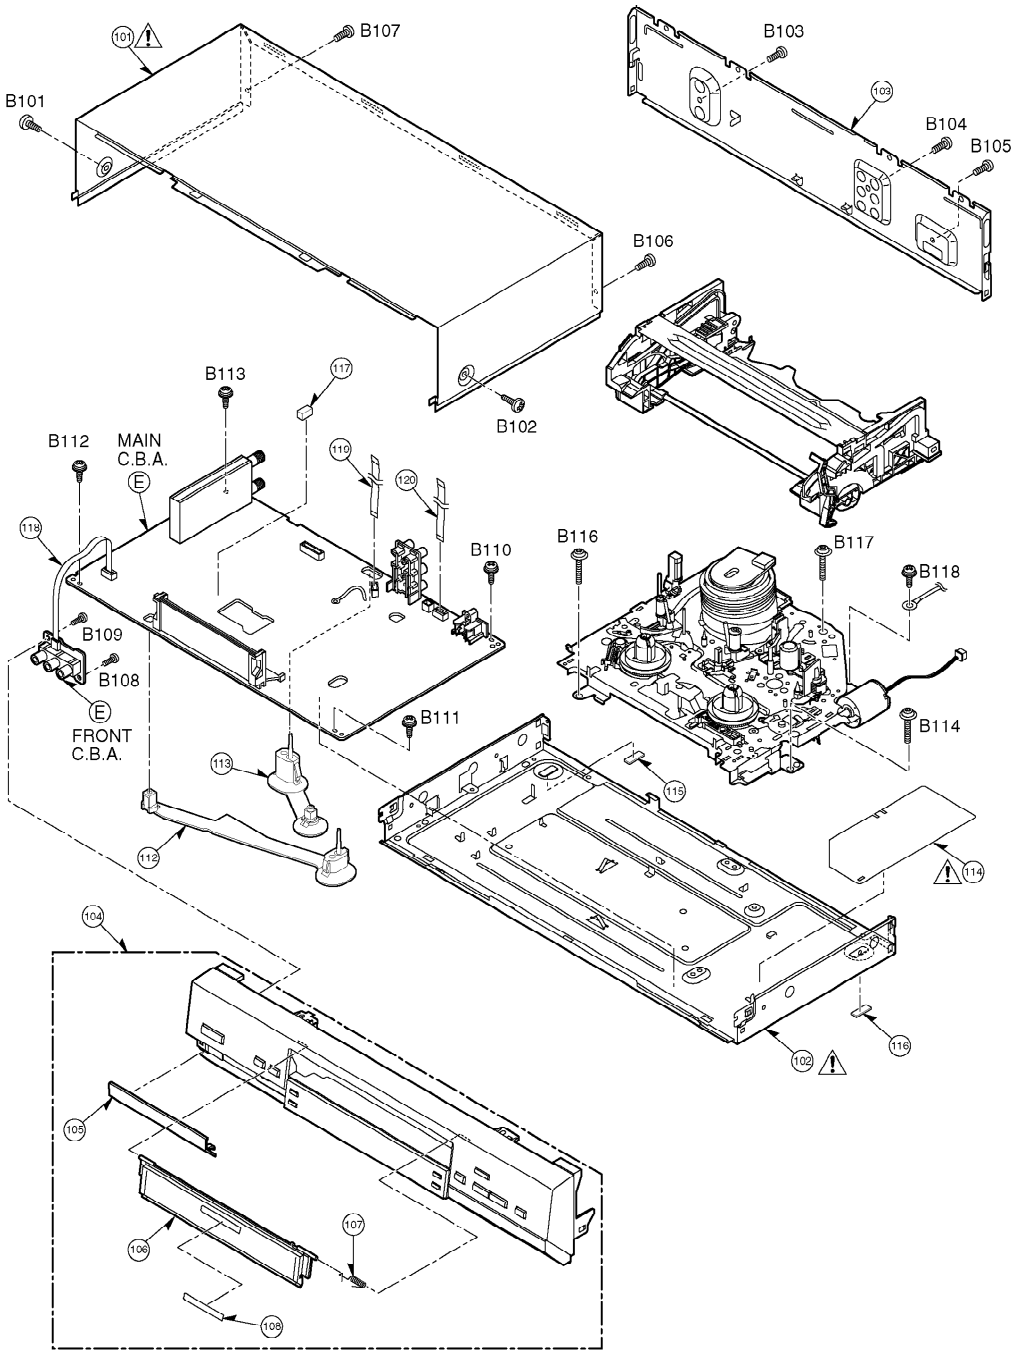

10.3. PACKING PARTS SECTION

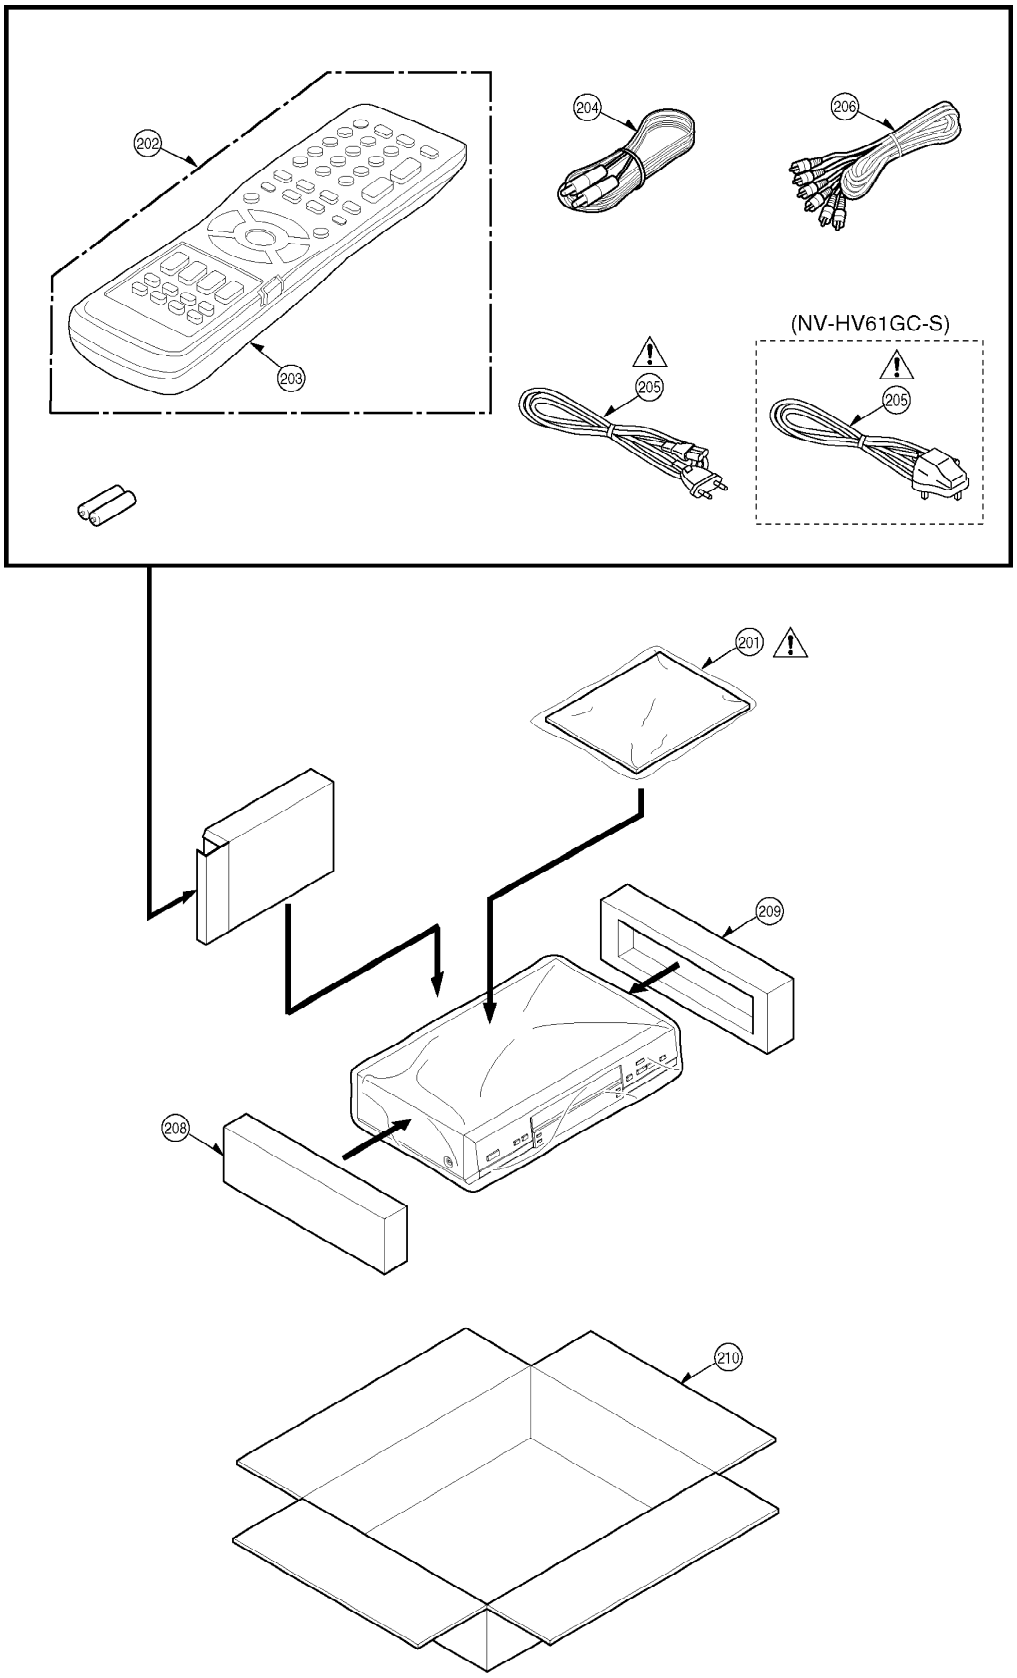

11. REPLACEMENT PARTS LIST

11.1. CHASSIS PARTS SECTION / PARTS LIST

Note:
***All parts except parts mentioned [PAVC-SPC] in the Remarks column are supplied from PAVCSG.**
Parts mentioned [PAVC-SPC] are supplied from PAVC-SPC .

Note: 1. *Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE
Components identified with the mark △ have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref. No.	Part No.	Part Name & Description	Remarks
1	VEG1642-DKIT	CYLINDER UNIT	
2	VEM0750	CAPSTAN UNIT	
3	L1AZ00000004	FE HEAD UNIT	
4	VDG1510	INTERMEDIATE GEAR	
5	VDG1511	MAIN CAM GEAR	
6	VDG1512	IDLER GEAR	
7	VDG1512	IDLER GEAR	
8	VDG1514	CHANGE GEAR	
9	VDR0372	REEL TABLE	
10	VDR0372	REEL TABLE	
11	VDV0391	CAPSTAN BELT	
12	VMB3550	CHANGING GEAR SPRING	
14	VMD4252	OPENER PIECE	
15	VMD4253	LED PRISM	
17	VML3624	MAIN LEVER	
18	VML3626	PINCH CHARGE ARM	
19	VML3632	IDLER ARM	
20	VMX3092	P4 CAP	
21	VDB1431	TENSION ARM BOSH	
22	VEM0797	LOADING MOTOR UNIT	
23	VXA7105	SUPPLY SHAFT HOLDER UNIT	
24	VXA7106	TAKE SHAFT HOLDER UNIT	
25	L1AE00000036	AC HEAD UNIT	
26	VXA7311	SECTOR GEAR UNIT	
27	VXL3107	SUPPLY LOADING ARM UNIT	
28	VXL3108	TAKE LOADING ARM UNIT	
29	VXL3109-4	PINCH ARM UNIT	
30	VXL3110	P5 ARM UNIT	
31	VXL3111	TENSION ARM UNIT	
32	VMB3547	TENSION SPRING	
33	VXL3252	SUPPLY BRAKE ARM UNIT	
34	VXL3113	TAKE UP BRAKE ARM UNIT	
35	VMB3548	T UP BRAKE SPRING	
36	VXL3124	CHANGE LEVER UNIT	
37	VXL3131	CLEANER ARM UNIT	
39	VXP2133	CENTER CLUTCH UNIT	
40	VXP2168	TORQUE CLUTCH UNIT	
41	VMD4983	FLAT CABLE HOLDER	
50	VMA0L25	TOP PLATE	
51	VMD4255	SIDE PLATE (L)	

Ref. No.	Part No.	Part Name & Description	Remarks
52	VMD4254	SIDE PLATE (R) UNIT	
53	VML3706	OPENER LEVER	
54	VXA7110	CASSETTE HOLDER UNIT	
55	VXL3160	MAIN SHAFT UNIT	
B1	VHD1044	SCREW	
B2	XYN3+C4FJ	SCREW	
B3	XTN26+7JFJ	SCREW	
B4	XTN26+7JFJ	SCREW	
B5	XTN26+7JFJ	SCREW	
B6	XTV26+5FFJ	SCREW	
B7	XTV26+5FFJ	SCREW	
B8	XTV26+8FFJ	SCREW	
B9	XTV26+8FFJ	SCREW	
B10	VHD1066	SCREW	
B11	VHD1066	SCREW	
B12	VHD1185	SCREW	
B13	VHD1095	SCREW	
B14	VHD1117	SCREW	
B15	VHD1117	SCREW	
W1	VMX2208	WASHER	
W2	VMX2699	WASHER	
W3	VMX3196	WASHER	
W4	VMX3196	WASHER	

11.2. CASING PARTS SECTION / PARTS LIST

Note:

***All parts except parts mentioned [PAVC-SPC] in the Remarks column are supplied from PAVCSG.**

Parts mentioned [PAVC-SPC] are supplied from PAVC-SPC .

Note: 1. *Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE
Components identified with the mark △ have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref. No.	Part No.	Part Name & Description	Remarks
101	VGM1991	TOP PANEL	⚠
102	VMP7569-1	CHASSIS FRAME	⚠
103	VMP7574-1	BACK PANEL	
104	RYPV0030	FRONT PANEL (1) U	
105	RKFV0009	DOOR	
106	RKFV0008	BLINDER PANEL	
107	VMB2521	BLINDER SPRING	
108	VGB0554	SUPER DRIVE BADGE	
112	VMX3115	MECHA SPACER (F)	
113	VMX3272	MECHA SPACER (R)	
114	VMZ3355	BARRIER	⚠
115	VKA0364	FOOT	
116	VKA0364	FOOT	
117	VMX3277	SPACER	
118	VWJ050W120BB	FLAT CARD CABLE(5P)	P3301-P4951
119	VWJ1652	FLAT CARD CABLE(6P)	P4002-AC HEAD
120	VWJ070W200MM	FLAT CARD CABLE(7P)	P2501-CYLINDER
B101	XTW3+10TFC	TOP PANEL SCREW	
B102	XTW3+10TFC	TOP PANEL SCREW	
B103	XSB3+5FC	SCREW RF	
B104	XTB3+10JFC	SCREW (BACK)	
B105	XTB3+10JFC	SCREW (BACK)	
B106	XTB3+10JFC	SCREW (BACK)	
B107	XTB3+10JFC	SCREW (BACK)	
B108	XTN26+8JR	SCREW (FRONT PCB)	
B109	XTN26+8JR	SCREW (FRONT PCB)	
B110	XTW3+6TR	SCREW MAIN	
B111	XTW3+6TR	SCREW MAIN	
B112	XTW3+6TR	SCREW MAIN	
B113	XTW3+6TR	SCREW MAIN	
B117	VHD1452-1	SCREW(L)	
B114	VHD1453-1	SCREW(S)	
B116	VHD1453-1	SCREW(S)	
B118	XTV26+5FR	SCREW	

11.3. PACKING PARTS SECTION / PARTS LIST

Note:
***All parts except parts mentioned [PAVC-SPC] in the Remarks column are supplied from PAVCSG.**
Parts mentioned [PAVC-SPC] are supplied from PAVC-SPC .

Note: 1. *Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE
Components identified with the mark △ have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref. No.	Part No.	Part Name & Description	Remarks
201	RQTV0015	O/I BOOK (ENGLISH/ARABIC)	⚠ NV-HV61GC-S/GCS-S/GCSX-S
201	RQTV0007	O/I BOOK (ENGLISH)	⚠ NV-HV61GL-S
202	N2QAJB000086	REMOTE CONTROL	
203	ETR0051-5200	BATTERY COVER	
204	VJA1124	RF CABLE	
205	RJA0019-2X	AC CORD	⚠ NV-HV61GC-S/GCS-S/GCSX-S
205	RJA0053-3X	AC CORD	⚠ NV-HV61GC-S
205	K2CJ2DA00008	AC CORD	⚠ NV-HV61GL-S
206	K2KA6BA00003	PHONO CABLE	
208	VPN5970	CUSHION (L)	
209	VPN5971	CUSHION (R)	
210	RPGV0033	PACKING CASE	NV-HV61GC-S
210	RPGV0034	PACKING CASE	NV-HV61GCS-S/GCSX-S
210	RPGV0031	PACKING CASE	NV-HV61GL-S
	----------	SERVICE FIXTURES & TOOLS	
	VFJ8125H3F	VHS ALIGNMENT TAPE (PAL)	PAVC-SPC
	VFK0335	RETAINING RING REMOVER (3MM/4MM)	PAVC-SPC
	VFK0329	POST ADJUSTMENT SCREWDRIVER	PAVC-SPC
	VFK0326	HEX WRENCH SET	PAVC-SPC
	VFK0132	BACK TENSION METER	PAVC-SPC
	VFK27	HEAD CLEANING STICK	PAVC-SPC
	VFK0330	FINE ADJUSTMENT GEAR DRIVER	PAVC-SPC
	VFK1301	SILICONE GREASE	PAVC-SPC
	VFK1298A	FLOIL GREASE	PAVC-SPC

11.4. ELECTRICAL PARTS LIST

Note:
***All parts except parts mentioned [PAVC-SPC] in the Remarks column are supplied from PAVCSG.**
Parts mentioned [PAVC-SPC] are supplied from PAVC-SPC .

Note2:
"*1", "*2", "*3", "*4" in the Remarks column shows the models as follows.
"*1" : NV-HV61GC-S
"*2" : NV-HV61GCS-S
"*3" : NV-HV61GCSX-S
"*4" : NV-HV61GL-S

Note: 1. Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE: Components identified with the mark ⚠ have the special characteristics for safety. When replacing any of these components, use only the same type.
3. Unless otherwise specified,
All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICROFARADS (uf), P=uuF.
4. The P.C. Board units marked width "■" show below the main assembled parts.
5. The marking (RTL) indicaters the retention time is limited for this item.
After the discontinuation of this assembly in production, it will no longer be available.

Ref. No.	Part No.	Part Name & Description	Remarks
■	VEP06F53C	MAIN C.B.A.	(RTL) *1,*2,*3
■	VEP06F53E	MAIN C.B.A.	(RTL) *4
■	VEP04857A	FRONT C.B.A.	(RTL)
■	VEP06F53C	MAIN C.B.A.	(RTL) *1,*2,3
■	VEP06F53E	MAIN C.B.A.	(RTL) *4
B7751	VSB0205	BATTERY	
C1121	ECQU2A683MVA	POLYESTER CAPACITOR	⚠
C1122	F1BAF331A013	CERAMIC CAP	⚠
C1123	F1BAF1020020	CERAMIC CAPACITOR	⚠
C1142	EEUEB2G330E	E-CAP	*4
C1143	ECEC2GG680FZ	E-CAP	*1,*2,*3
C1151	ECQB1H473JF3	AXIAL CAPACITOR	
C1152	ECQB1H103JF3	POLYESTER CAPACITOR	
C1153	ECQB1H104JF3	POPLYPROPYLENE CAPACITOR	
C1154	ECQB1H223JF3	POLYPROPYLEN CAPACITOR	⚠
C1155	ECKN3A271KBP	CAPACITOR	
C1200	ECQB1H104JF3	POPLYPROPYLENE CAPACITOR	
C1210	ECKW3A332KBS	CERAMIC CAPACITOR	
C1230	EEUFG1H560B	E-CAP	
C1250	F2A1C6810023	E-CAP	
C1251	ECA1CM470B	ELECTROLYTIC CAPACITOR	
C1260	F2A1A1020056	E-CAP	
C1261	ECA1AM101B	ELECTROLYTIC CAPACITOR	
C1270	EEUFG1H560B	E-CAP	
C1280	EEUFG1A101B	E-CAP	
C1341	ECJ1VF1H103Z	CHIP CAPACITOR	
C1351	ECJ1VF1H103Z	CHIP CAPACITOR	
C1352	ECEA1AKA470B	ELECTROLYTIC CAPACITOR	
C1353	ECJ1VF1C104Z	CHIP CAPACITOR	*1,*2,*3
C2001	ECJ1VC1H330J	CHIP CAPACITOR	
C2003	ECJ1VF1A105Z	CHIP CAPACITOR	
C2051	ECEA0JKN220B	E-CAP	
C2053	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C2054	ECJ1VB1H392K	CHIP CAPACITOR	
C2055	ECJ1VF1C104Z	CHIP CAPACITOR	
C2099	ECJ1VC1H681J	CHIP CAPACITOR	
C2501	ECJ1VF1C104Z	CHIP CAPACITOR	
C2502	ECEA0JKA221B	ELECTROLYTIC CAPACITOR	
C2504	ECJ1VB1E223K	CAPACITOR	
C2505	ECJ1VB1E223K	CAPACITOR	
C2506	ECJ1VB1A224K	CHIP CAPACITOR	
C2507	ECJ1VB1H102K	CHIP CAPACITOR	
C2508	ECJ1VB1H182K	CHIP CAPACITOR	
C2509	ECEA1CKA220B	ELECTROLYTIC CAPACITOR	
C2510	F1H1C104A065	CHIP CAPACITOR	
C2511	F1H1C104A065	CHIP CAPACITOR	
C2512	F1H1C104A065	CHIP CAPACITOR	
C2513	ECJ1VF1A105Z	CHIP CAPACITOR	
C2515	ECJ1VF1H103Z	CHIP CAPACITOR	
C2518	ECJ1VB1H102K	CHIP CAPACITOR	
C2519	ECJ1VF1H104Z	CHIP CAPACITOR	
C2520	F1H1C104A065	CHIP CAPACITOR	
C2551	ECJ1VB1C563K	CHIP CAPACITOR	
C2552	ECJ1VB1C563K	CHIP CAPACITOR	
C2561	ECJ1VB1C563K	CHIP CAPACITOR	
C2562	ECJ1VB1C563K	CHIP CAPACITOR	
C2571	ECA1EM221B	E-CAP	
C3002	F1H1C104A065	CHIP CAPACITOR	
C3003	F1H1C104A065	CHIP CAPACITOR	
C3004	ECJ1VC1H151J	CHIP CAPACITOR	
C3005	F1H1C104A065	CHIP CAPACITOR	
C3006	ECJ1VB0J105K	CHIP CAPACITOR	
C3007	ECJ1VC1H390J	CHIP CAP	
C3008	ECEA1HKA4R7B	ELECTROLYTIC CAPACITOR	
C3009	ECJ1VB0J105K	CHIP CAPACITOR	
C3010	ECJ1VB0J105K	CHIP CAPACITOR	
C3011	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C3012	ECJ1VB1A224K	CHIP CAPACITOR	
C3013	F1H1C104A065	CHIP CAPACITOR	
C3015	F1H1C104A065	CHIP CAPACITOR	
C3016	ECJ1VB0J105K	CHIP CAPACITOR	
C3017	F1H1C104A065	CHIP CAPACITOR	
C3019	F1H1C104A065	CHIP CAPACITOR	
C3020	ECEA1EKA3R3B	E-CAP	
C3021	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C3022	ECJ1VB1H103K	CHIP CAPACITOR	
C3025	ECJ1VC1H331J	CHIP CAPACITOR	
C3027	ECJ1VB1H103K	CHIP CAPACITOR	
C3029	ECJ1VF1H103Z	CHIP CAPACITOR	
C3030	ECJ1VF1H103Z	CHIP CAPACITOR	
C3031	ECJ1VB1A224K	CHIP CAPACITOR	
C3032	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C3033	ECJ1VB0J105K	CHIP CAPACITOR	
C3034	ECJ1VC1H020C	CHIP CAPACITOR	
C3035	F1H1C104A065	CHIP CAPACITOR	
C3036	ECEA1EKA3R3B	E-CAP	
C3037	ECEA1HKA2R2B	ELECTROLYTIC CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C3038	ECJ1VB1H472K	CHIP CAPACITOR	
C3039	ECJ1VB1C333K	CHIP CAPACITOR	
C3040	ECJ1VB1A474K	CHIP CAPACITOR	
C3041	ECJ1VB1E223K	CAPACITOR	
C3042	ECEA1EKA4R7B	ELECTROLYTIC CAPACITOR	
C3046	ECEA1HKA010B	ELECTROLYTIC CAPACITOR	*1,*2,*3
C3047	ECJ1VF1C104Z	CHIP CAPACITOR	
C3049	F1H1C104A065	CHIP CAPACITOR	
C3050	ECEA1CKA470B	ELECTROLYTIC CAPACITOR	
C3051	ECA0JM471B	E-CAP	
C3052	F1H1C104A065	CHIP CAPACITOR	
C3053	F1H1C104A065	CHIP CAPACITOR	
C3059	ECJ1VB1H102K	CHIP CAPACITOR	
C3062	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C3065	F1H1C104A065	CHIP CAPACITOR	
C3066	F1H1C104A065	CHIP CAPACITOR	
C4010	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4018	ECEA0JKA220B	ELECTROLYTIC CAPACITOR	
C4041	ECEA1EKA4R7B	ELECTROLYTIC CAPACITOR	
C4042	ECEA1EKA4R7B	ELECTROLYTIC CAPACITOR	
C4061	ECJ1VB1H682K	CHIP CAPACITOR	
C4062	ECEA0JKA220B	ELECTROLYTIC CAPACITOR	
C4063	ECEA1HKA3R3B	ELECTROLYTIC CAPACITOR	
C4064	ECJ1VB1H182K	CHIP CAPACITOR	
C4065	ECJ1VB1H182K	CHIP CAPACITOR	
C4066	ECJ1VB1H222K	CHIP CAPACITOR	
C4075	ECJ1VC1H471J	CHIP CAPACITOR	
C4076	ECJ1VC1H471J	CHIP CAPACITOR	
C4081	ECQB1H223JF3	POLYPROPYLEN CAPACITOR	⚠
C4082	ECJ1VB1H471K	CHIP CAPACITOR	
C4083	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C4084	ECJ2VB1H182K	CHIP CAPACITOR	
C4085	ECJ1VB1E223K	CAPACITOR	
C4502	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4503	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4504	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4505	ECEA0JKA330B	E-CAP	
C4506	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4507	ECEA0JKA220B	ELECTROLYTIC CAPACITOR	
C4508	ECJ1VB1C333K	CHIP CAPACITOR	
C4509	ECJ1VF1H103Z	CHIP CAPACITOR	
C4510	ECJ1VF1H103Z	CHIP CAPACITOR	
C4511	F1H1C104A065	CHIP CAPACITOR	
C4512	ECJ1VB1A224K	CHIP CAPACITOR	
C4513	ECEA0JKA220B	ELECTROLYTIC CAPACITOR	
C4514	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4515	ECEA0JKA330B	E-CAP	
C4516	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4517	ECEA0JKA101B	ELECTROLYTIC CAPACITOR	
C4519	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4520	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4521	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4522	ECEA0JKA220B	ELECTROLYTIC CAPACITOR	
C4524	F1H1C104A065	CHIP CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C4525	ECEA1CKA470B	ELECTROLYTIC CAPACITOR	
C4527	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4530	ECJ1VC1H151J	CHIP CAPACITOR	
C4531	ECJ1VC1H151J	CHIP CAPACITOR	
C4534	ECQB1H153JF3	POLYPROPYLEN CAPACITOR	
C4535	ECQB1H153JF3	POLYPROPYLEN CAPACITOR	
C4536	ECJ1VF1H103Z	CHIP CAPACITOR	
C4537	ECJ2VC1H560G	CHIP CAPACITOR	
C4538	ECJ1VF1H103Z	CHIP CAPACITOR	
C4581	ECQB1H473JF3	AXIAL CAPACITOR	
C4582	ECQB1H473JF3	AXIAL CAPACITOR	
C4583	ECJ1VF1H103Z	CHIP CAPACITOR	
C4591	ECJ1VB1H102K	CHIP CAPACITOR	*1,*2,*3
C4601	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	
C4603	F1H1H152A219	CHIP CAPACITOR	
C5001	ECJ1VB1H103K	CHIP CAPACITOR	
C5002	ECJ1VB1H103K	CHIP CAPACITOR	
C5003	ECJ1VB1H103K	CHIP CAPACITOR	
C5004	ECJ1VB1H103K	CHIP CAPACITOR	
C5005	ECEA0JKA101B	ELECTROLYTIC CAPACITOR	
C5006	F1H1C104A065	CHIP CAPACITOR	
C6001	ECJ1VC1H220J	CHIP CAPACITOR	
C6002	ECJ1VC1H270J	CHIP CAPACITOR	
C6003	ECJ1VC1H180J	CHIP CAPACITOR	
C6004	ECJ1VC1H180J	CHIP CAPACITOR	
C6005	ECEA1HKA3R3B	ELECTROLYTIC CAPACITOR	
C6006	ECJ1VC1H101J	CHIP CAPACITOR	
C6007	ECJ1VC1H820J	CHIP CAP	
C6008	ECJ1VC1H471J	CHIP CAPACITOR	
C6009	ECJ1VF1H103Z	CHIP CAPACITOR	
C6010	ECJ1VF1H103Z	CHIP CAPACITOR	
C6011	ECJ1VF1H103Z	CHIP CAPACITOR	
C6013	ECJ1VF1A105Z	CHIP CAPACITOR	
C6014	ECJ1VB1H102K	CHIP CAPACITOR	
C6015	ECJ1VB1C333K	CHIP CAPACITOR	
C6016	ECJ1VB1H102K	CHIP CAPACITOR	
C6017	ECJ1VC1H471J	CHIP CAPACITOR	
C6020	ECJ1VB1H102K	CHIP CAPACITOR	
C6021	ECJ1VF1H103Z	CHIP CAPACITOR	
C6022	ECJ1VF1H103Z	CHIP CAPACITOR	
C6101	ECJ2VF1H104Z	CHIP CAPACITOR	
C6102	ECJ1VF1H103Z	CHIP CAPACITOR	
C6103	ECJ1VF1H103Z	CHIP CAPACITOR	
C6109	ECJ1VF1C104Z	CHIP CAPACITOR	
C6111	ECJ1VF1C104Z	CHIP CAPACITOR	
C6112	ECJ1VC1H330J	CHIP CAPACITOR	
C6113	ECJ1VC1H330J	CHIP CAPACITOR	
C6301	ECJ1VF1H103Z	CHIP CAPACITOR	
C6302	ECJ1VF1H103Z	CHIP CAPACITOR	
C6303	ECEA1AKA470B	ELECTROLYTIC CAPACITOR	
C6305	ECEA1EKA4R7B	ELECTROLYTIC CAPACITOR	
C6307	ECJ1VF1H103Z	CHIP CAPACITOR	
C6308	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C6309	ECEA1AKA470B	ELECTROLYTIC CAPACITOR	

Ref. No.	Part No.	Part Name & Description	Remarks
C6310	ECJ1VF1H103Z	CHIP CAPACITOR	
C7301	ECJ1VF1H103Z	CHIP CAPACITOR	*4
C7303	ECEA0JKA101B	ELECTROLYTIC CAPACITOR	*4
C7304	ECJ1VF1C104Z	CHIP CAPACITOR	*4
C7305	ECEA0JKA101B	ELECTROLYTIC CAPACITOR	*4
C7312	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	*4
C7313	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	*4
C7315	ECJ1VB1A474K	CHIP CAPACITOR	*4
C7316	ECJ1VB1H472K	CHIP CAPACITOR	*4
C7317	ECEA1CKA470B	ELECTROLYTIC CAPACITOR	*4
C7318	ECEA1CKA100B	ELECTROLYTIC CAPACITOR	*4
C7319	F1H1H152A219	CHIP CAPACITOR	*4
C7320	F1H1H152A219	CHIP CAPACITOR	*4
C7321	F1H1H152A219	CHIP CAPACITOR	*4
C7324	ECJ1VB1H103K	CHIP CAPACITOR	*4
C7325	ECJ1VB1H103K	CHIP CAPACITOR	*4
C7326	ECJ1VB1A474K	CHIP CAPACITOR	*4
C7327	ECJ1VB1E123K	CHIP CAPACITOR	*4
C7328	ECJ1VC1H681J	CHIP CAPACITOR	*4
C7329	ERJ3GEY0R00V	CHIP JUMPER	*4
C7330	ECJ1VC1H681J	CHIP CAPACITOR	*4
C7331	ECJ1VB1E123K	CHIP CAPACITOR	*4
C7333	ECJ1VB1A474K	CHIP CAPACITOR	*4
C7335	ECJ1VF1C104Z	CHIP CAPACITOR	*4
C7336	ECJ1VB1C104K	CHIP CAPACITOR	*4
C7337	ECJ1VB1A474K	CHIP CAPACITOR	*4
C7338	ECJ1VB1A474K	CHIP CAPACITOR	*4
C7501	ECEA1VKA100B	ELECTROLYTIC CAPACITOR	
C7502	ECJ1VC1H100D	CHIP CAPACITOR	
C7504	ECJ1VF1H103Z	CHIP CAPACITOR	
C7505	ECEA0JKA101B	ELECTROLYTIC CAPACITOR	
C7506	ECJ1VF1C104Z	CHIP CAPACITOR	
C7601	ECEA1HKA010B	ELECTROLYTIC CAPACITOR	
C7603	ECJ1VF1H103Z	CHIP CAPACITOR	
C7605	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C7608	ECJ1VF1H103Z	CHIP CAPACITOR	
C7610	ECJ1VB1H102K	CHIP CAPACITOR	
C7616	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C7617	ECJ1VF1H103Z	CHIP CAPACITOR	
C7618	ECEA0JKA470B	ELECTROLYTIC CAPACITOR	
C7619	ECJ1VF1H103Z	CHIP CAPACITOR	
C7621	ECJ1VB1H471K	CHIP CAPACITOR	
C7622	ECJ1VB1H471K	CHIP CAPACITOR	
C7623	ECJ1VF1H103Z	CHIP CAPACITOR	
C7709	ECJ1VB1H182K	CHIP CAPACITOR	
C7714	ECJ1VC1H101J	CHIP CAPACITOR	*1,*2,*3
C7752	ECEA0JKA331Q	ELECTROLYTIC CAPACITOR	
D1110	ERZVA5Z471	ZNR	⚠
D1140	B0KB00000013	BRIDGE DIODE	
D1151	B0HAGM000006	DIODE	
D1152	MA2C18500E	DIODE	⚠
D1155	MA2C165001VT	DIODE	
D1157	MAZ40270LF	ZENER DIODE	

Ref. No.	Part No.	Part Name & Description	Remarks
D1180	MAZ751000C	DIODE	
D1230	MA2C18500E	DIODE	⚠
D1250	B0JAMK000015	DIODE	
D1251	B0JAMK000015	DIODE	
D1260	B0JAGE000001	DIODE	
D1261	B0JAGE000001	DIODE	
D1270	MA2C18500E	DIODE	⚠
D1280	B0JAGE000001	DIODE	
D1351	MAZ4056NHF	DIODE	
D1501	B3EA00000072	PHOTO DIODE	
D2001	B0AAED000003	DIODE	
D2002	B0AAED000003	DIODE	
D2503	MAZ4160NMF	DIODE	
D4501	MA2C165001VT	DIODE	
D6302	B0JACE000001	DIODE	
D6303	MAZ4130NLF	DIODE	
D6305	MAZ4062NLF	DIODE	
D6306	MAZ4056NHF	DIODE	
D6307	MAZ4056NHF	DIODE	
D7501	MAZ4240NMF	DIODE	
D7602	MAZ4300NMF	DIODE	
D7751	B0JACE000001	DIODE	
D7752	MA2C700A0F	DIODE	
D7753	B0AAED000003	DIODE	
D7754	B0JACE000001	DIODE	
DP7501	A2BA00000215	FIP DISPLAY	
F1101	K5D162BK0005	FUSE	⚠
IC1200	C0DAAMA00002	IC	
IC1511	B3NAA0000049	REEL SENSOR	
IC1512	B3NAA0000049	REEL SENSOR	
IC2501	C1AB00001767	CYL DRIVE IC	
IC2502	C0DBZJG00005	REGULATOR IC	
IC3001	C1AB00001836	AV CHIP IC	
IC4501	AN3656NFBPBV	HI FI IC	
IC6001	C2CBHF000297	U-CON IC	*1,*2,*3
IC6001	C2CBHF000301	U-CON IC	*4
IC6201	C0EBH0000172	RESET IC	
IC6301	C0DBCHD00002	REGULATOR IC	
IC7301	C0ZBZ0000580	IC	*4
IC7501	C0HBB0000023	FIP DRIVE IC	
IR7501	PNA4618M09VT	IR RECEIVER	
J1	VEE0X50	EARTH WIRE	
JK3201	K2HA612B0045	I/O JACK	
K3010	ERJ3GEY0R00V	CHIP JUMPER	
K4591	ERJ3GEY0R00V	CHIP JUMPER	*1,*2,*3
K4592	ERJ3GEY0R00V	CHIP JUMPER	*1,*2,*3

Ref. No.	Part No.	Part Name & Description	Remarks
K6006	ECJ1VF1H103Z	CHIP CAPACITOR	
K6012	ERJ3GEY0R00V	CHIP JUMPER	*4
K7302	ERJ3GEY0R00V	CHIP JUMPER	*4
K7304	ERJ3GEY0R00V	CHIP JUMPER	*4
K7305	ERJ3GEY0R00V	CHIP JUMPER	*4
K7306	ERJ3GEY0R00V	CHIP JUMPER	*4
K7616	ERJ3GEYJ221V	CHIP RESISTOR	
L1120	ELF15N005A	LINE FILTER	⚠
L1121	ELF15N005A	LINE FILTER	⚠
L1250	G0A220G00018	COIL	
L1260	G0A220G00018	COIL	
L3001	G0C271JA0019	CHOKE COIL	
L3004	G1C120J00001	CHIP COIL	
L3301	G0C150JA0019	COIL	
L3302	G0C680JA0019	COIL	
L3303	G0C330JA0019	COIL	
L3304	G0C680JA0019	COIL	
L4081	G0C471KA0004	COIL	
L4501	G0C1R2J00004	COIL	
L4502	G0C391JA0019	COIL	
L5001	G0C560JA0019	COIL	
L6001	G0C5R6JA0019	COIL	
L6004	G0C1R5JA0019	COIL	
L7601	G0C100JA0030	INDUCTOR	
L7605	G0C100JA0030	INDUCTOR	
L7608	G0C270JA0019	COIL	
L7610	G0C100JA0030	INDUCTOR	
L7702	G0C100JA0019	COIL	*1,*2,*3
LB1120	J0JKB0000028	BEED CORE	
LB1121	J0JKB0000028	BEED CORE	
LB1210	J0JKB0000028	BEED CORE	
LB1214	J0JKB0000028	BEED CORE	
LB4073	ERJ6GEY0R00V	CHIP JUMPER	
LB4074	ERJ6GEY0R00V	CHIP JUMPER	
LB4077	ERJ3GEY0R00V	CHIP JUMPER	
LB4078	ERJ3GEY0R00V	CHIP JUMPER	
LB4079	ERJ6GEY0R00V	CHIP JUMPER	
LB7601	J0JBC0000015	CHIP INDUCTOR	
LR1150	J1ZZA0000001	RESONANT SNUBBER	
P1101	K2AA2H000007	AC INLET	⚠
P1531	K1KA02A00375	LOADING MOTOR WIRE CONNECTOR	
P2501	K1MN07A00020	CONNECTOR	
P2571	K1KA08A00290	CONNECTOR	
P3301	K1MN05A00037	CONNECTOR	
P4001	K1MZ02A00003	CONNECTOR	
P4002	VJS3538A006W	6 PIN CONNECTOR	
P5001	K1MN09A00029	9 PIN CONNECTOR	
Q1150	B1DEDR000003	TRANSISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
Q1151	2SC3311ASA	TRANSISTOR	
Q1152	2SC3311ASA	TRANSISTOR	
Q1153	B1DEEQ000001	TRANSISTOR	
Q1200	B3PBA0000078	PHOTO COUPLER	⚠
Q1341	B1AAGD000006	TRANSISTOR	
Q1342	2SD0601A0L	CHIP TRANSISTOR	
Q1351	B1AAGD000006	TRANSISTOR	
Q1352	B1AAGD000006	TRANSISTOR	
Q1354	B1AAGD000006	TRANSISTOR	
Q1501	PNA2604M01VT	PHOTO TRANSISTOR	
Q1502	PNA2604M01VT	PHOTO TRANSISTOR	
Q3001	2SD0601A0L	CHIP TRANSISTOR	
Q3003	2SD0601A0L	CHIP TRANSISTOR	
Q3202	2SB0709A0L	TRANSISTOR	
Q4081	2SD0602ARL	CHIP TRANSISTOR	
Q4082	2SD114900L	CHIP TRANSISTOR	
Q4083	2SD0601A0L	CHIP TRANSISTOR	
Q4084	2SB0710A0L	CHIP TRANSISTOR SI 220MH 0.4W	
Q6305	2SD0601A0L	CHIP TRANSISTOR	
Q6306	2SD0601A0L	CHIP TRANSISTOR	
Q6307	B1AAGD000006	TRANSISTOR	
Q7701	2SB0709A0L	TRANSISTOR	*1,*2,*3
QR1342	UNR211200L	DIGITAL TRANSISTOR	
QR3001	UNR221300L	DIGITAL TRANSISTOR	
QR4061	UNR221100L	DIGITAL TRANSISTOR	
QR4081	UNR211100L	CHIP TRANSISTOR	
QR4082	UNR221300L	DIGITAL TRANSISTOR	
QR4501	UNR221500L	DIGITAL TRANSISTOR	
QR4504	UNR211500L	CHIP TRANSISTOR	
QR4505	UNR221500L	DIGITAL TRANSISTOR	
QR4506	UNR221500L	DIGITAL TRANSISTOR	
QR4651	UNR221500L	DIGITAL TRANSISTOR	
R1150	ERDS2TJ105T	CARBON RESISTOR	
R1153	ERG2SJ331E	METAL OXIDE RESISTOR	
R1154	ERDS2TJ105T	CARBON RESISTOR	
R1155	ERDS2TJ104T	CARBON RESISTOR	
R1156	ERDS2TJ330T	CARBON RESISTOR	
R1157	ERDS2TJ162T	CARBON RESISTOR	
R1158	ERDS2TJ331T	CARBON RESISTOR	
R1159	ERDS2TJ3R3T	CARBON RESISTOR	
R1160	ERX1SJR47E	METAL CARBON RESISTOR	
R1161	ERDS2TJ101T	CARBON RESISTOR	
R1162	ERDS2TJ102T	CARBON RESISTOR	
R1163	ERDS2TJ101T	CARBON RESISTOR	
R1200	ERJ6GEYG103V	CHIP RESISTOR	
R1202	ERJ6GEYG222V	CHIP RESISTOR	
R1203	ERJ6GEYG243V	CHIP RESISTOR	
R1204	ERJ6GEYJ123V	CHIP RESISTOR	
R1205	ERJ6GEYJ222V	CHIP RESISTOR	
R1206	ERJ6GEYJ271V	CHIP RESISTOR	
R1342	ERJ3GEYJ104V	CHIP RESISTOR	
R1351	ERDS2TJ471T	CARBON RESISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
R1501	ERJ3GEYJ273V	CHIP RESISTOR	
R1502	ERJ3GEYJ273V	CHIP RESISTOR	
R1503	ERDS2TJ151T	CARBON RESISTOR	
R1511	ERJ3GEYJ273V	CHIP RESISTOR	
R1512	ERJ3GEYJ273V	CHIP RESISTOR	
R1513	ERJ6GEYJ121V	CHIP RESISTOR	
R2001	ERJ3GEYJ392V	CHIP RESISTOR	
R2002	ERJ3GEYJ105V	CHIP RESISTOR	
R2099	ERJ3GEYJ682V	CHIP RESISTOR	
R2501	ERJ6GEYJ1R2V	CHIP RESISTOR	
R2503	ERJ6GEYJ1R5V	CHIP RESISTOR	
R2514	ERJ3GEYJ221V	CHIP RESISTOR	
R2515	ERJ3GEYJ221V	CHIP RESISTOR	
R2516	ERJ3GEYJ221V	CHIP RESISTOR	
R2519	ERJ6GEYJ822V	CHIP RESISTOR	
R2520	ERJ3GEYJ183V	CHIP RESISTOR	
R2521	ERJ3GEYJ102V	CHIP RESISTOR	
R2522	ERJ3GEYJ101V	CHIP RESISTOR	
R2523	ERJ3GEYJ101V	CHIP RESISTOR	
R2551	ERJ3GEYJ103V	CHIP RESISTOR	
R2552	ERJ3GEYJ103V	CHIP RESISTOR	
R2561	ERJ3GEYJ102V	CHIP RESISTOR	
R2562	ERJ3GEYJ473V	CHIP RESISTOR	
R2563	ERJ3GEYJ102V	CHIP RESISTOR	
R3001	ERJ3GEYJ622V	CHIP RESISTOR	
R3002	ERJ3GEYJ822V	CHIP RESISTOR	
R3003	ERJ3GEYJ152V	CHIP RESISTOR	
R3004	ERJ3GEYJ682V	CHIP RESISTOR	
R3005	ERJ3GEYJ472V	CHIP RESISTOR	
R3011	ERJ3GEYJ332V	CHIP RESISTOR	
R3012	ERJ3GEYJ102V	CHIP RESISTOR	
R3013	ERJ3GEYJ273V	CHIP RESISTOR	
R3018	ERJ3GEYJ153V	CHIP RESISTOR	
R3020	ERJ3GEYJ152V	CHIP RESISTOR	
R3021	ERJ3GEYJ331V	CHIP RESISTOR	
R3022	ERDS2TJ681T	CARBON RESISTOR	
R3023	ERJ3GEYJ271V	CHIP RESISTOR	
R3024	ERJ3GEYJ102V	CHIP RESISTOR	
R3025	ERJ3GEYJ332V	CHIP RESISTOR	
R3026	ERJ3GEYJ332V	CHIP RESISTOR	
R3032	ERJ3GEYJ685V	CHIP RESISTOR	
R3033	ERJ3GEYJ335V	CHIP RESISTOR	
R3037	ERJ3GEYJ750V	CHIP RESISTOR	
R3038	ERJ3GEYJ222V	CHIP RESISTOR	*4
R3039	ERJ3GEYJ750V	CHIP RESISTOR	
R3041	ERJ3GEY0R00V	CHIP JUMPER	
R3042	ERJ3GEYJ473V	CHIP RESISTOR	
R3212	ERJ3GEYJ750V	CHIP RESISTOR	
R4011	ERJ3GEYJ472V	CHIP RESISTOR	
R4012	ERJ3GEYJ153V	CHIP RESISTOR	
R4015	ERJ3GEYJ203V	CHIP RESISTOR	
R4016	ERJ3GEYJ473V	CHIP RESISTOR	
R4017	ERJ3GEYJ563V	CHIP RESISTOR	
R4018	ERJ3GEYJ103V	CHIP RESISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
R4061	ERJ3GEYJ474V	CHIP RESISTOR	
R4062	ERJ3GEYJ153V	CHIP RESISTOR	
R4063	ERJ3GEYJ331V	CHIP RESISTOR	
R4071	ERJ3GEYJ153V	CHIP RESISTOR	
R4073	ERJ3GEY0R00V	CHIP JUMPER	
R4074	ERJ3GEY0R00V	CHIP JUMPER	
R4075	ERJ3GEYJ471V	CHIP RESISTOR	
R4076	ERJ3GEYJ471V	CHIP RESISTOR	
R4081	ERJ3GEYJ123V	CHIP RESISTOR	
R4082	ERJ3GEYJ332V	CHIP RESISTOR	
R4084	ERJ3GEYJ102V	CHIP RESISTOR	
R4085	ERJ3GEYJ102V	CHIP RESISTOR	
R4086	ERJ3GEYJ222V	CHIP RESISTOR	
R4087	ERJ3GEYJ222V	CHIP RESISTOR	
R4088	ERJ6GEY0R00V	CHIP JUMPER	
R4500	ERJ3GEYJ102V	CHIP RESISTOR	
R4502	ERJ3GEYJ513V	CHIP RESISTOR	
R4503	ERJ3GEYJ513V	CHIP RESISTOR	
R4505	ERJ3GEYJ392V	CHIP RESISTOR	
R4506	ERJ3GEYJ392V	CHIP RESISTOR	
R4509	ERJ3GEYJ513V	CHIP RESISTOR	
R4510	ERJ3GEYJ392V	CHIP RESISTOR	
R4511	ERJ3GEYJ513V	CHIP RESISTOR	
R4512	ERJ3GEYJ392V	CHIP RESISTOR	
R4513	ERJ3GEYJ222V	CHIP RESISTOR	
R4525	ERJ3GEYJ102V	CHIP RESISTOR	
R4527	ERJ3GEYJ681V	CHIP RESISTOR	
R4530	ERJ3GEYJ472V	CHIP RESISTOR	
R4532	ERJ3GEYJ472V	CHIP RESISTOR	
R4534	ERJ3GEYJ124V	CHIP RESISTOR	
R4538	ERJ3GEYJ333V	CHIP RESISTOR	
R4539	ERJ3GEYJ331V	CHIP RESISTOR	
R4540	ERJ3GEYJ331V	CHIP RESISTOR	
R4541	ERJ3GEYJ471V	CHIP RESISTOR	
R4542	ERJ3GEYJ471V	CHIP RESISTOR	
R4581	ERJ3GEYJ333V	CHIP RESISTOR	
R4582	ERJ3GEYJ333V	CHIP RESISTOR	
R4583	ERJ3GEYJ563V	CHIP RESISTOR	
R4584	ERJ3GEYJ563V	CHIP RESISTOR	
R4585	ERJ3GEYJ511V	CHIP RESISTOR	
R4586	ERJ3GEYJ511V	CHIP RESISTOR	
R4601	ERJ3GEYJ393V	CHIP RESISTOR	
R4602	ERJ3GEYJ682V	CHIP RESISTOR	
R4651	ERJ3GEYJ681V	CHIP RESISTOR	
R6001	ERJ3GEYJ102V	CHIP RESISTOR	
R6002	ERJ3GEYJ102V	CHIP RESISTOR	
R6003	ERJ3GEY0R00V	CHIP JUMPER	
R6006	ERJ3GEYJ183V	CHIP RESISTOR	
R6007	ERJ3GEYJ103V	CHIP RESISTOR	
R6008	ERJ3GEYJ181V	CHIP RESISTOR	
R6009	ERJ3GEYJ103V	CHIP RESISTOR	
R6010	ERJ3GEYJ103V	CHIP RESISTOR	
R6012	ERJ3GEYJ561V	CHIP RESISTOR	
R6013	ERJ3GEYJ105V	CHIP RESISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
R6017	ERJ3GEYJ222V	CHIP RESISTOR	
R6018	ERJ3GEYJ103V	CHIP RESISTOR	
R6021	ERJ3GEYJ103V	CHIP RESISTOR	
R6022	ERJ3GEYJ102V	CHIP RESISTOR	
R6023	ERJ3GEYJ332V	CHIP RESISTOR	
R6028	ERJ3GEYG103V	CHIP RESISTOR	
R6029	ERJ3GEYG103V	CHIP RESISTOR	
R6031	ERJ3GEYJ471V	CHIP RESISTOR	
R6032	ERJ3GEYJ471V	CHIP RESISTOR	
R6040	ERJ3GEYJ103V	CHIP RESISTOR	
R6102	ERJ3GEYJ222V	CHIP RESISTOR	
R6104	ERJ3GEYJ221V	CHIP RESISTOR	
R6105	ERJ3GEYJ221V	CHIP RESISTOR	
R6106	ERJ3GEYJ221V	CHIP RESISTOR	
R6107	ERJ3GEYJ221V	CHIP RESISTOR	
R6201	ERJ3GEYJ332V	CHIP RESISTOR	
R6302	ERDS2TJ682T	CARBON RESISTOR	
R6307	ERJ6GEYJ222V	CHIP RESISTOR	
R6309	ERDS2TJ821T	CARBON RESISTOR	
R6310	ERJ6GEYJ182V	CHIP RESISTOR	
R6400	ERJ3GEYJ101V	CHIP RESISTOR	
R6401	ERJ3GEYJ101V	CHIP RESISTOR	
R6406	ERJ3GEYJ101V	CHIP RESISTOR	
R7301	ERJ3GEY0R00V	CHIP JUMPER	*4
R7305	ERJ3GEYJ101V	CHIP RESISTOR	*4
R7306	ERJ3GEYJ392V	CHIP RESISTOR	*4
R7307	ERJ3GEYJ472V	CHIP RESISTOR	*4
R7308	ERJ3GEYJ752V	CHIP RESISTOR	*4
R7310	ERJ3GEYJ221V	CHIP RESISTOR	*4
R7312	ERJ3GEYG682V	CHIP RESISTOR	*4
R7313	ERJ3GEYG682V	CHIP RESISTOR	*4
R7314	ERJ3GEYG682V	CHIP RESISTOR	*4
R7315	ERJ3GEYG432V	CHIP RESISTOR	*4
R7316	ERJ3GEYG332V	CHIP RESISTOR	*4
R7317	ERJ3GEYG432V	CHIP RESISTOR	*4
R7318	ERJ3GEYG332V	CHIP RESISTOR	*4
R7319	ERJ3GEYG432V	CHIP RESISTOR	*4
R7320	ERJ3GEYG332V	CHIP RESISTOR	*4
R7321	ERJ3GEYJ562V	CHIP RESISTOR	*4
R7323	ERJ3GEYJ912V	CHIP RESISTOR	*4
R7324	ERJ3GEYJ101V	CHIP RESISTOR	*4
R7325	ERJ3GEYJ101V	CHIP RESISTOR	*4
R7502	ERJ3GEYJ912V	CHIP RESISTOR	
R7503	ERJ3GEYJ362V	CHIP RESISTOR	
R7505	ERJ3GEYJ123V	CHIP RESISTOR	
R7506	ERJ3GEYJ123V	CHIP RESISTOR	
R7509	ERJ3GEYJ392V	CHIP RESISTOR	
R7513	ERJ3GEYJ182V	CHIP RESISTOR	
R7514	ERJ3GEYJ182V	CHIP RESISTOR	
R7516	ERJ3GEYJ154V	CHIP RESISTOR	
R7517	ERJ3GEYJ392V	CHIP RESISTOR	
R7518	ERJ3GEYJ512V	CHIP RESISTOR	
R7519	ERJ3GEYJ362V	CHIP RESISTOR	
R7520	ERJ3GEYJ912V	CHIP RESISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
R7521	ERJ3GEYJ154V	CHIP RESISTOR	
R7522	ERJ3GEYJ203V	CHIP RESISTOR	
R7523	ERJ3GEYJ512V	CHIP RESISTOR	
R7525	ERDS2TJ391T	CARBON RESISTOR	
R7526	ERDS2TJ101T	CARBON RESISTOR	
R7527	ERJ3GEYJ203V	CHIP RESISTOR	
R7528	ERDS2TJ101T	CARBON RESISTOR	
R7529	ERDS2TJ103T	CARBON RESISTOR	
R7601	ERDS2TJ331T	CARBON RESISTOR	
R7606	J0JCC0000124	CHIP COIL	
R7607	J0JCC0000124	CHIP COIL	
R7611	ERDS2TJ331T	CARBON RESISTOR	
R7706	ERJ3GEYJ101V	CHIP RESISTOR	*1,*2,*3
R7707	ERJ3GEYJ102V	CHIP RESISTOR	*1,*2,*3
R7751	ERJ3GEYJ102V	CHIP RESISTOR	
S1531	K0C111A00006	TAB SWITCH	
S1532	K0ZZ00000598	MODE SWITCH	
S7501	EVQ21409K	SWITCH	
S7502	EVQ21409K	SWITCH	
S7505	EVQ21409K	SWITCH	
S7506	EVQ21409K	SWITCH	
S7507	EVQ21409K	SWITCH	
S7510	EVQ11L09B	TACK SWITCH	
S7511	EVQ11L09B	TACK SWITCH	
S7512	EVQ21409K	SWITCH	
S7513	EVQ21409K	SWITCH	
S7515	EVQ21409K	SWITCH	
S7518	EVQ21409K	SWITCH	
S7519	EVQ21409K	SWITCH	
T1150	G4D2A0000113	SW TRANS	⚠
T4081	EQQ7QF024Q	IF TRANSFORMER	
TU7601	ENG57818G1	TUNER	*1,*2,*3
TU7601	ENG57820G1	TUNER	*4
W502	ERJ6GEY0R00V	CHIP JUMPER	
W503	ERJ3GEY0R00V	CHIP JUMPER	
W504	ERJ6GEY0R00V	CHIP JUMPER	
W505	ERJ6GEY0R00V	CHIP JUMPER	
W506	ERJ6GEY0R00V	CHIP JUMPER	
W507	ERJ3GEY0R00V	CHIP JUMPER	
W508	ERJ6GEY0R00V	CHIP JUMPER	
W509	ERJ6GEY0R00V	CHIP JUMPER	
W510	ERJ6GEY0R00V	CHIP JUMPER	
W511	ERJ6GEY0R00V	CHIP JUMPER	
W512	ERJ3GEY0R00V	CHIP JUMPER	
W513	ERJ6GEY0R00V	CHIP JUMPER	
W514	ERJ6GEY0R00V	CHIP JUMPER	
W515	ERJ3GEY0R00V	CHIP JUMPER	
W516	ERJ6GEY0R00V	CHIP JUMPER	
W517	ERJ3GEY0R00V	CHIP JUMPER	
W518	ERJ3GEY0R00V	CHIP JUMPER	

Ref. No.	Part No.	Part Name & Description	Remarks
W519	ERJ3GEY0R00V	CHIP JUMPER	
W520	ERJ3GEY0R00V	CHIP JUMPER	
W521	ERJ3GEY0R00V	CHIP JUMPER	
W522	ERJ3GEY0R00V	CHIP JUMPER	
W523	ERJ6GEY0R00V	CHIP JUMPER	
W524	ERJ3GEY0R00V	CHIP JUMPER	
W526	ERJ3GEY0R00V	CHIP JUMPER	
W527	ERJ6GEY0R00V	CHIP JUMPER	
W528	ERJ3GEY0R00V	CHIP JUMPER	
W529	ERJ6GEY0R00V	CHIP JUMPER	
W530	ERJ3GEY0R00V	CHIP JUMPER	
W531	ERJ3GEY0R00V	CHIP JUMPER	
W532	ERJ3GEY0R00V	CHIP JUMPER	
W533	ERJ6GEY0R00V	CHIP JUMPER	*4
W534	ERJ3GEY0R00V	CHIP JUMPER	
W536	ERJ3GEY0R00V	CHIP JUMPER	
W537	ERJ6GEY0R00V	CHIP JUMPER	
W538	ERJ3GEY0R00V	CHIP JUMPER	
W539	ERJ6GEY0R00V	CHIP JUMPER	
W540	ERJ6GEY0R00V	CHIP JUMPER	
W541	ERJ3GEY0R00V	CHIP JUMPER	
W542	ERJ3GEY0R00V	CHIP JUMPER	
W543	ERJ3GEY0R00V	CHIP JUMPER	
W544	ERJ6GEY0R00V	CHIP JUMPER	
W548	ERJ3GEY0R00V	CHIP JUMPER	
W549	ERJ3GEY0R00V	CHIP JUMPER	
W550	ERJ3GEY0R00V	CHIP JUMPER	
W551	ERJ3GEY0R00V	CHIP JUMPER	
W552	ERJ3GEY0R00V	CHIP JUMPER	
W553	ERJ3GEY0R00V	CHIP JUMPER	
W554	ERJ6GEY0R00V	CHIP JUMPER	
W555	ERJ6GEY0R00V	CHIP JUMPER	
W556	ERJ3GEY0R00V	CHIP JUMPER	
W557	ERJ3GEY0R00V	CHIP JUMPER	
W559	ERJ3GEY0R00V	CHIP JUMPER	
W560	ERJ3GEY0R00V	CHIP JUMPER	
W561	ERJ3GEY0R00V	CHIP JUMPER	
W562	ERJ3GEY0R00V	CHIP JUMPER	
W563	ERJ6GEY0R00V	CHIP JUMPER	
W564	ERJ6GEY0R00V	CHIP JUMPER	
W565	ERJ3GEY0R00V	CHIP JUMPER	
W566	ERJ3GEY0R00V	CHIP JUMPER	
W567	ERJ6GEY0R00V	CHIP JUMPER	
W568	ERJ3GEY0R00V	CHIP JUMPER	
W569	ERJ3GEY0R00V	CHIP JUMPER	
W570	ERJ3GEY0R00V	CHIP JUMPER	
W571	ERJ6GEY0R00V	CHIP JUMPER	
W572	ERJ3GEY0R00V	CHIP JUMPER	
W573	ERJ6GEY0R00V	CHIP JUMPER	
X3001	H0D357400068	CRYSTAL OSCILLATOR	
X3002	H0D443400040	CRYSTAL OSCILLATOR	
X6001	H0A120500002	CRYSTAL OSCILLATOR	
X6002	H0A327200064	CRYSTAL OSCILLATOR	

Ref. No.	Part No.	Part Name & Description	Remarks
X7301	H0H400400006	CRYSTAL OSCILLATOR	*4
ZA1101	EYF52BC	FUSE HOLDER	
ZA1102	EYF52BC	FUSE HOLDER	
		MISCELLANEOUS	
	VMD4258	PHOTO TRANSISTOR HOLDER	
	VMD4258	PHOTO TRANSISTOR HOLDER	
	RJFV0002	FIP HOLDER	
■	VEP04857A	FRONT C.B.A.	(RTL)
JK4951	K2HA307A0003	I/O JACK	
LB4901	ERJ3GEY0R00V	CHIP JUMPER	
LB4902	ERJ3GEY0R00V	CHIP JUMPER	
P4951	K1MN05B00039	CONNECTOR	
R4901	ERJ3GEY0R00V	CHIP JUMPER	
R4902	ERJ3GEY0R00V	CHIP JUMPER	

12. Schematic Diagram for printing with A4

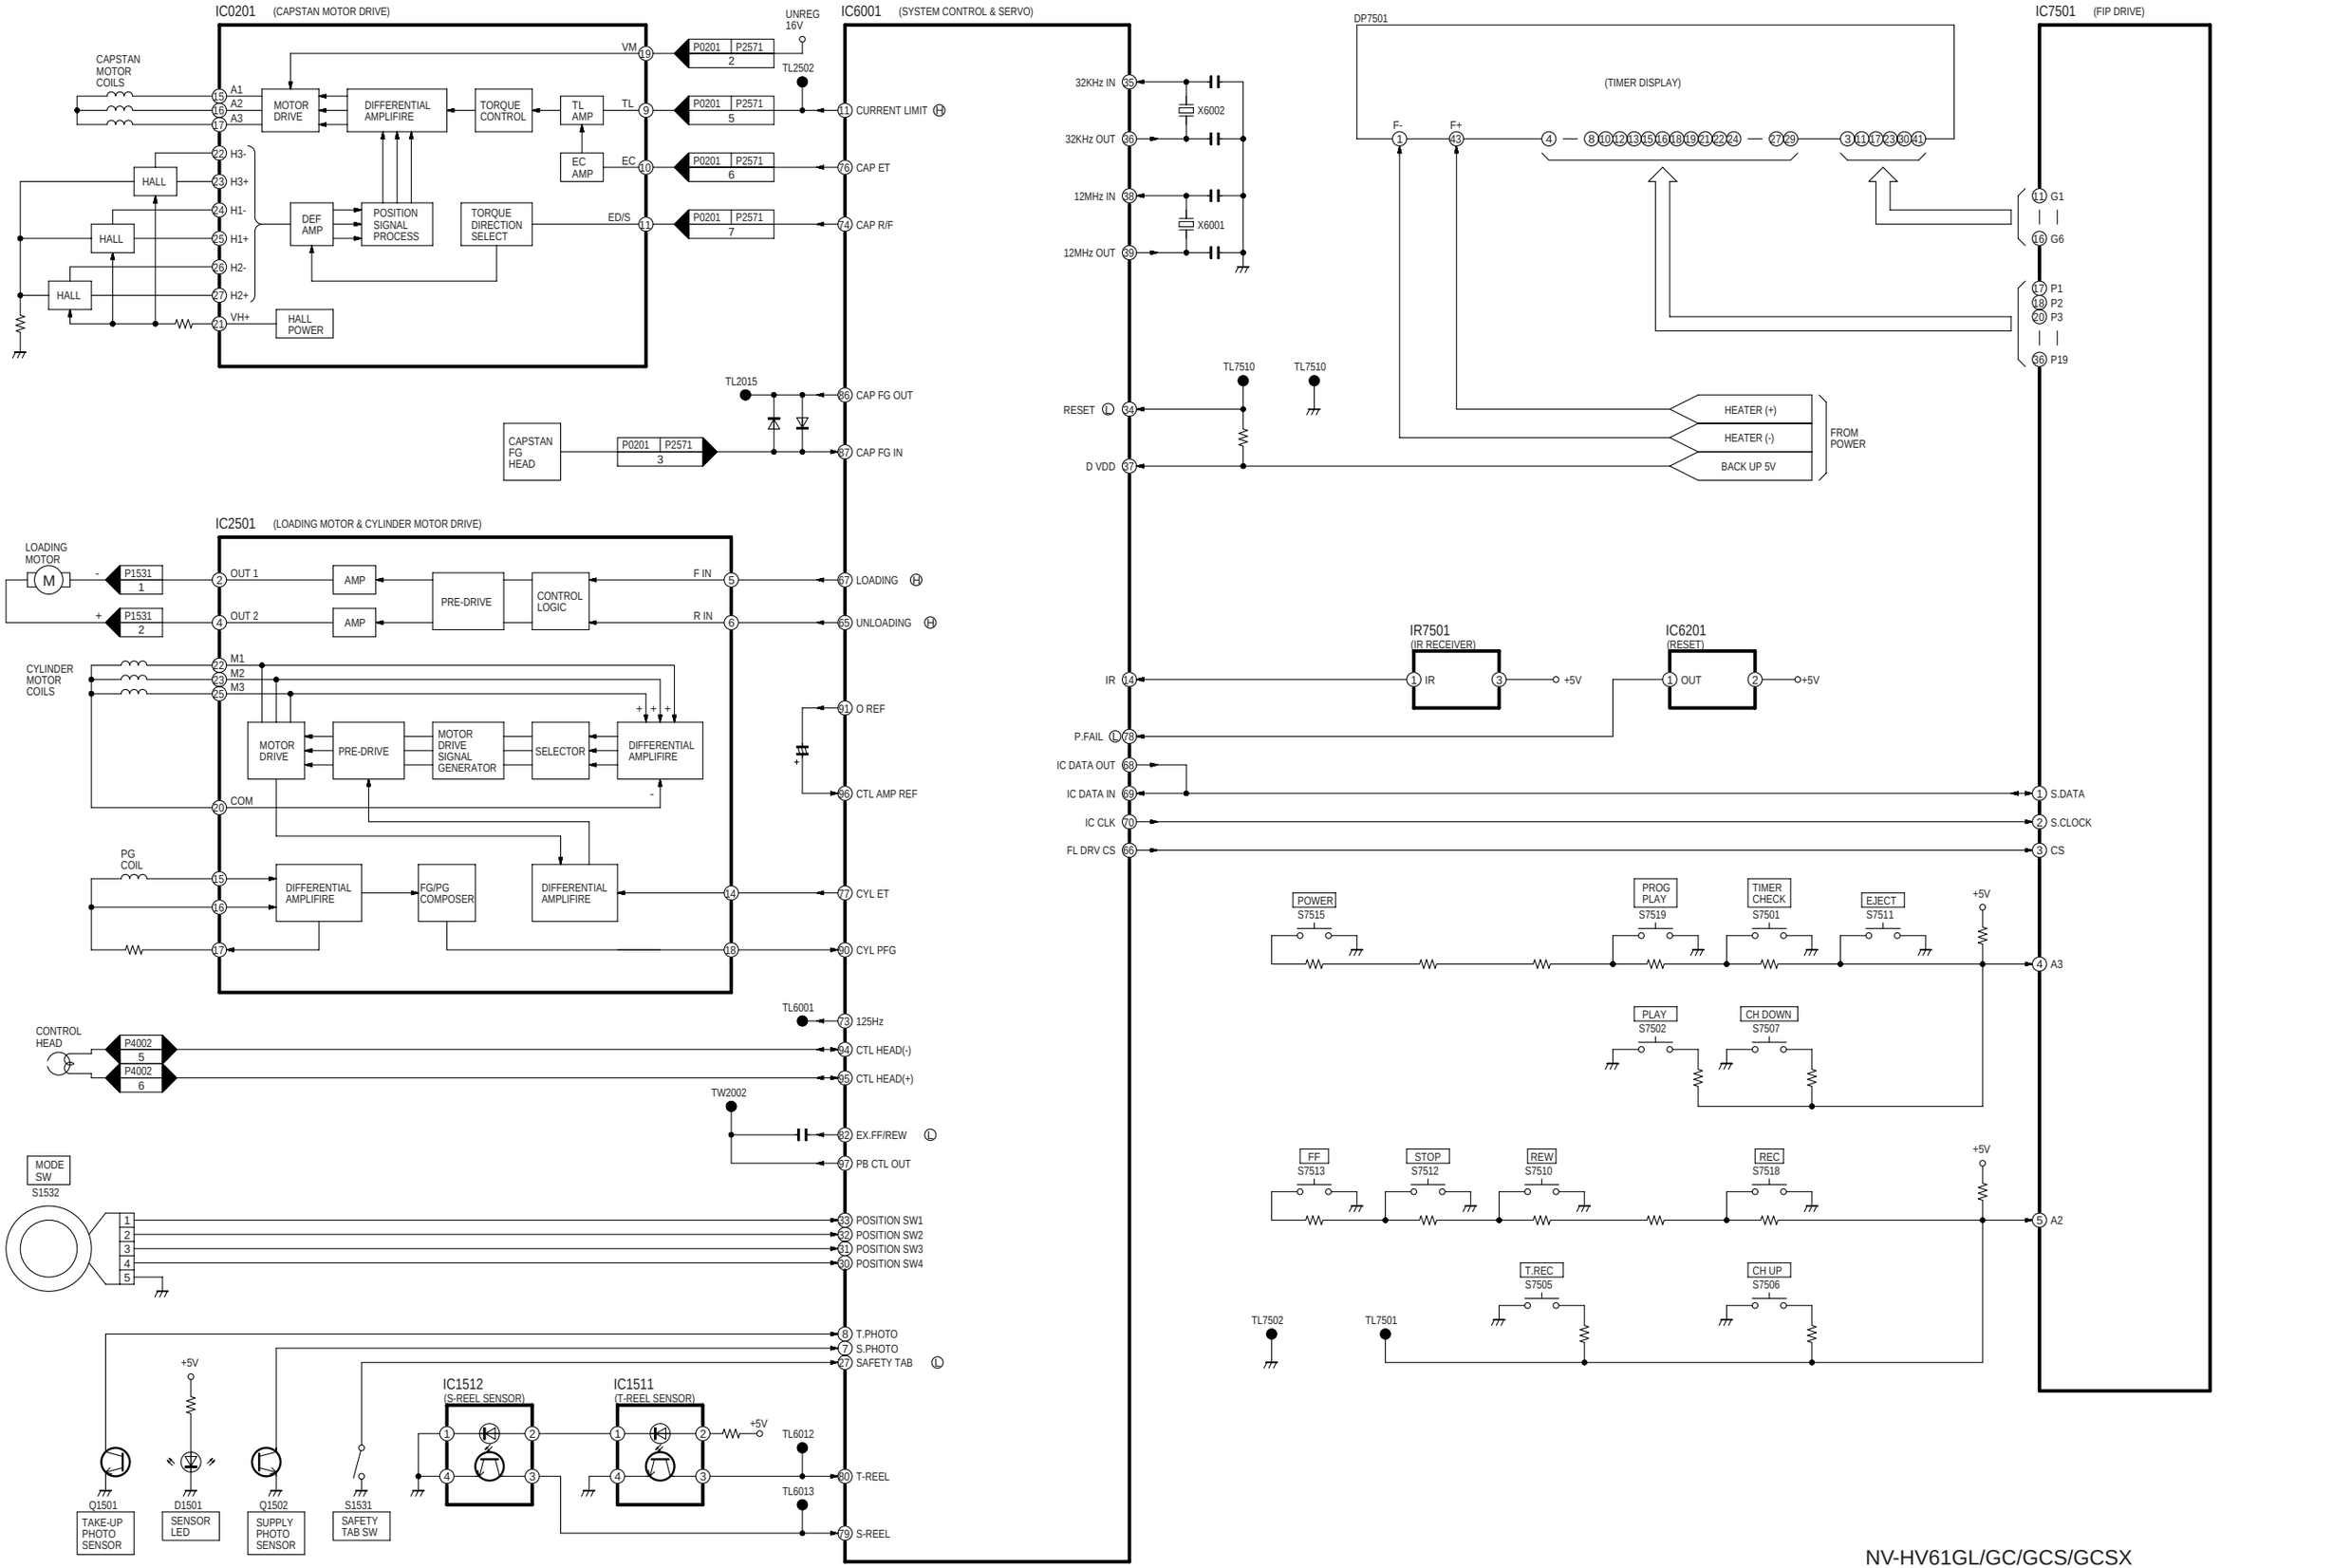

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO BLOCK DIAGRAM

VIDEO MAIN SIGNAL PATH IN REC MODE

VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

JK3201 (REAR JACK)

VIDEO OUT 8

VIDEO IN 4

TL3002

TL3003

Q3202 AMP

TO/FROM TUNER

RFC VIDEO OUT

TUNER VIDEO

JK4951 (FRONT JACK)

VIDEO IN 7

P4951 5 | P3301 1

IC3001 (AUDIO/VIDEO SIGNAL PROCESSOR)

15 ATT -6dB / ATT -4dB

17 ATT -10dB

19 ATT -10dB

VIDEO AGC

SVHS

SVHS

ATP

HPF

2MHz LPF

ACC

EXT

INT

(FIXED TO INT IN THES MODELS BY PIN53)

CLEAR SYNC

FEED BACK CLAMP

VIDEO ALC

23

26 GCL

Y-LPF

SECAM DELAY +SSEQ

SVHS+L SECAM

SVHS+L SECAM

NON-LINEAR DE-EMPHASIS

33

SQPB

SQPB

SQPB EQ

35 GCL

37 GCL

38 LPF

40

49 Y-CCD DELAY

51

36

R(SVHS)

R(SVHS)

DO/REC

DO

Y-NOISE REDUCTION

HP-NC TRAP-NC

PHASE COMPARATOR

DEH

NON-LINEAR EMPHASIS

ET LPF

APC SW

PB APC

KILLER

REC APC

ACC SW

ACC DET

CHROMA ACC DET

L3001, C3007

PEAKING FILTER

12

MAIN DE-EMPHASIS

REC FBC+ALC PB AGC+APL

9

MAIN EMPHASIS CARRIER OFFSET W.C/D.C

fo/DEVIATION ADJUSTMENT

FM MODULATION

REC FILTER

8

SUB LPF

DEMO

DLIM

G-EQ

X3001

X3002

67

69

71

X'TAL VCO OSCILLATOR

2FSC

65

53

C CLOCK DRIVER

TO C CCD

SQPB

SQPB

SQPB DL

P-EQ

FM AGC

629MHz TRAP

R

P

INT

EXT

EXTERNAL PB LUMINANCE SIGNAL INPUT LINE (NOT USED IN THESE MODELS)

TO SYSTEM CONTROL

S-VHS PB H

20

S-VHS DET

SQUELCH

NTSC/PAL CONVERTER

COLOUR KILLER

EXT

INT

6dB AMP

C-SQUELCH

V-AMP

29

Q3001 BUFFER

IC6001

32 OSD SIGNAL PROCESS 59 50

Q7701 BUFFER BPF L7702, C7714

(GC/GCS/GCSX)

MAIN CONV 2

MAIN CONV 1

C LPF2

VCA

57

C CCD

56

CCD LPF

46

45

PILOT ADD

PILOT ERASE

BPF

B.D

4.43PAL → MPAL CONV DELAY

C LPF1

B.E

MIX LEVEL ADJUST

L SECAM

L SECAM

CHROMA ACC

C-ACC:ON

THROUGH

COLOUR KILLER

fh HPF CTL TRAP

REC TRAP/ Hi-Fi TRAP

C-DELAY

NO FREC TRAP

FREC TRAP

L SECAM

L SECAM

LPF

REC MUTE

VCA

SP

SP

SP2

SP1

CH2

CH1

86

87

89

90

91

SP L

SP COM

SP R

LP/EP L

LP/EP COM

LP/EP R

P5001 6 / P5001 5 / P5001 4

P5001 3 / P5001 2 / P5001 1

TO/FROM DD CYLINDER VIDEO HEAD

NV-HV61GL/GC/GCS/GCSX

LUMINANCE & CHROMINANCE BLOCK DIAGRAM

AUDIO SIGNAL PATH

Ⓡ :TO POWER SUPPLY/RF SECTION
Ⓢ :TO SYSTEM CONTROL & SERVO SECTION
Ⓥ :TO LUMINANCE & CHROMINANCE/AUDIO SECTION
Ⓐ :TO Hi-Fi AUDIO SECTION

Ⓢ IIC CLOCK
Ⓢ IIC DATA
Ⓐ TUNER AUDIO (L)
Ⓐ TUNER AUDIO (R)
Ⓥ TUNER AUDIO (N)
Ⓡ AUDIO 5V
Ⓡ GND
Ⓡ SIF

R7310 220
L7302 0
R7315 4300
C7318 16V10
R7314 6800
R7316 3300
C7319 1500P
L7602 0
C7303 6V100
C7304 0.1
L7301 0
C7301 0.01
R7301 0

IC7301
TDA9873H

TL7303
C7317 16V47
TL7302
C7316 4700P
C7315 0.47

R7319 4300
C7313 16V10
R7312 6800
R7320 3300
C7321 1500P
R7317 4300
C7312 16V10
R7313 6800
R7318 3300
C7320 1500P
C7324 0.01
C7325 0.01
C7326 0.47

AF SWITCH
STEREO DECODER STEREO ADJUST
POWER SUPPLY
AF AMPLIFIER 1
AF AMPLIFIER 2
FM DEMODULATOR NARROW-BAND PLL SC1
FM DEMODULATOR NARROW-BAND PLL SC2
DIGITAL IDENTIFICATION PILOT NARROW-BAND PLL
IIC BUS TRANSCEVER

C7337 0.47
C7336 0.1
R7308 7500
R7325 100
R7324 100
L7303 0
C7305 6V100
C7335 0.1
C7333 0.47
C7338 0.47
R7306 3900
R7307 4700
R7305 100

R7321 5600
C7329 0
C7328 680P
C7327 0.012
X7301 H0H400400006
R7323 9100
C7330 680P
C7331 0.012

NOTE:THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL
DECODER SECTION SCHEMATIC DIAGRAM

Ⓡ :TO POWER SUPPLY/RF SECTION
Ⓢ :TO SYSTEM CONTROL & SERVO SECTION
Ⓥ :TO LUMINANCE & CHROMINANCE/AUDIO SECTION
Ⓓ :TO DECODER SECTION

AUDIO MAIN SIGNAL PATH IN REC MODE

AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

IC4501
AN3656NFBPBV

IIC BUS INTERFACE
SWITCH RCH
SWITCH LCH
OUTPUT SELECT SWITCH RCH
OUTPUT SELECT SWITCH LCH
NORMAL OUTPUT SWITCH
INPUT SWITCH RCH
INPUT SWITCH LCH
AGC & SWITCH
FM MODULATOR/ DEMODULATOR
LPF
BPF
AGC
PNR RCH
PNR LCH
PREAMP & SWITCH
DET
VCO FO
VCC1
GND(R)
REC AGC ADJ.
MUTE CONTROL
VREF
GND (L)
REC AGC DET
ENV.DET OUT
REC DC2
VCC
GND
VCC2

Ⓢ FM MUTE Ⓗ
Ⓢ IIC CLOCK
Ⓢ IIC DATA
Ⓥ FSC
Ⓡ SYSTEM CTL 5V
Ⓡ N.SW 5V
Ⓥ AUDIO OUT (R)
Ⓥ AUDIO OUT (L)
Ⓡ AUDIO 5V
Ⓡ AV 12V
Ⓡ GND
Ⓥ AUDIO IN (N)
Ⓥ AUDIO OUT (N)
Ⓡ RFC AUDIO OUT
Ⓡ TUNER AUDIO (N)
(GC/GCS/GCSX)
Ⓓ TUNER AUDIO (R)
Ⓥ AUDIO IN (R)
Ⓥ FRONT AUDIO (R)
Ⓓ TUNER AUDIO (L)
Ⓥ AUDIO IN (L)
Ⓥ FRONT AUDIO (L)
Ⓥ AUDIO HEAD COM
Ⓥ AUDIO HEAD R
Ⓥ AUDIO HEAD L
Ⓢ A.HEAD SW
Ⓢ ABS NORMAL
Ⓢ D.FM REC Ⓗ

QR4501 UN2215 (FM MUTE Ⓗ:ON)
QR4504 UN2115 (BUFFER)
QR4505 UN2215 (MUTE)
QR4506 UN2215 (MUTE)
QR4651 UN2215 (MUTE)

TL4501 TL4502
L4501 1.2µ
L4502 390µ
TW4502 TW4501
TL4507 TL4511
D4501 MA165

NOTE:THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS( )ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR.(SP MODE)

THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL.(SP MODE)

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
Hi-Fi AUDIO SECTION SCHEMATIC DIAGRAM

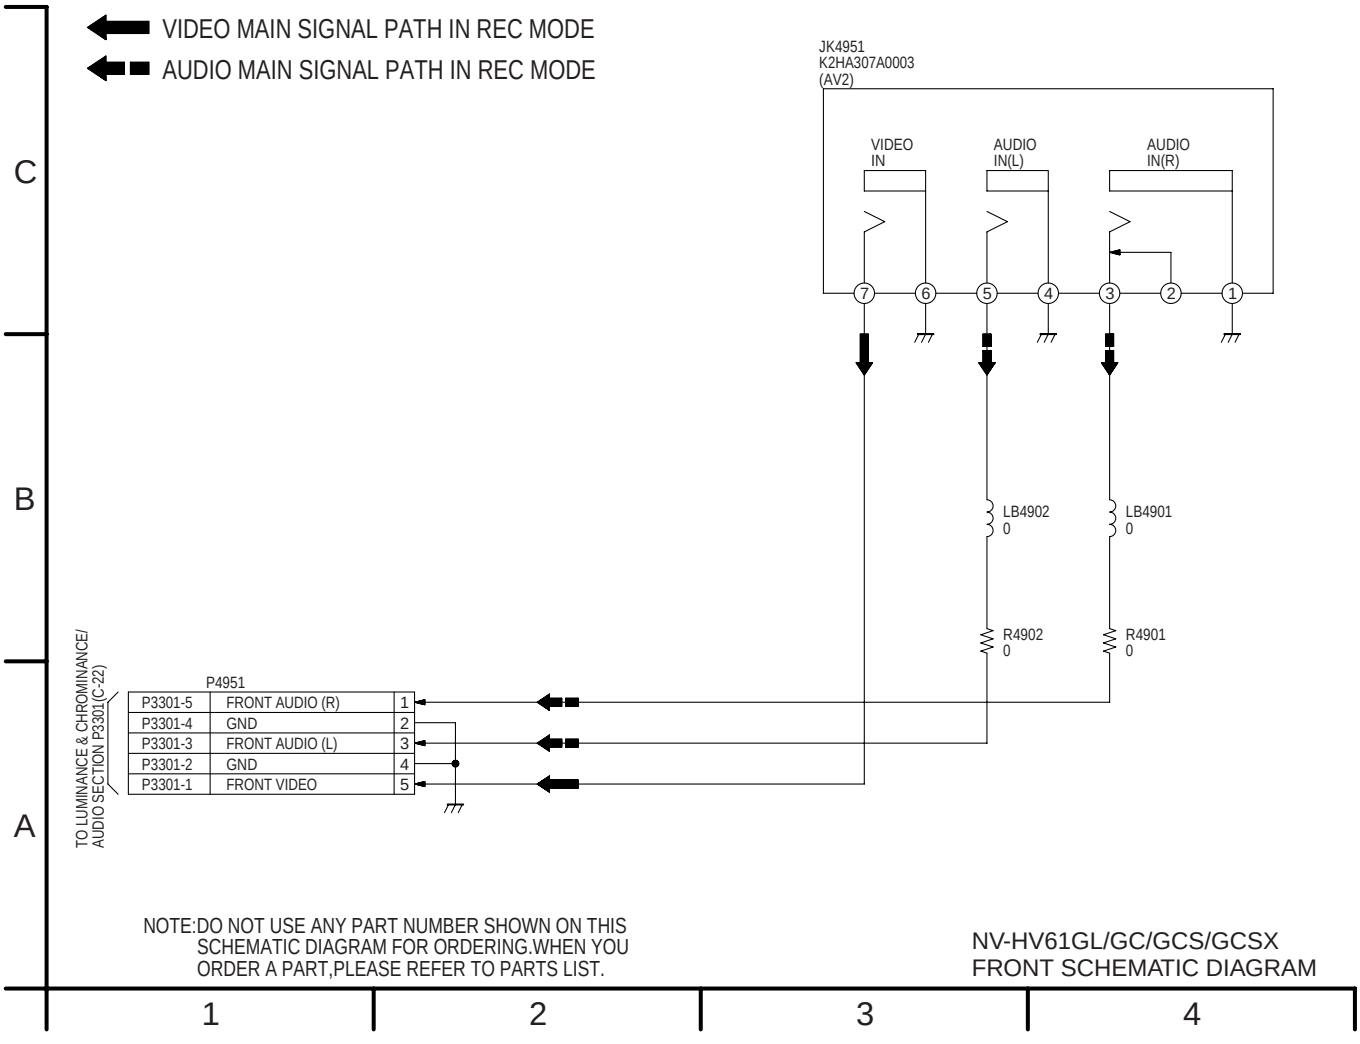

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
FRONT SCHEMATIC DIAGRAM

CAUTION

THE STRIPED FRAME INDICATES THE PRIMARY CIRCUIT TO DISTINGUISH THE PRIMARY FROM THE SECONDARY CIRCUIT.
PAY ATTENTION NOT TO RECEIVE AN ELECTRIC SHOCK DURING REPAIR AND SERVICE OF THE PRODUCTS.

HOT

Ⓡ :TO POWER SUPPLY/RF SECTION
Ⓢ :TO SYSTEM CONTROL & SERVO SECTION
Ⓣ :TO TIMER SECTION
Ⓥ :TO LUMINANCE & CHROMINANCE/AUDIO SECTION

P1101 K2AA2H000007 AC INLET
F1101 VSF0243C16
D1110 ERZVA5Z471
L1121 ELF15N005A
LB1121 J0JKB0000028
C1122 330P
L1120 ELF15N005A
C1121 0.068
D1140 DF80S-6622
LB1214 J0JKB0000028
C1143 400V68 (GC/GCS /GCSX)
C1142 400V33 (GL)

T1150 G4D2A0000113
P2
P1
B2
B1

TL1009 HEATER (-) Ⓣ
C1280 10V100
TL1008 HEATER (+) Ⓣ
D1280 11EQS04
TL1029 UNREG -29V Ⓣ
D1270 MA185
C1270 50V56
D1250 AK09V2
D1251 AK09V2
L1250 22µ
TL1015 UNREG 16V Ⓡ Ⓢ
C1250 16V680
C1251 16V47
R1200 10K
D1260 11EQS04
D1261 11EQS04
L1260 22µ
TL1006 UNREG 6V Ⓡ Ⓢ Ⓥ
C1260 10V1000
C1261 10V100
TL1038 UNREG 38V Ⓡ
D1230 MA185
C1230 50V56
D1180 MA7510
GND Ⓡ
TLGND1
TO BOTTOM PLATE

IC1200 µPC1093J

Q1153 2SK2876 (VOLTAGE CONTROL)
R1162 1K
R1163 100
C1155 270P
C1210 3300P
LB1210 J0JKB0000028
R1150 1M
R1154 1M
LR1150 VLP0392
LB1120 J0JKB0000028
C1123 F1BAF1020020

Q1150 2SK2645 (VOLTAGE CONTROL)
R1155 100K
C1154 0.022
R1153 330(2W)
D1151 AU01ZV2
R1161 100
Q1152 2SC3311A (VOLTAGE CONTROL)
R1160 0.47(1W)

Q1151 2SC3311A (VOLTAGE CONTROL)
R1157 1600
D1157 MA4027L
D1152 MA185
C1151 0.047
D1155 MA165
C1153 0.1
R1159 3.3
R1158 330
C1152 0.01

Q1200 PC123ZY2
R1156 33
R1205 2200
R1206 270
C1200 0.1
R1204 12K
R1203 24K
R1202 2200

NOTE1:WHEN MEASURE THE VOLTAGE OR WAVEFORM ON THE POWER TRANSFORMER CIRCUIT,SET THE GND TERMINAL OF MEASURING POINT AS FOLLOWS.
PRIMARY SIDE..... ⏚
SECONDARY SIDE... ⏚
NOTE2:THE DC VOLTAGE INDICATED IN PRIMARY SIDE IS SHOWN THE VOLTAGE WHEN INPUT AC IS 240V.

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NOTE:THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED WITH THE MARK ⚠ HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,USE ONLY THE SAME TYPE.

NV-HV61GL/GC/GCS/GCSX
POWER TRANSFORMER
SECTION SCHEMATIC DIAGRAM

Ⓟ :TO POWER TRANSFORMER SECTION
Ⓢ :TO SYSTEM CONTROL & SERVO SECTION
Ⓣ :TO TIMER SECTION
Ⓥ :TO LUMINANCE & CHROMINANCE/AUDIO SECTION
Ⓐ :TO Hi-Fi AUDIO SECTION
Ⓓ :TO DECODER SECTION

VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE
AUDIO MAIN SIGNAL PATH IN REC MODE
AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

TU7601
ENG57820G1:GL
ENG57818G1:GC/GCS/GCSX

QR1342
UN2112
(POWER ON:ON)

Q1342
2SD601A
(POWER ON Ⓗ :ON)

Q1352
2SC1959Y
(5V REG.)

Q1354
2SC1959Y
(5V REG.)

Q1341
2SC1959Y
(12V REG.)

Q1351
2SC1959Y
(5V REG.)

Q6305
2SD601A
(5V REG.)

Q6307
2SC1959Y
(5V REG.)

Q6306
2SD601A
(5V REG.)

TW1343
TL1002
TL1003
TW1004

L7610 10µ
L7605 10µ
L7608 27µ
L7601 10µ
L7603 0
LB7601 J0JBC0000015

R1342 100K
R6302 6800
R1351 470
R6309 820
R6310 1800
R6307 2200
R7606 J0JCC0000124
R7607 J0JCC0000124
R7611 330
R7601 330
K7616 220
R7751 1K

C1353 0.1 (GC/GCS/GCSX)
C1341 0.01
C1351 0.01
C6302 0.01
C6310 0.01
C6301 0.01
C7623 0.01
C7617 0.01
C7618 6V47
C7616 6V47
C7619 0.01
C7610 1000P
C7605 6V47
C7608 0.01
C7601 50V1
C7622 470P
C7621 470P
C7603 0.01
C6305 25V4.7
C1352 10V47
C6303 10V47
C6309 10V47
C7752 6V330

D6303 MA4130NL
D1351 MA4056NH
D6306 MA4056NH
D6307 MA4056NH
D6305 MA4062NL
D6302 RB441P
D7751 RB441P
D7753 1SS254
D7754 B0JACE000001
D7752 MA700A
D7602 MA4300NM
B7751 CR2354-1GUF

P UNREG 38V
S POWER ON Ⓗ
P UNREG 6V
S CYLINDER VG
P UNREG 16V
P GND
V A AV 12V
S GND
T GND
V GND
A GND
D GND

V TUNER VIDEO A1
S AFC S-CURVE A2
D SIF A3
V A TUNER AUDIO(N) A4
S SW1 A5
S SW2 A6
S IIC DATA A7
S IIC CLOCK A8
V RFC VIDEO OUT A9
A RFC AUDIO OUT A10

S T A SYSTEM CTL 5V
S BACK UP 5V
A N.SW 5V
S REG 5V
S V VIDEO 5V
V TUNER 5V
A D AUDIO 5V

1 N.SW 5V
2 AUDIO OUT
3 DATA
4 N.SW 5V
5 CLOCK
6 VIDEO OUT
7
8
9
10 GND
11 CLOCK
12 DATA
13
14 N.SW 5V
15
16 UNREG 30V
17 IF OUT
18 IF IN
19 SW1
20 SW2
21 A COMPO
22 SIF/QPSK
23 AFC S-CURVE
24 TUNER VIDEO
25 TUNER 5V

A10 A9 A8 A7 A6 A5 A4 A3 A2 A1

NOTE:THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
POWER SUPPLY/RF
SECTION SCHEMATIC DIAGRAM

G F E D C B A
1 2 3 4 5 6 7 8 9 10

Ⓟ :TO POWER TRANSFORMER SECTION
Ⓡ :TO POWER SUPPLY/RF SECTION
Ⓣ :TO TIMER SECTION
Ⓥ :TO LUMINANCE & CHROMINANCE/AUDIO SECTION
Ⓐ :TO Hi-Fi AUDIO SECTION
Ⓓ :TO DECODER SECTION

CAPSTAN SERVO SPEED LOOP
CAPSTAN SERVO PHASE LOOP
CYLINDER SERVO SPEED LOOP
CYLINDER SERVO PHASE LOOP

IC1511
RPI303
(T-REEL SENSOR)

IC1512
RPI303
(S-REEL SENSOR)

IC6201
PST3142NR
(RESET)

IR7501
PNA4618M09V
(IR RECEIVER)

Q1501
PNA2604M01
(T-PHOTO)

Q1502
PNA2604M01
(S-PHOTO)

Q7701
2SB709A
(AMP)

IC6001
C2CBHF000301:GL
C2CBHF000297:GC/GCS/GCSX

MODE SW
S1532
K0ZZ00000598

SAFETY TAB
S1531
K0C111A00006

SENSOR
D1501
B3EA00000072

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO SECTION SCHEMATIC DIAGRAM

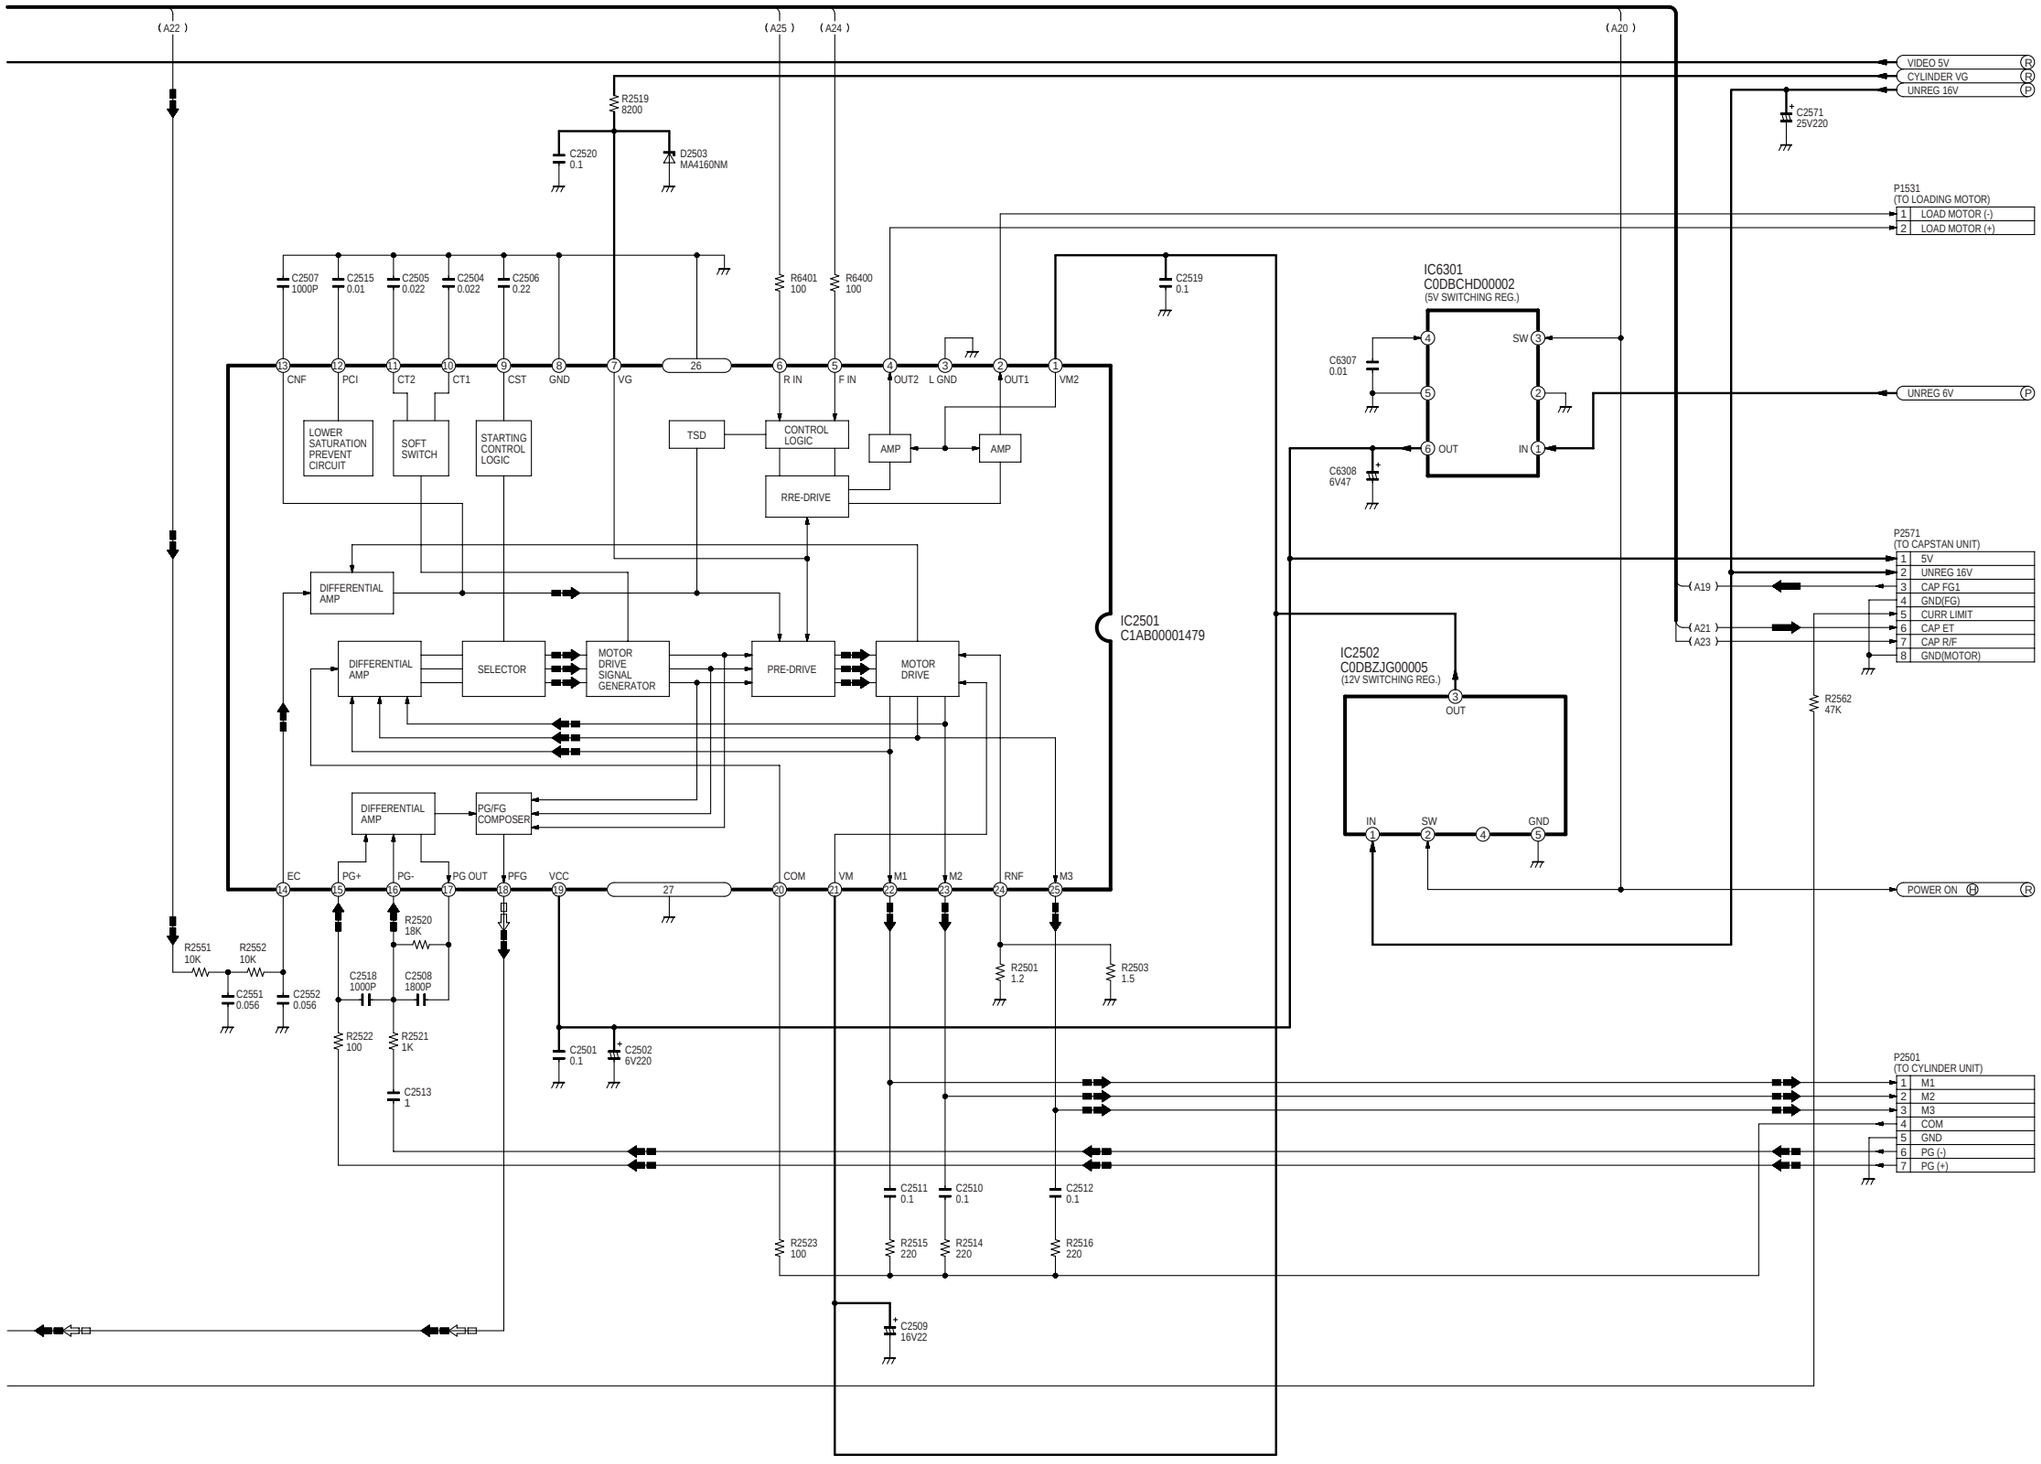

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO SECTION SCHEMATIC DIAGRAM

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO SECTION SCHEMATIC DIAGRAM

Ⓟ :TO POWER TRANSFORMER SECTION
Ⓡ :TO POWER SUPPLY/RF SECTION
Ⓢ :TO SYSTEM CONTROL & SERVO SECTION

DP7501
A2BA00000215

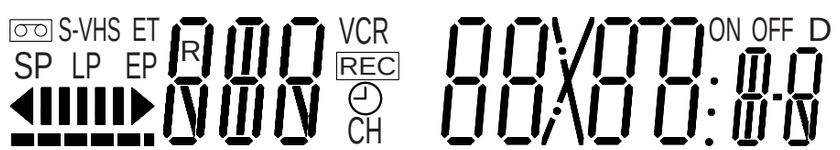

R7528 100
R7526 100
C7504 0.01
D7501 MA4240N
C7501 35V10
R7525 390
C7506 0.1
R7529 10K
C7502 10P
C7505 6V100
R7506 12K
R7505 12K
TL7501
TL7502

Ⓟ HEATER(+)
Ⓟ HEATER(-)
Ⓟ UNREG -29V
Ⓢ S.DATA
Ⓢ S.CLOCK
Ⓢ FIP CS
Ⓡ SYSTEM CTL 5V
Ⓡ GND

IC7501
M35502AFP

F- 6G P19 P18 P17 P16 P15 P14 5G P13 P12 P11 P10 4G P9 P8 P7 P6 3G P5 P4 P3 P2 P1 2G 1G F-

FLD0 FLD1 FLD2 FLD3 FLD4 FLD5 FLD6 FLD7 FLD8 FLD9 FLD10 FLD11 FLD12 FLD13 FLD14 FLD15 FLD16 VEE

S.DATA S.CLOCK CS AN3 AN2 AN1 AN0 VSS OSC VCC FLD24 FLD23 FLD22 FLD21 FLD20 FLD19 FLD18 FLD17

PLAY S7502 EVQ11G09K — R7521 150K
CH DOWN S7507 EVQ11G09K — R7513 1800
EJECT S7511 EVQ11L09B — R7509 3900
TIMER CHECK S7501 EVQ11G09K — R7503 3600
PROG PLAY S7519 EVQ11G09K — R7523 5100
R7520 9100
R7527 20K
POWER S7515 EVQ11G09K

T.REC S7505 EVQ11G09K — R7516 150K
CH UP S7506 EVQ11G09K — R7514 1800
REC S7518 EVQ11G09K — R7517 3900 — R7519 3600
REW S7510 EVQ11L09B — R7518 5100 — R7502 9100
STOP S7512 EVQ11G09K — R7522 20K
FF S7513 EVQ11G09K

NOTE:THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
TIMER SECTION SCHEMATIC DIAGRAM

Ⓟ :TO POWER TRANSFORMER SECTION
Ⓡ :TO POWER SUPPLY/RF SECTION
Ⓢ :TO SYSTEM CONTROL & SERVO SECTION
Ⓐ :TO Hi-Fi AUDIO SECTION
Ⓓ :TO DECODER SECTION

VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE
AUDIO MAIN SIGNAL PATH IN REC MODE
AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

JK3201
K2HA612B0045
(REAR JACK)
AUDIO IN (R) / AUDIO IN (L) / VIDEO IN / AUDIO OUT (R) / AUDIO OUT (L) / VIDEO OUT

Ⓡ AV 12V
L3304 68µ
C3049 0.1
C3050 16V47
R3022 680
R3023 270
Q3202 2SB709A (AMP)
Ⓢ VIDEO OUT
C3051 6V470
Ⓡ RFC VIDEO OUT
R3039 75
TL4506 TL4505 TL3003 TL4504 TL4503 TL3002
Ⓢ IIC CLOCK
Ⓢ IIC DATA
Ⓢ FM MUTE (H)
Ⓢ HEAD SW
Ⓢ MESECAM (H)
Ⓢ TRACKING ENV.
Ⓐ AUDIO OUT (L)
Ⓐ AUDIO OUT (R)
Ⓐ AUDIO IN (R)
Ⓐ AUDIO IN (L)
R4074 0
C4076 470P
R4073 0
C4075 470P
LB4079 0
LB4073 0
R4075 470
LB4074 0
R4076 470
R3212 75

P4002
(TO A/C HEAD)
AUDIO ERASE IN 1
GND 2
AUDIO HEAD (R) 3
AUDIO HEAD (W) 4
CTL HEAD (-) 5
CTL HEAD (+) 6
Ⓢ CTL HEAD (+)
Ⓢ CTL HEAD (-)

R4081 12K
C4082 470P
T4081 EQQ7QF024Q
C4081 0.022
R4082 3300
Q4081 2SD602A (OSC)
R4088 0
C4084 1800P
C4085 0.022

P4001
(TO FULL ERASE HEAD)
FULL ERASE IN 1
FULL ERASE OUT 2

Ⓟ UNREG 6V
Ⓡ GND

R4086 2200
R4087 2200
Q4084 2SB710A (ERASE HEAD DRIVE)
L4081 470µ
C4083 6V47
QR4082 UN2213 (BIAS (H):ON)

P5001
(TO CYLINDER UNIT)
LP/EP R 1
LP/EP COM 2
LP/EP L 3
SP R 4
SP COM 5
SP L 6
AUDIO HEAD L 7
AUDIO HEAD COM 8
AUDIO HEAD R 9
Ⓐ AUDIO HEAD R
Ⓐ AUDIO HEAD COM
Ⓐ AUDIO HEAD L

C4066 2200P
QR4061 UN2211 (PAL 9H (H):ON)

Ⓢ BIAS (H)
Ⓢ PAL 9H (H)
Ⓢ D.A.REC (H)
QR4081 UN2111 (D.A.REC (H):OFF)
R4084 1K
R4085 1K
Q4082 2SD1149 (PB:ON)
Q4083 2SD601A (PB:ON)
Ⓡ Ⓓ TUNER AUDIO (N)
Ⓐ AUDIO IN (N)
Ⓐ AUDIO OUT (N)
Ⓡ TUNER 5V
Ⓡ VIDEO 5V

L5001 56µ
C5006 0.1
C5005 6V100
C3066 0.1

(GC/GCS/GCSX)
(GL)
R3038 2200
C3047 0.1
R4061 470K
C4061 6800P
R4062 15K
R4063 330
C4062 6V22
C4063 50V3.3
R4071 15K
C4065 1800P
R4015 20K
C4042 25V4.7

TW3001
R3018 15K
R4018 10K
C3042 25V4.7
C3046 50V1
B-Y INVERT
COME
TANK
CR DET
MESECAM DET
COLOR LEVEL DETECTOR
DET
ENVDET
HPF
C5001 0.01
C5002 0.01
C5003 0.01
C5004 0.01
SP2
SP1
VCA
CH1
CH2
REC MUTE
EXT
INT
SP
C4041 25V4.7
SP ON
FH TRAP
PREAMP
REC ON
EP ON
REC EQ
DET
C4064 1800P
C4018 6V22
LB4077 0
LB4078 0
BAND GAP
IC3001
HA118425AF
C4010 16V10
C3062 16V10
R4017 56K
R4016 47K
R4011 4700
R4012 15K
C4011 0

(A3) (A4) (A5) (A6) (A7)
(B1) (B2) (B3) (B4) (B5) (B6) (B7) (B8) (B9) (B10)

NOTE:THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS( )ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR.(SP MODE)
THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL.(SP MODE)

NV-HV61GL/GC/GCS/GCSX
LUMINANCE & CHROMINANCE/AUDIO SECTION SCHEMATIC DIAGRAM

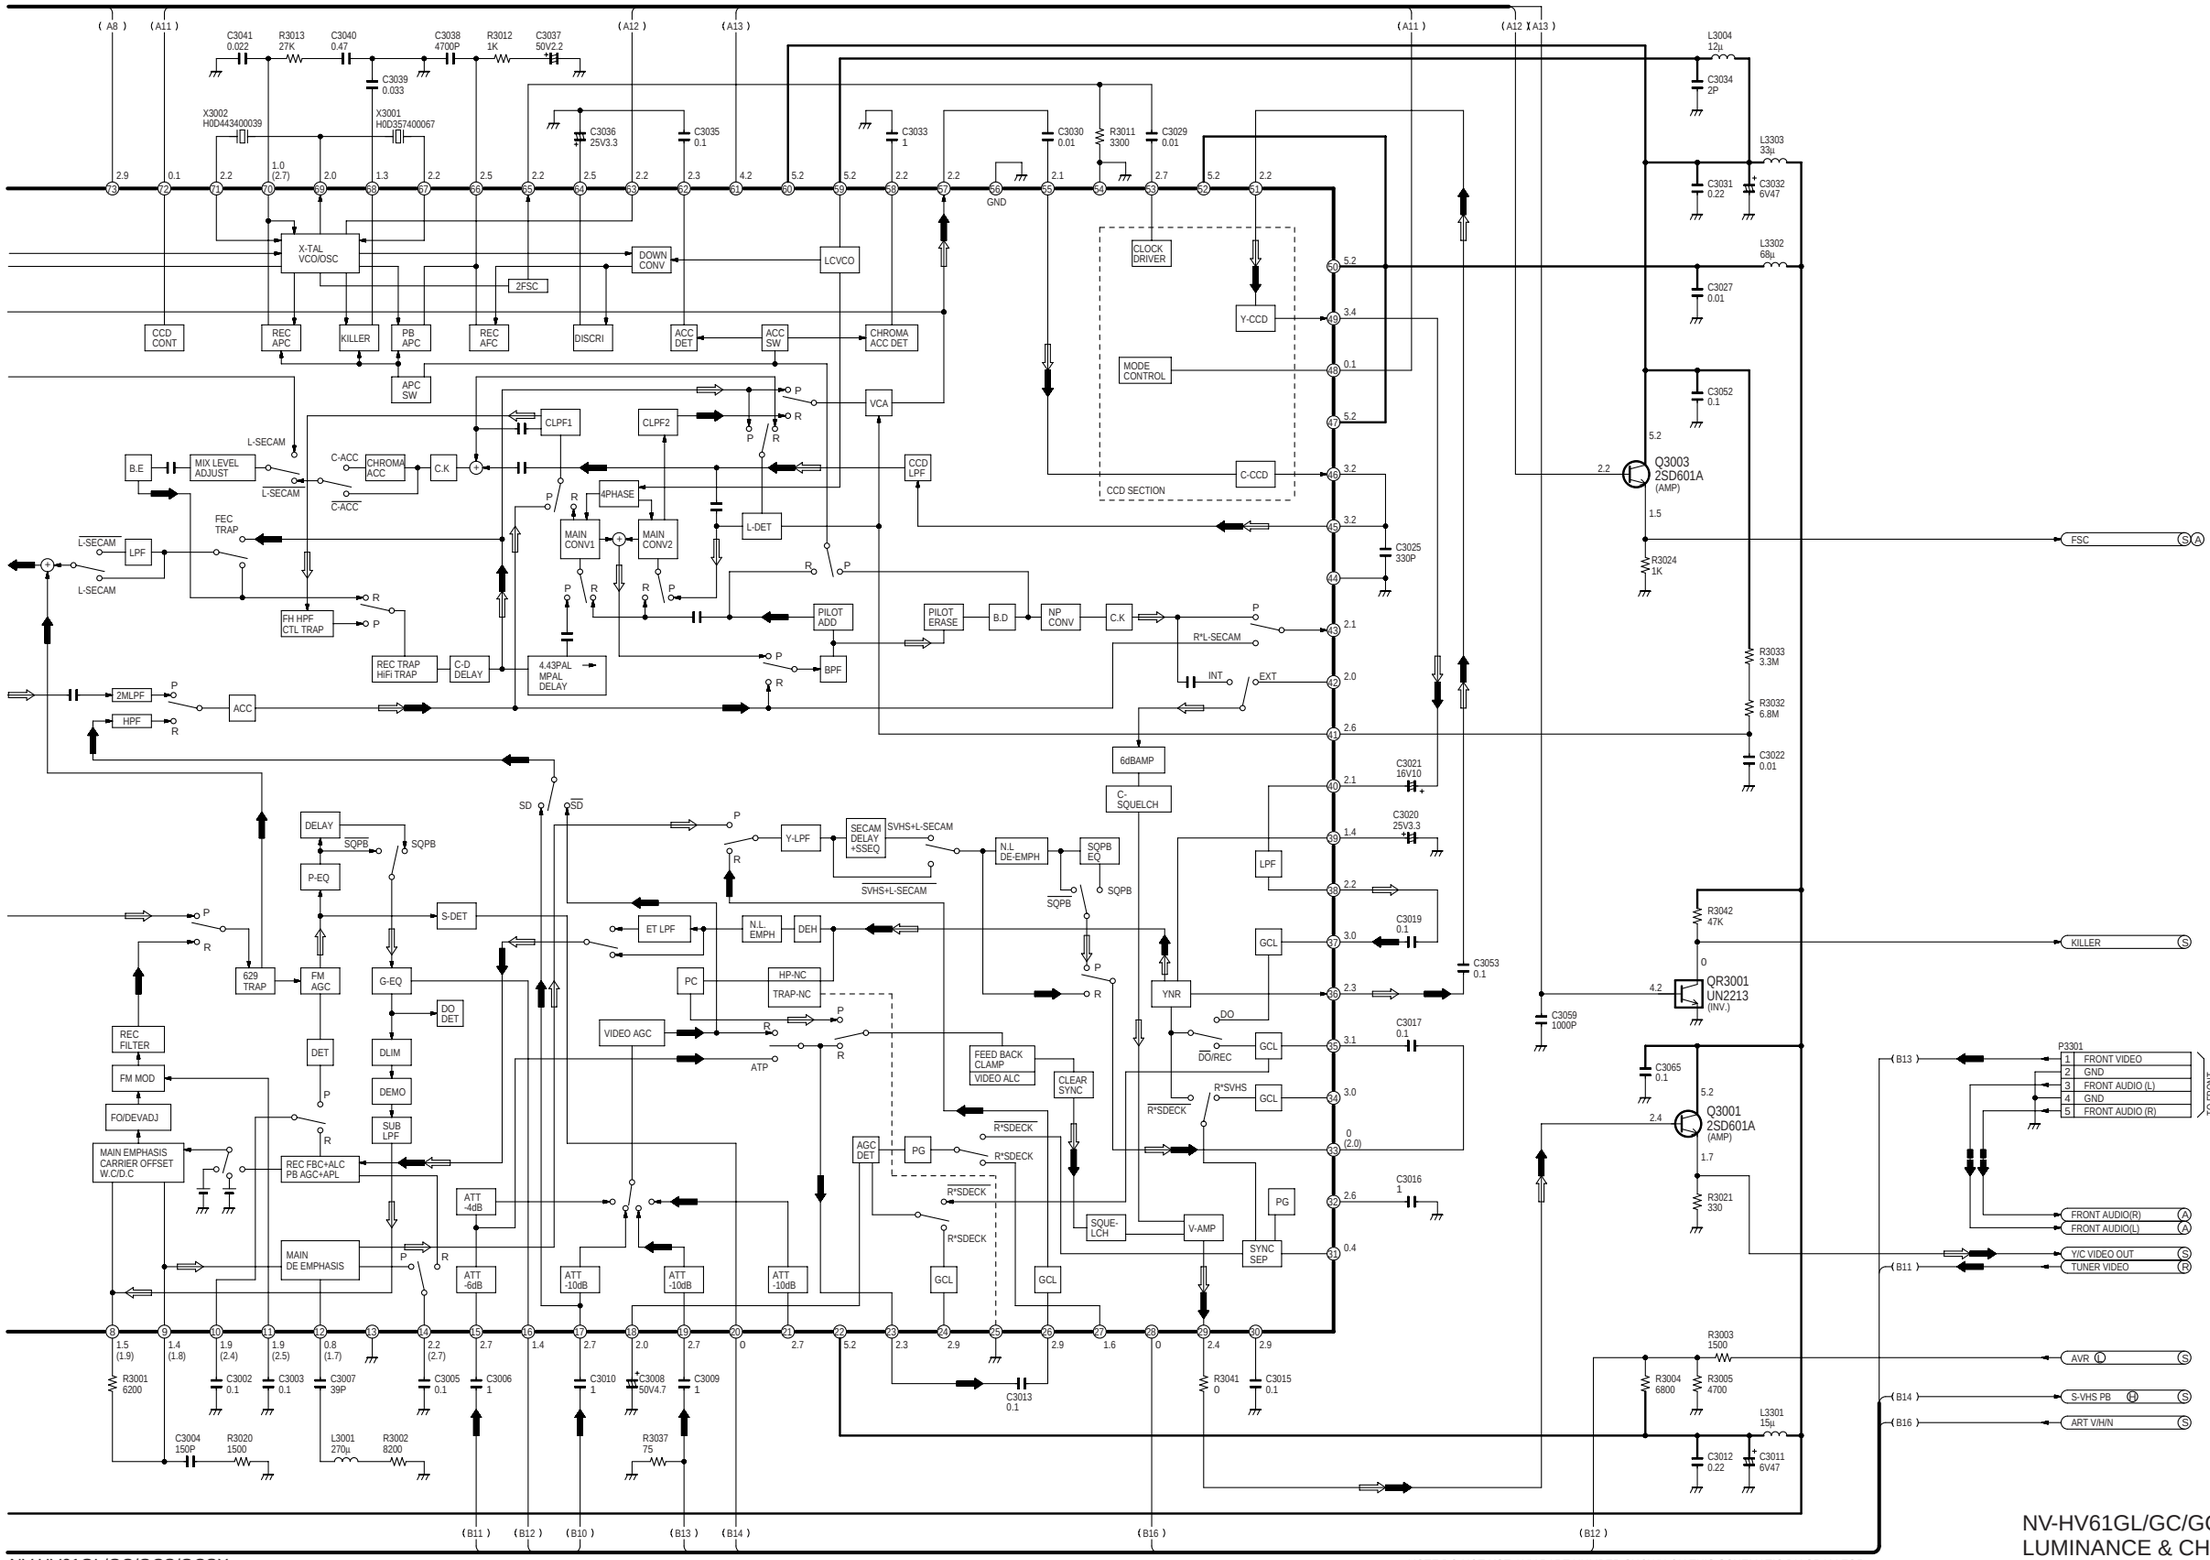

NV-HV61GL/GC/GCS/GCSX
LUMINANCE & CHROMINANCE/AUDIO SECTION SCHEMATIC DIAGRAM

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
LUMINANCE & CHROMINANCE/AUDIO SECTION SCHEMATIC DIAGRAM

FRONT C.B.A.	
Connector	
P4951	B-2

ADDRESS INFORMATION

(VEP04857A)

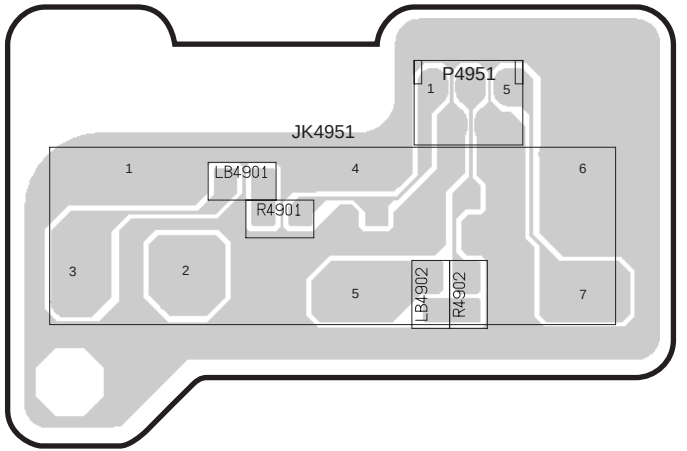

NV-HV61GL/GC/GCS/GCSX
FRONT C.B.A.

B

A

1 2 3

(VEP06F53E:NV-HV61GL)(VEP06F53C:NV-HV61GC/GCS/GCSX)

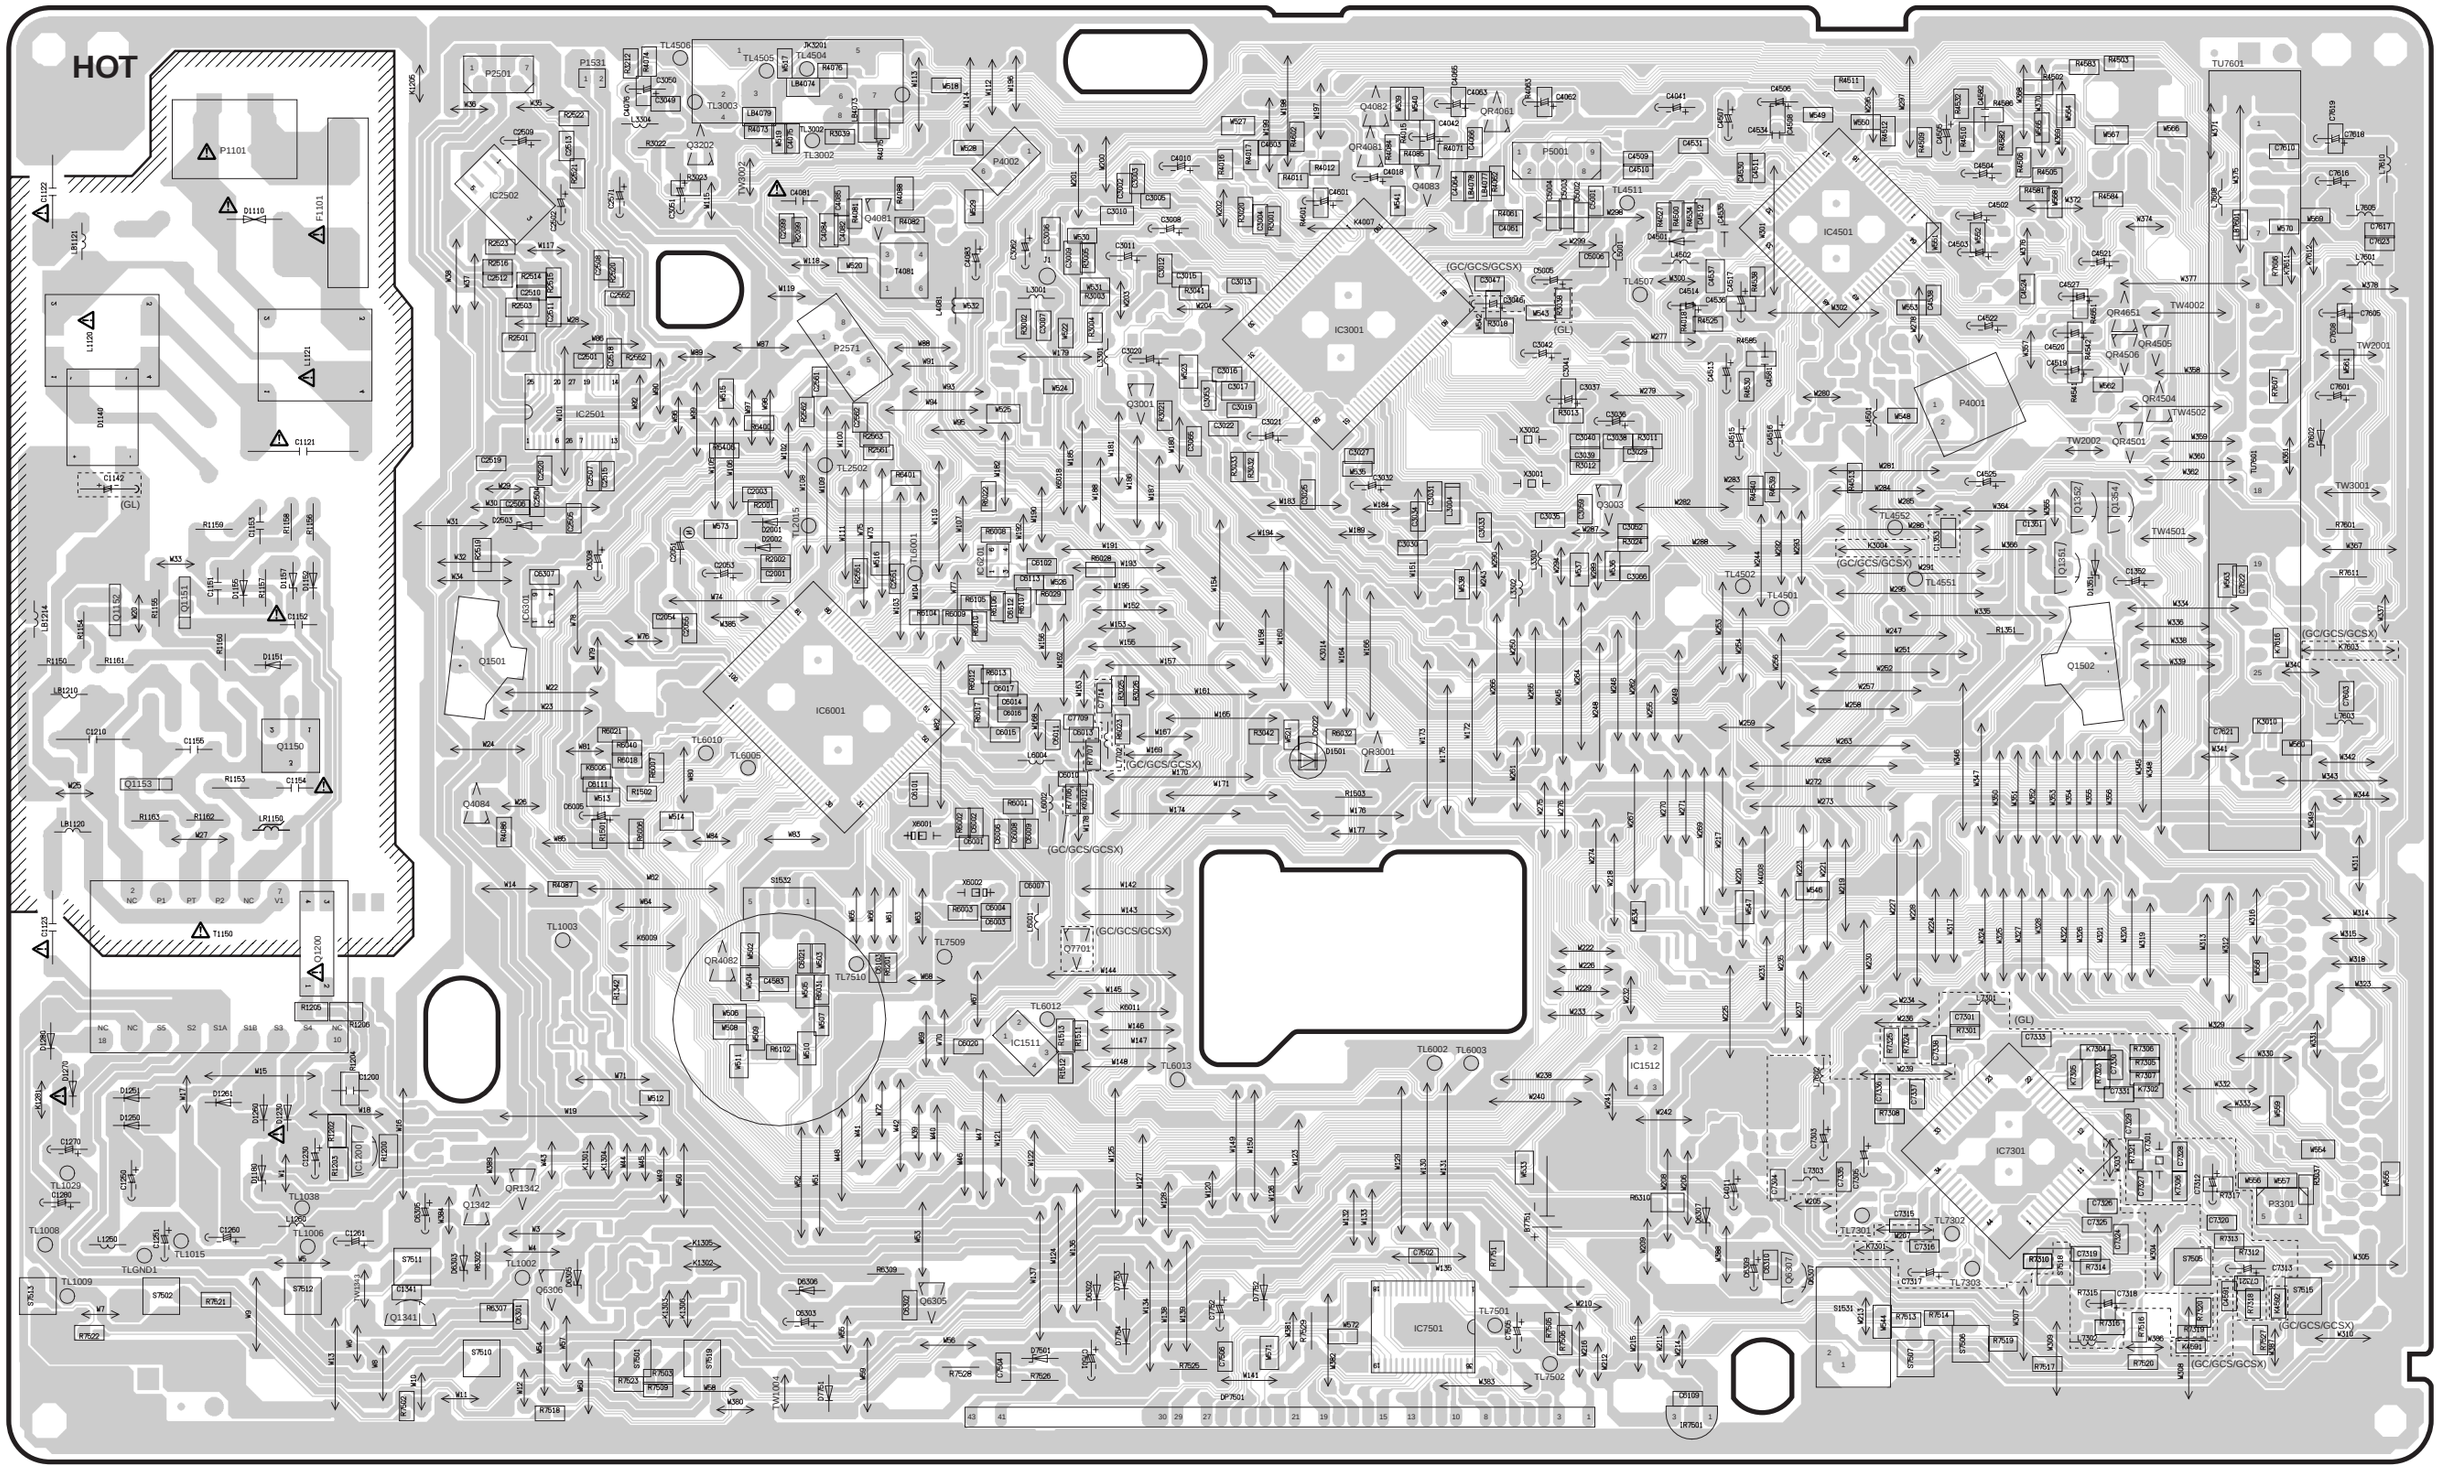

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED WITH THE MARK ⚠ HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SAME TYPE.

CAUTION

THE STRIPED FRAME INDICATES THE PRIMARY CIRCUIT TO DISTINGUISH THE PRIMARY FROM THE SECONDARY CIRCUIT.
PAY ATTENTION NOT TO RECEIVE AN ELECTRIC SHOCK DURING REPAIR AND SERVICE OF THE PRODUCTS.

MAIN C.B.A.

Transistor		**Test Point**	
Q1150	C-2	TL1002	A-3
Q1151	D-1	TL1003	C-3
Q1152	D-1	TL1006	B-2
Q1153	C-1	TL1008	B-1
Q1200	C-2	TL1009	A-1
Q1341	A-2	TL1015	A-1
Q1342	B-2	TL1029	B-1
Q1351	D-8	TL1038	B-2
Q1352	D-8	TL2015	D-4
Q1354	D-8	TL2502	D-4
Q1501	D-2	TL3002	E-4
Q1502	D-8	TL3003	F-3
Q3001	E-5	TL4501	D-7
Q3003	D-7	TL4502	D-7
Q3202	E-3	TL4503	F-4
Q4081	E-4	TL4504	F-4
Q4082	F-6	TL4505	F-3
Q4083	E-6	TL4506	F-3
Q4084	C-2	TL4507	E-7
Q6305	A-4	TL4511	E-7
Q6306	A-3	TL4551	D-8
Q6307	A-7	TL4552	D-8
Q7701	C-5	TL6001	D-4
Transistor & Resistor		TL6002	B-6
QR1342	B-3	TL6003	B-6
QR3001	C-6	TL6005	C-3
QR4061	F-6	TL6010	C-3
QR4081	E-6	TL6012	B-4
QR4082	C-3	TL6013	B-5
QR4501	D-8	TL7301	B-7
QR4504	E-8	TL7302	B-8
QR4505	E-8	TL7303	A-8
QR4506	E-8	TL7501	A-6
QR4651	E-8	TL7502	A-6
Integrated Circuit		TL7509	C-4
IC1200	B-2	TL7510	B-4
IC1511	B-4	TLGND1	A-1
IC1512	B-7	TW1004	A-4
IC2501	E-3	TW1343	A-2
IC2502	E-3	TW2001	E-9
IC3001	E-6	TW2002	D-8
IC4501	E-7	TW3001	D-9
IC6001	C-4	TW3002	E-3
IC6201	D-4	TW4002	E-9
IC6301	D-3	TW4501	D-9
IC7301	B-8	TW4502	E-9
IC7501	A-6	**Connector**	
		P1101	E-2
		P1531	F-3
		P2501	F-3
		P2571	E-4
		P3301	B-9
		P4001	E-8
		P4002	E-4
		P5001	E-6
		TU7601	F-9

ADDRESS INFORMATION

No	Terminal Name	I/O	Description	P.OFF	P.Failure	Reset/ Release
1	PROGRESSIVE TV (L)	I	Port for scanning line control: scanning line 628: H scanning line 624: L	Low	Low	Low
2	CODE1	I	AD input terminal for model setting.	In	In	In
3	CODE2	I	AD input terminal for model setting.	In	In	In
4	T.S.CUREVE	I	Input terminal for "S-Curve" of Tuner AFC at channel selecting.	In	In	In
5	NC	O	Low fix.	Low	Low	Low
6	NORM/SERV/T2/TES	I	Factory mode/ Service mode setting terminal. Input Voltage / Mode Over 4.0V / Normal Over 2.0V and less than 4.0V / Service Over 1.0V and less than 2.5V / Test 2 Less than 1.0V / Test 1	In	In	In
7	S-PHOTO	I	Input terminal of the Tape End sensor detection. *More than 2.6V : Black tape part. *Less than 2.4V :Trans. Tape part.	In	In	In
8	T-PHOTO	I	Input terminal of the Tape Beginning sensor detection. *More than 2.6V : Black tape part. *Less than 2.4V :Trans. Tape part.	In	In	In
9	TRACKING_ENVE	I	Input terminal of the Video envelope signal.	In	In	In
10	NC	O	Low fix.	Low	Low	Low
11	CURRENT.LIMIT	O	Control terminal for the Capstan current limit. (Output impedance: MIN:1K, TYP:2.5K, MAX:4.0K)	In DA=0V	Low	In DA=0V
12	EEPROM_CS	O	Chip Select terminal for NAVI Data backup EEPROM. *Active Low output.	High	Low	Low
13	ART.V/H/N	O	Output terminal for the Artificial V-sync. 1. In trick playback. Artificial V sync inserting timing : High Artificial H sync inserting timing : Hi-Z (M output) Except above conditions : Low 2. NAVI REC : Hi-Z 3. OSD REC : Hi-Z 4. Other than above conditions : Low	Low	Low	Low
14	REMOCON	I	Input terminal for the Remote Controller.	In	In	In
15	PICT1	O	Control terminal for the Picture mode.	Low	Low	Low
16	NC	O	Low fix.	Low	Low	Low
17	PICT2	O	Control terminal for the Picture mode.	Low	Low	Low
18	VIDEO.H.SW	O	Video head switching signal *L'/R="High" *R'/L="Low"	Low	Low	Low
19	AUDIO.H.SW	O	Head switching signal for Audio circuit.	Low	Low	Low
20	D.FM.REC	O	Recording control signal for Hi-Fi Audio signal. *REC, INSERT, AV INSERT:"High" is output. (Rec on) *Other than above condition: "Low" is output. (Rec off) *From L to H: Switching timing of this signal is synchronized with the HSW edge just after switching timing of "D33 of IC3001 = 0 to 1". (The delay is within 1 edge) *From H to L: When Editing, this switching timing is before the switching timing of "D33 of IC3001 = from 1 to 0" by 60 +- 10msec in SP mode, by 100 +- 10msec in LP/EP mode. When normal rec mode, this switching timing is before the switching timing of "D33 of IC3001 = from 1 to 0" by 0 ~ 150msec.	Low	Low	Low
21	R_COLE_W (L)	O	Write protection releasing terminal for RAM correction EEPROM. *During ROM correction data being Written: "Low" is output. *Other than above condition: Hi-Z.	Hi-Z	Hi-Z	Hi-Z

<table>
<tr><th>No</th><th>Terminal Name</th><th>I/O</th><th>Description</th><th>P.OFF</th><th>P.Failure</th><th>Reset/ Release</th></tr>
<tr><td>22</td><td>NC</td><td>O</td><td>Low fix.</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>23</td><td>ABS_NORMAL</td><td>I</td><td>Enforced Normal selection signal and Audio Automatic Adjustment Trigger Input Terminal
*To turn audio into normal: Low
(During ADUBPS, HiFi Audio envelope deterioration)
*Others: High</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>24</td><td>D.A.REC(H)</td><td>O</td><td>Recording on/off control signal terminal for Linear audio.
1.When recording linear audio, take IC3001 D33, BIAS (H) and timing as below.
*During Initial recording, at about same timing for D33=0 → 1, Bias=High.
*When finished recording, BIAS (H)=H → L, after 140+-10msec, set to Low.
2.Other than above, Output=Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>25</td><td>PAL 9H (H)</td><td>O</td><td>PAL 9H: High is output.</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>26</td><td>BIAS(H)</td><td>O</td><td>Linear Audio recording/ erasing On/ Off control terminal.
1.When recording Linear Audio, at about same timing of D33, Output=Low.
Output mode: REC, A. DUB, AV_INSERT
*When initiating recording D. A. REC (H)=L → H, after 140+-10msec set to High.
*When completing recording (Without delay) Output=Low
2.Wnen erasing TAPE REFRESH, Output=HIgh
3.Other than above, Output=Low
4.When models without DUB, can control ERASE ON/OFF.</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>27</td><td>STAB(L)</td><td>I</td><td>SAFETY TAB DETECTION
*With SAFETY TAB: "Low"
*Without SAFETY TAB:"High"</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>28</td><td>FM_MUTE</td><td>O</td><td>Audio mute control terminal.
High output (AUDIO MUTE).
The voltage is shifted to Hi-Z for reucing the current at 3 second after the power has been turned on .</td><td>Hi-Z</td><td>In</td><td>In</td></tr>
<tr><td>29</td><td>SW1</td><td>O</td><td>AUDIO SYSTEM (TUNER PRESET)=BG, I: High output
AUDIO SYSTEM (TUNER PRESET)=DK, M: Low output</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>30</td><td>POS.SW4</td><td>I</td><td rowspan="4">Input terminal for mechanism position.
<table>
<tr><th>SW4</th><th>SW3</th><th>SW2</th><th>SW1</th><th>Position Name</th></tr>
<tr><td>1</td><td>1</td><td>1</td><td>0</td><td>EJECT Position</td></tr>
<tr><td>0</td><td>0</td><td>1</td><td>0</td><td>DOWN Position</td></tr>
<tr><td>0</td><td>0</td><td>1</td><td>1</td><td>R-REW Position</td></tr>
<tr><td>0</td><td>1</td><td>0</td><td>0</td><td>LOAD Position</td></tr>
<tr><td>0</td><td>1</td><td>0</td><td>1</td><td>REV Position</td></tr>
<tr><td>0</td><td>1</td><td>1</td><td>0</td><td>PLAY Position</td></tr>
<tr><td>0</td><td>1</td><td>1</td><td>1</td><td>P_OFF Position</td></tr>
<tr><td>1</td><td>0</td><td>0</td><td>0</td><td>STOP_R Position</td></tr>
<tr><td>1</td><td>0</td><td>0</td><td>1</td><td>STOP_F Position</td></tr>
<tr><td>1</td><td>1</td><td>0</td><td>0</td><td>FF/REW Position</td></tr>
<tr><td>1</td><td>1</td><td>1</td><td>0</td><td>FF2 Position</td></tr>
<tr><td>1</td><td>1</td><td>1</td><td>1</td><td>Intermediate Positions between each Positions</td></tr>
</table></td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>31</td><td>POS.SW3</td><td>I</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>32</td><td>POS.SW2</td><td>I</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>33</td><td>POS.SW1</td><td>I</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>34</td><td>RESET</td><td>I</td><td>RESET Terminal.</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>35</td><td>32KHz.IN</td><td>I</td><td>Sub clock (32.768KHz) osc. input terminal.</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>36</td><td>32KHz.OUT</td><td>O</td><td>Sub clock (32.768KHz) osc. output terminal</td><td>Out</td><td>Out</td><td>Out</td></tr>
<tr><td>37</td><td>5V(D)</td><td>-</td><td>VCC (5V) for Digital port</td><td>-</td><td>-</td><td>-</td></tr>
<tr><td>38</td><td>12MHz.IN</td><td>I</td><td>Main clock (12MHz) osc. input terminal.</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>39</td><td>12MHz.OUT</td><td>O</td><td>Main clock (12MHz) osc. output terminal.</td><td>Out</td><td>Out</td><td>Out</td></tr>
<tr><td>40</td><td>GND(OSC)</td><td>-</td><td>Digital GND for OSC circuit.</td><td>-</td><td>-</td><td>-</td></tr>
<tr><td>41</td><td>PAL PB (L)</td><td>O</td><td>3.58NTSC (D6=0, D7=0 both of IC3001): High output
Other than above : Low output</td><td>Low</td><td>Low</td><td>Low</td></tr>
</table>

No	Terminal Name	I/O	Description	P.OFF	P.Failure	Reset/ Release
42	PAL_SQPB	O	50Hz Playback on SQPB: High output Other than above : Low output	Low	Low	Low
43	32K.START(L)	I	Clock souce selection terminal at reset starting. *12/16MHz(High speed) :Connected to VCC (5V). *32KHz(Slow speed) :Connected to Vss (0V).	In	In	In
44	LC.OSC.IN	I	Input terminal of the LC Oscillation (For OSD dot clock)	In	In	In
45	LC.OSC.OUT	O	Output terminal of the LC Oscillation (For OSD dot clock)	Out	Out	Out
46	GND	-	Connected to the GND (Test terminal "B" in the factory).	-	-	-
47	FSC.LPF	I	OSC Filter connection terminal for Internal sync generator.	In	Low	In
48	FSC.IN	I	Sub carrier (fsc) input terminal for sync generator.	In	Low	In
49	GND(OSD)	-	GND terminal for OSD circuit.	-	-	-
50	CVIN	I	Input terminal for composite video signal.	In	In	In
51	KILLER	I	When a signal that V-sync is 50Hz is putting in or playing back. * PAL/MESECAM distinction result input terminal. Low is put into this terminal: PAL High is put into this terminal: Dipend on MESECAM H /SECAM DET input terminal. When a NTSC signal is putting in. * Input terminal for distinction result of agreement between Fsc of input signal and frequency of OSC for sub-carrier that being chosen by IC3001. Low is put in: Agree High is put in: Different	In	In	In
52	CVOUT	O	Output terminal for the composite video signal.	Out	Out	Out
53	5V(OSD)	-	Power supply terminal for OSD	-	-	-
54	HLF	I	LPF connection terminal for slicer.	In	In	In
55	VHOLD	I	Capacitor connection terminal of the Reference voltage generator circuit for the slicer.	In	In	In
56	CVIN(EDS)	I	Composite video signal input terminal for the slicer.	In	In	In
57	GND	-	Connect to the GND (Test terminal "A" in the factory).	-	-	-
58	NC	O	Low fix.	Low	Low	Low
59	SECAM MIX (For other than NV-HV61GL)	I	SECAM CHROMA signal input terminal for SECAM SIGNAL SUPER IMPOSE.	Low	Low	Low
	NC (For NV-HV61GL)	O	Low fix.	Low	Low	Low
60	CHARA + HEM	O	OSD REC control terminal. 1. During OSD REC. *During OSD character is output (Including Hemming): "High" is output. *Output than above condition: "Low" is output. 2. Other than OSD REC: High-Z.	Hi-Z/Low	Hi-Z/Low	Hi-Z/Low
61	SW2	O	(For NV-HV61GL) High fix. (For other than NV-HV61GL) AUDIO SYSTEM = BG, DK: High is output. AUDIO SYSTEM = I, M: Low is output.	Low	Low	Low
62	A.SEARCH (L)	I/O	AGC gain selection signal for tuner CH selection. During digital AFC is working at TUNER PRESET mode: Low (AGC is high speed). Other than above: Hi-Z (AGC is normal speed).	Low	Low	Low
63	VBI2	O	NAVI writing terminal. * During NAVI data being written (During recording when JET NAVIGATOR is ON). OSD letters (Including the masking) being written : High Except OSD letters being written : Low * Other than above: Hi-z	Low / Hi-Z	Low / Hi-Z	Low / Hi-Z

No	Terminal Name	I/O	Description	P.OFF	P.Failure	Reset/ Release
64	VBI1/CHARA	O	Terminal for both NAVI Writing and OSD REC Writing. 1. During NAVI writing (During recording in JET NAVIGATOR is ON) At NAVI data "H" being written : High is output At NAVI data "L" being written : Low is output At except NAVI data being written : Low is output 2. During OSD REC (During recording in OSD REC is ON) During OSD letters (Except the masking) being written : High is output Except OSD letters being written : Low * Other than above condition : Hi-z	Low / Hi-Z	Low / Hi-Z	Low / Hi-Z
65	UNLOADING(H)	O	Control terminal for the Unloading operation.	Low	Low	Low
66	FLD_CS	O	Chip select signal for FIP driver. *Active: "Low" *Non-active: "High"	(Normal ope.)	Low	Low
67	LOADING(H)	O	Control terminal for the loading operation.	Low	Low	Low
68	IC.DATA.OUT	O	Timer-Bus signal for peripheral ICs control: Data output	(Normal ope.)	In	Hi-Z
69	IC.DATA.IN	I	Timer-Bus signal for peripheral ICs control: Data input	(Normal ope.)	In	In
70	IC.DATA.CLK	O	Timer-Bus signal for peripheral ICs control:Clock outout	(Normal ope.)	In	Hi-Z
71	IIC.CLK	O	Serial communication terminal (IIC) for IC3001/FM audio IC.	(Normal ope.)	In	Hi-Z
72	IIC.DATA	I/O	Serial communication terminal (IIC) for IC3001/FM audio IC.	(Normal ope.)	In	Hi-Z
73	125Hz/ROM.CORE	O	ROM Correction confirmation mode: * ROM correction setting bit is "ON": "High". * ROM correction setting bit is "OFF": "Low" is existed. (Other than ROM Correction confirmation mode, this terminal is the output terminal of internal clock for main clock adjustment.:Outputting the 125Hz.)	(Normal ope.)	Low	Low
74	CAP R/F	O	The rotation direction control terminal of the capstan driver. *RVS="High" *FWD="Low".	Low	Low	Low
75	NC	O	Low fix.	Low	Low	Low
76	CAP.ET	O	Power supply terminal for the capstan motor control. (Conpared with the driver reference voltage, when it is "low", current will be cut. Also when it is "high", the rotation speed will be accelerated.)	High PWM=0V	Low	High PWM=0V
77	CYL.ET	O	Power supply terminal of the cylinder motor control: (Conpared with the driver reference voltage, when it is "high", current will be cut. Also when it is "low", the rotation speed will be accelerated. (Max:2.8V))	Low PWM=2.800 V	Low	Low PWM=2.800 V
78	P.FAIL(L)	I	Input terminal for the power failar detection. Power failar : "Low".	In	In	In
79	S.REEL.PULSE	I	Input terminal of the S.Reel pulse.	In	In	In
80	T.REEL.PULSE	I	Input terminal of the T.Reel pulse.	In	In	In
81	SP(L)	O	REC MODE DATA *N2H/P3H:"Low" *N4H/N6H/N10H/P6H/P9H:"High"	Low	Low	Low
82	EX.FF/REW (L)	I/O	Control signal filter select terminal in FF/REW mode. *During FF/REW: Hi-Z *Except FF/REW: Low	Low	Low	Low
83	P.ON(H)	O	ON/OFF control terminal for the VCR Power. *Power ON : "High" *Power OFF : "Low"	Low	Low	Low
84	AVR (L)	I/O	Simplified AI playback ON/OFF control.	Low	Low	Low
85	SQPB (H)	I	The distinction results whether S-VHS or VHS of the playback tape is input in VV mode. *"Low" is input: VHS tape playback. *"High" is input: S-VHS tape playback. NOTE: When the MESECAM (H) terminal receives "High", above result is invalidated and the tape is judged to VHS tape playback. *In case of model having SQPB function, ON/OFF setting of SQPB is performed with above result, Envelope voltage and result wheather the CTL pulse exists not. *In case of model not having SQPB function, above result is disregarded, and the VCR is always set to SQPB = off.	In	In	In
86	FG.AMP.OUT	O	Output terminal for the Capstan FG AMP signal.	Out	Out	Out
87	FG.AMP.IN	I	Input terminal for the Capstan FG AMP signal.	In	In	In
88	GND(A)	-	GND for Analogue circuit.	-	-	-

No	Terminal Name	I/O	Description	P.OFF	P.Failure	Reset/ Release
89	MESECAM (H)	I	Distinction terminal for the Video system. 1. In the VV mode. *"High" is input: Playback of a MESECAM recorded tape. *"Low" is input: Playback of other than MESECAM recorder tape. 2. In the EE mode. *"High" is input: Receiving a SECAM broadcast, or a SECAM signal is input. NOTE: *In case of model having MESECAM / SECAM REC/PLAY, the video system is controlled with above result. *In case of model do not having MESECAM / SECAM REC/PLAY, the above result is invalidated.	In	In	In
90	CYL.PFG	I	Input terminal for the Cylinder PG/FG.	In	In	In
91	OREF	O	1/2 VDD reference voltage output terminal for the Analogue AMP.	Out	Out	Out
92	IREF	I	1/2 VDD reference voltage input terminal for the Analogue AMP.	In	In	In
93	GND	I	GND	In	In	In
94	CTL.HEAD(-)	I/O	I/O terminal for the Control head (-)	In/Out	In/Out	In/Out
95	CTL.HEAD(+)	I/O	I/O terminal for the Control head (+)	In/Out	In/Out	In/Out
96	CTL.AMP.REF	I	Capacitor connection terminal for reference of the control AMP.	In	In	In
97	PB.CTL.OUT	O	Output terminal for the Control AMP.	Out	Out	Out
98	5V(A)	-	Power supply terminal for Analogue AMP.	-	-	-
99	5V(AD)	-	Reference power supply terminal for the AD/8bit DA	-	-	-
100	NTSC (L)	O	Output terminal for playback mode. *50Hz: "High" *60Hz: "Low"	Low	Low	Low

SYSTEM CONTROL & SERVO ICs DC VOLTAGE CHART (SP MODE)

Ref. No.	IC1511					IC1512														
MODE	1	2	3	4		1	2	3	4											
STOP	1.2	2.4	5.0	0.0		0.0	1.3	5.0	0.0											
PLAY	1.2	2.4	3.5	0.0		0.0	1.3	5.0	0.0											
REC	1.2	2.4	3.5	0.0		0.0	1.3	4.9	0.0											
F.F	1.2	2.4	2.4	0.0		0.0	1.3	2.5	0.0											
REW	1.2	2.4	2.3	0.0		0.0	1.3	2.4	0.0											
Ref. No.	IC2501																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
STOP	12.2	0.3	0.0	0.3	0.0	0.0	16.2	0.0	2.9	1.7	1.6	0.7	1.5	2.4	2.5	2.5	2.5	1.3	5.0	3.5
PLAY	12.3	0.3	0.0	0.3	0.0	0.0	16.3	0.0	2.8	1.7	1.7	0.7	1.4	2.4	2.5	2.5	2.5	1.3	5.0	3.6
REC	12.2	0.3	0.0	0.3	0.0	0.0	16.3	0.0	2.9	1.6	1.7	0.7	1.5	2.4	2.5	2.5	2.5	1.3	5.0	3.5
F.F	12.2	0.3	0.0	0.3	0.0	0.0	16.2	0.0	2.9	1.7	1.7	0.7	1.5	2.4	2.5	2.5	2.5	1.3	5.0	3.5
REW	12.3	0.3	0.0	0.3	0.0	0.0	16.2	0.0	2.8	1.7	1.7	0.7	1.5	2.4	2.5	2.5	2.5	1.3	5.0	3..9
Ref. No.	IC2501																			
MODE	21	22	23	24	25															
STOP	12.2	3.5	3.5	0.0	3.5															
PLAY	12.3	3.6	3.6	0.0	3.6															
REC	12.2	3.6	3.5	0.0	3.6															
F.F	12.3	3.5	3.5	0.0	3.5															
REW	12.3	3.6	3.8	0.0	3.6															
Ref. No.	IC6001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
STOP	4.9	4.9	4.9	0.0	-	4.9	4.9	4.9	3.3	0.1	0.0	0.0	0.0	5.1	0.0	0.0	0.0	2.5	0.0	0.0
PLAY	4.9	4.9	4.9	0.0	-	4.9	4.9	4.9	4.0	0.1	4.9	0.0	0.0	5.1	0.0	0.0	0.0	2.5	2.5	0.0
REC	4.9	4.9	4.9	0.0	-	4.9	4.9	4.9	3.3	0.1	4.9	0.0	0.0	5.1	0.0	0.0	0.0	2.5	0.0	4.9
F.F	4.9	4.9	4.9	0.0	-	4.9	4.9	4.9	3.3	0.1	4.9	4.9	0.0	5.1	0.0	0.0	0.0	2.5	0.0	0.0
REW	4.9	4.9	4.9	0.0	-	4.9	4.9	4.9	3.3	0.1	4.9	4.9	0.0	5.1	0.0	0.0	0.0	2.5	0.0	0.0
Ref. No.	IC6001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
STOP	0.4	0.0	4.4	0.0	0.0	0.0	0.0	0.1	0.0	0.0	4.9	4.9	4.9	4.9	-	-	4.9	-	-	0.0
PLAY	0.4	0.0	4.4	0.0	0.0	0.0	0.0	0.1	0.0	0.0	4.9	4.9	0.0	5.0	-	-	5.0	-	-	0.0
REC	0.4	0.0	4.4	4.9	0.0	4.9	0.0	0.1	0.0	0.0	0.0	4.9	0.0	4.9	-	-	4.9	-	-	0.0
F.F	0.4	0.0	4.4	0.0	0.0	0.0	0.0	0.1	0.0	4.9	4.9	0.0	0.0	4.9	-	-	4.9	-	-	0.0
REW	0.4	0.0	4.4	0.0	0.0	0.0	0.0	0.1	0.0	4.9	4.9	0.0	0.0	4.9	-	-	4.9	-	-	0.0
Ref. No.	IC6001																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
STOP	4.9	0.0	0.0	4.6	4.6	0.0	1.7	2.2	0.0	1.7	0.0	1.7	5.1	2.1	1.8	2.0	0.0	0.0	0.0	0.0
PLAY	0.0	0.0	0.0	4.6	4.6	0.0	1.7	2.2	0.0	1.7	0.0	1.7	5.2	2.1	1.8	2.0	0.0	0.0	0.0	0.0
REC	4.9	0.0	0.0	4.6	4.6	0.0	1.7	2.2	0.0	1.7	0.0	1.7	5.1	2.1	1.8	2.0	0.0	0.0	0.0	0.0
F.F	0.0	0.0	0.0	4.6	4.6	0.0	1.7	2.2	0.0	1.7	0.0	1.7	5.2	2.1	1.8	2.0	0.0	0.0	0.0	0.0
REW	0.0	0.0	0.0	4.6	4.6	0.0	1.7	2.2	0.0	1.7	0.0	1.7	5.2	2.1	1.8	2.0	0.0	0.0	0.0	0.0
Ref. No.	IC6001																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
STOP	0.0	0.7	0.0	0.0	0.0	3.0	0.0	4.0	4.0	4.1	4.0	2.5	0.0	0.0	0.0	0.0	2.4	5.1	5.0	0.2
PLAY	0.0	0.7	0.0	0.0	0.0	3.0	0.0	4.0	4.0	4.1	4.0	2.5	0.0	0.0	0.0	2.5	2.4	5.2	0.1	4.2
REC	0.0	0.7	0.0	0.0	0.0	3.0	0.0	4.1	4.1	4.1	4.0	2.5	0.0	0.0	0.0	2.5	2.4	5.1	3.8	5.0
F.F	0.0	0.7	0.0	0.0	0.0	3.0	0.0	4.1	4.1	4.1	4.0	2.5	0.0	0.0	2.8	2.8	2.4	5.1	2.4	2.4
REW	0.0	0.7	0.0	0.0	0.0	3.0	0.0	4.1	4.1	4.1	4.0	2.5	4.9	0.0	4.9	4.9	2.4	5.1	2.4	2.4
Ref. No.	IC6001																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
STOP	0.0	0.0	4.9	2.0	0.0	2.6	2.6	0.0	0.3	1.3	2.6	2.6	0.0	2.5	2.5	2.5	2.5	5.1	5.1	5.1
PLAY	0.0	0.0	4.9	2.0	0.0	2.6	2.6	0.0	0.3	1.3	2.6	2.6	0.0	2.5	2.5	2.6	2.6	5.1	5.2	5.1
REC	0.0	0.0	4.9	2.0	0.0	2.6	2.6	0.0	0.3	1.3	2.6	2.6	0.0	2.3	2.7	2.5	2.5	5.1	5.1	5.1
F.F	0.0	0.0	4.9	2.0	0.0	2.6	2.6	0.0	0.0	1.3	2.6	2.6	0.0	2.5	2.5	2.6	2.5	5.1	5.1	5.1
REW	0.0	0.0	4.9	2.0	0.0	2.6	2.6	0.0	0.0	1.3	2.6	2.6	0.0	2.5	2.5	2.6	2.7	5.2	5.2	5.1
Ref. No.	IC6201							IC6301												
MODE	1	2	3	4	5	6		1	2	3	4	5	6							
STOP	5.1	5.1	0.0	-	5.1			6.1	0.0	4.9	1.2	0.0	5.0							
PLAY	5.2	5.1	0.0	-	5.1			6.1	0.0	4.9	1.2	0.0	5.0							
REC	5.1	5.1	0.0	-	5.1			6.0	0.0	4.9	1.2	0.0	5.0							
F.F	5.2	5.2	0.0	-	5.1			6.5	0.0	4.9	1.2	0.0	5.0							
REW	5.1	5.2	0.0	-	5.1			6.3	0.0	4.9	1.2	0.0	5.0							

SYSTEM CONTROL & SERVO TRs DC VOLTAGE CHART (SP MODE)

Ref. No.	Q1501				Q1502				Q7701											
MODE	+	−			+	−			E	C	B									
STOP	4.9	0.0			5.1	0.0			2.3	0.0	1.7									
PLAY	4.9	0.0			5.1	0.0			2.3	0.0	1.7									
REC	4.9	0.0			5.1	0.0			2.3	0.0	1.7									
F.F	4.9	0.0			5.1	0.0			2.3	0.0	1.7									
REW	4.9	0.0			5.1	0.0			2.3	0.0	1.7									

443NT [L]	4.43 NTSC Ⓛ
A. COMP	AUDIO COMPONENT SIGNAL
A. COMPO	AUDIO COMPONENT SIGNAL
A. D.P [L]	AUDIO DUBBING PAUSE Ⓛ
A. D/L [L]	AUDIO DUBBING PAUSE Ⓛ
A. DEF [S]	AUDIO DEFEAT
A. DEF [S] [L]	AUDIO DEFEAT
A. DUB P [L]	AUDIO DUBBING PAUSE Ⓛ
A. DUB [H]	AUDIO DUBBING Ⓗ
A. ERASE	AUDIO ERASE
A. H. SW	AUDIO HEAD SWITCHING PULSE
A. HEAD [R]	AUDIO HEAD (REC)
A. HEAD [W]	AUDIO HEAD (PLAY)
A. IN [L]	AUDIO INPUT (L)
A. IN [R]	AUDIO INPUT (R)
A. MUT [H]	AUDIO MUTE Ⓗ
A. MUTE [H]	AUDIO MUTE Ⓗ
A. OUT [L]	AUDIO OUTPUT (L)
A. OUT [R]	AUDIO OUTPUT (R)
A. RF OUT	AUDIO RF SIGNAL OUTPUT
A/VS/S. DATA	AV SW/SERIAL DATA
AC ONLINE	AC ONLINE
AC. O/EE. H	AC ONLINE/EE Ⓗ
AFC S C	AFC S CURVE
AFC [S]	AFC S CURVE
AFC. DEF	AFC DEFEAT
ARFC OUT	AUDIO RF SIGNAL OUTPUT
ART. V	ARTIFICIAL VERTICAL SYNC SIGNAL
ART. V. MM	ARTIFICIAL VERTICAL SYNC SIGNAL MONO MULTI
ART. V/H/N	ARTIFICIAL VERTICAL SYNC SIGNAL Ⓗ/NORMAL
AT. V/H/N	ARTIFICIAL VERTICAL SYNC SIGNAL
ATSW/TEST/NOR/SE	TEST/NORMAL/SERVICE
AUDIO IN [L]	AUDIO INPUT (L)
AUDIO IN [R]	AUDIO INPUT (R)
AUDIO OUT [L]	AUDIO OUTPUT (L)
AUDIO OUT [R]	AUDIO OUTPUT (R)
AUDIO SELECT [H]	AUDIO SELECT Ⓗ
AUDIO. L	AUDIO (L)
AUDIO. R	AUDIO (R)
AV CNT	AV CONTROL
AV CTL	AV CONTROL
AV CTL/S. CLK	AV CONTROL/SERIAL CLOCK
AV. C.M.	AV CONTROL MODE
AVCNT/METER. R	AV CONTROL/LEVEL METER (R)
AVSW/METER. L	AV SW/LEVEL METER (L)
B MODE. H	B MODE Ⓗ
B.G.P	BURST GATE PULSE
BACKUP 5V	BACK UP 5V
BAND. U.E.	BAND U
BANDVL. D	BAND VL
BI/MI [L]	BILINGUAL/MIX Ⓛ
BIL	BILINGUAL
BIL [L]	BILINGUAL Ⓛ
BIL. [H]	BILINGUAL Ⓗ
BIL/M1 [L]	BILINGUAL Ⓛ
BS CLOCK	BS CLOCK
BS DATA	BS DATA
BS LCH IN	BS L CHANNEL INPUT
BS MIX [H]	BS MIX Ⓗ
BS MON [H]	BS MONITOR Ⓗ
BS MONI [H]	BS MONITOR Ⓗ
BS RCH IN	BS R CHANNEL INPUT
BS VIDEO	BS VIDEO SIGNAL
BS VIDEO/BS1	BS VIDEO SIGNAL
BS [H]	BS Ⓗ
BS. LEVEL	BS LEVEL
BS. M [H]	BS MONITOR Ⓗ
BS/VTR [H]	BS/VTR Ⓗ
BUS CLK	BUS CLOCK
BUS LSN	BUS LISTEN
BUS TLK	BUS TALK
BUZZER	BUZZER
CAP EC	CAPSTAN TORQUE CONTROL
CAP M GND	CAPSTAN MOTOR GND
CAP. ET	CAPSTAN TORQUE CONTROL
CAP. FG1	CAPSTAN FG1 PULSE
CAP. FG2	CAPSTAN FG2 PULSE
CAS. SW	CASSETTE SW
CCN	PLAYBACK CONTROL SIGNAL (–)
CCP	PLAYBACK CONTROL SIGNAL (+)
CHM	CONTROL SIGNAL (+)
CHP	CONTROL SIGNAL (–)
CINEM [L]	CINEMA Ⓛ
CINEMA [L]	CINEMA Ⓛ
CINEMA/MIX	CINEMA/MIX
CKL	RATCH LOCK
CKS	SHIFT LOCK
CL	CLOCK
CLK	CLOCK
CLK (C.G)	CLOCK
CLOCK. IN	CLOCK INPUT
CLP	CLAMP
COL/B/W/NOR	COLOUR/BLACK & WHITE/NORMAL
COLOR [H]	COLOUR Ⓗ
CONV	CONVERTOR
CS	CHIP SELECT
CTL GND	CONTROL GND
CTL HEAD [+]	CONTROL HEAD (+)
CTL HEAD [–]	CONTROL HEAD (–)
CTL [+]	CONTROL HEAD (+)
CTL [–]	CONTROL HEAD (–)
CUE BIAS	CUE BIAS
CURRENT LIM	CURRENT LIMMITER
CYL ET	CYLINDER TORQUE CONTROL

CYL GND	CYLINDER GND
D.F.M. REC [H]	DELAIED FM RECORDING Ⓗ
D. FM REC [L]	DELAIED FM RECORDING Ⓛ
D. GND	DIGITAL GND
D. REC [H]	DELAYED RECORDING Ⓗ
D4/S. LED	D4/STILL LED
D4/STILLED	D4/STILL LED
DAC [CLK]	TUNER DAC (CLOCK)
DAC/FSCS	TUNER DAC/FS CHIP SELECT
DAREC [H]	DELAYED AUDIO RECORDING Ⓗ
DATA	DATA
DECODER [L]	DECODER (L)
DECODER [R]	DECODER (R)
DEW	DEW
DEW SNS	DEW SENSOR
DFMRE [H]	DELAYED FM AUDIO RECORDING Ⓗ
E. REC 5V	EXCEPT RECORDING 5V
EC	ERROR TORQUE CONTROL
ECR	ERROR TORQUE CONTROL REFERENCE VOLTAGE
EDT TRIG [L]	EDIT TRIGGER Ⓛ
EDIT [H]	EDIT Ⓗ
EE [H]	EE Ⓗ
EE [H]/INS [M]	EE Ⓗ/INSERT Ⓜ
EE. VV. TR	EE/VV/TRICK PLAY
EJECT. PO	EJECT POSITION
EJECT/VDET	EJECT/REVERSE SLOW LOCK
ENV. SEL	ENVELOPE SELECT
ENVE. OUT	ENVELOPE OUTPUT
ENVE. SEL	ENVELOPE SELECT
ENV SELECT	ENVELOPE SELECT
EP [H]	LP Ⓗ
EP/LP [H]	LP Ⓗ
EP/LP/SP	LP/SP
EP/SS [H]	LP/SLOW/STILL/STOP Ⓗ
EPROMCS	EPROM CHIP SELECT
EX. REC 5V	EXCEPT RECORDING 5V
FF/REW [L]	FIRST FORWARD/REWIND Ⓛ
FG1 IN	FG1 PULSE INPUT
FG2 IN	FG2 PULSE INPUT
FILTER ADJUSTMENT	FILTER ADJUSTMENT
FLY ERASE [H]	FLYING ERASE HEAD ON Ⓗ
FLY ON [H]	FLYING ERASE HEAD ON Ⓗ
FLY. E [H]	FLYING ERASE HEAD ON Ⓗ
FM MUT [H]	FM AUDIO MUTE Ⓗ
FM MUTE [H]	FM AUDIO MUTE Ⓗ
FM OUT [L]	FM OUTPUT (L)
FM OUT [R]	FM OUTPUT (R)
FM PACK OUT [L]	FM PACK OUTPUT (L)
FM PACK OUT [R]	FM PACK OUTPUT (R)
FM/BS SEL [L]	FM/BS SELECT (L)
FM/BS SEL [R]	FM/BS SELECT (R)
FS. CLK	FS CLOCK
FUL. E [H]	FULL ERASE HEAD ON Ⓗ
FULL. E [H]	FULL ERASE HEAD ON Ⓗ

FULL. E. 12V	FULL ERASE 12V
GND [A]	GND (ANALOG)
GND [TU]	GND (TUNER)
GND/N. SW. 12V	GND/NON SW 12V
H. SYNC	HORIZONTAL SYNC
H. AMP. SW	HEAD AMP SW PULSE
H. P <R>	HEAD PHONE (R)
H. P <L>	HEAD PHONE (L)
H. P GND	HEAD PHONE GND
H. P OUT [L]	HEAD PHONE OUTPUT (L)
H. P OUT [R]	HEAD PHONE OUTPUT (R)
H. SW	HEAD SW PULSE
HEAD PHONE [L]	HEAD PHONE (L)
HEAD PHONE [R]	HEAD PHONE (R)
HEAD SW	HEAD SW
HEATER [+]	HEATER (+)
HEATER [–]	HEATER (–)
HSS	HORIZONTAL SYNC SIGNAL
HTR [+]	HEATER (+)
HTR [–]	HEATER (–)
I RFE	REFERENCE CURRENT
ICL	CONTROL AGC CIRCUIT
IF	INTERMEDIATE FREQUENCY
IN SELA1	INPUT SELECT A1 POSITION
IN SELA2	INPUT SELECT A2 POSITION
IN SELA3	INPUT SELECT A3 POSITION
INS L/R [L]	INSERT Lch/Rch Ⓛ
INS. [H]	INSERT Ⓗ
INSEL A1	INPUT SELECT A1 POSITION
INSEL A2	INPUT SELECT A2 POSITION
INSERT	INSERT
INSERT [H]	INSERT Ⓗ
IO CS	INPUT/OUTPUT CHIP SELECT
JOG1	JOG1
JOG S3 LED/FOWRD	JOG LED/FORWARD LED
JOG/F. LED	JOG LED/FORWARD LED
JSB [H]	JSB Ⓗ
JST. CLCK	JUST CLOCK
JST. CLK	JUST CLOCK
JST. CLOCK	JUST CLOCK
L. OUT	Lch OUTPUT
L. CH [H]	Lch Ⓗ
L. CH [L]	Lch Ⓛ
LED (MAIN)	LED (MAIN)
LED (STEREO)	LED (STEREO)
LED (SUB)	LED (SUB)
LED CKL	LED SERIAL CLOCK
LED CKS	LED SERIAL CLOCK
LED DATA	LED SERIAL DATA
LINE IN 1 [L]	LINE INPUT 1 (L)
LINE IN 1 [R]	LINE INPUT 1 (R)
LINE IN 2 [L]	LINE INPUT 2 (L)
LINE IN 2 [R]	LINE INPUT 2 (R)
LINE IN V	LINE INPUT VIDEO
LINE IN [L]	LINE INPUT (L)

LINE IN [R]	LINE INPUT (R)
LINE OUT [L]	LINE OUTPUT (L)
LINE OUT [R]	LINE OUTPUT (R)
LP [H]	LP Ⓗ
LPTRI [L]	LP TRICK PLAY Ⓛ
Lch/A. DUB	Lch/AUDIO DUBBING
M GND	MOTOR GND
M REG	MOTOR REGULATOR
MAIN OUT	MAIN OUTPUT
MAIN [L]	MAIN Ⓛ
MAIN/MONO	MAIN/MONAURAL
MAX IN	MAXIMAM INPUT
MES [H]	MESECAM Ⓗ
MESE [H]	MESECAM Ⓗ
MESE [L]	MESECAM Ⓛ
METER 5V	LEVEL METER 5V
METER [L]	LEVEL METER (L)
METER [R]	LEVEL METER (R)
METER. L/AVS	LEVEL METER (L)
METER. R/AVC	LEVEL METER (R)
MI/BI [L]	MIX Ⓗ/BILIGUAL
MIC GND	MIC GND
MIC IN	MIC INPUT
MIC IN [L]	MIC INPUT (L)
MIC IN [R]	MIC INPUT (R)
MIC [H]	MIC Ⓗ
MIX [H]	MIX Ⓗ
MIX [H]/CINEMA [L]	MIX Ⓗ/CINEMA SOUND Ⓛ
MIX/CINE	MIX Ⓗ/CINEMA SOUND Ⓛ
MIX/CINEMA [L]	MIX Ⓗ/CINEMA SOUND Ⓛ
MN. H/M. L	MONAURAL Ⓗ/MAIN Ⓛ
MN. H/MAI. L	MONAURAL Ⓗ/MAIN Ⓛ
MN2/MES. L	MONAURAL 2/MESECAM Ⓛ
MODE SEL	AUDIO MODE SELECT
MODE SW	AUDIO MODE SW
MODE. S. IN	AUDIO MODE SELECT INPUT
MODE. S. OUT	AUDIO MODE SELECT OUTPUT
MONO [H]	MONAURAL Ⓗ
MONO [H]/MAIN [L]	MONAURAL Ⓗ/MAIN Ⓛ
MONO2 [L]	MONAURAL 2
MONO2/MESE [FM(L)]	MONAURAL 2/MESECAM (FM Ⓛ)
MOTOR GND	MOTOR GND
MUTE	MUTE
N. A. REC [L]	NORMAL AUDIO RECORDING
N. SW 12V	NON SW 12V
N. SW. 5. DET	NON SW 5V DETECT
NICAM	NICAM
NICAM [L]	NICAM Ⓛ
NOL [H]	PAL Ⓗ/4.43 NTSC Ⓜ/3.58 NTSC Ⓛ
NOR/SOFT [H]	NORMAL/SOFT TAPE PLAY Ⓗ
NORMAL [H]	NORMAL Ⓗ
NR BIAS	NR BIAS
NTSC [L]	NTSC Ⓛ
OCH	CONTROL AGC CIRCUIT
OUT	OUTPUT

P-OFF [H]	POWER OFF Ⓗ
P-OFF [L]	POWER OFF Ⓛ
P. FAIL	POWER FAILURE DETECT
P. OFF [H]	POWER OFF Ⓗ
P. OFF [L]	POWER OFF Ⓛ
PAL [H]	PAL Ⓗ
PAL [L]/NTSC [H]	PAL Ⓛ/NTSC Ⓗ
PB ADJ OUT	PLAYBACK ADJUST OUTPUT
PB OUT	PLAYBACK OUTPUT
PB. H	PLAYBACK Ⓗ
PFG	PG/FG
PHOTSN +B	PHOTO SENSOR +B
PICT. CNT	PICTURE CONTROL
PLAY LED/RVS LED	PLAY LED/REVERSE LED
PLAY. PO	PLAY POSITION
PLAY/R. LED	PLAY LED/REVERSE LED
PLY/DEW	PLAY/DEW Ⓗ
POWER OFF [L]	POWER OFF Ⓛ
PREROLL [H]	PREROLL Ⓗ
PWRFAIL	POWER FAILURE DETECT
R. CH [H]	Rch Ⓗ
R. CH [L]	Rch Ⓛ
R. ST	RESET
R/S/F	REVERSE Ⓗ/STOP Ⓜ/FORWARD Ⓛ
RCH [H]	Rch Ⓗ
REC 12V	RECORDING 12V
REC CHROMA	RECORDING CHROMINANCE SIGNAL
REC H	RECORDING Ⓗ
REC IN	RECORDING INPUT
REC OUT [L]	RECORDING OUTPUT Ⓛ
REC START	RECORDING START
REC VR [C]	RECORDING VOLUME (COMMON)
REC VR [L]	RECORDING VOLUME (L)
REC VR [R]	RECORDING VOLUME (R)
REC Y	RECORDING LUMINANCE SIGNAL
REC [H]	RECORDING Ⓗ
REC. C	RECORDING CHROMINANCE SIGNAL
REC. Y	RECORDING LUMINANCE SIGNAL
REC/EE CTL	RECORDING/EE CONTROL
REEL-T	REEL PULSE (TAKE-UP)
REEL-S	REEL PULSE (SUPPLY)
REGULATOR FILTER	REGULATOR FILTER
RESET	RESET
REV M F/R	REVIEW MOTOR FORWARD/REVERSE
REV M V1	REVIEW MOTOR V1
REV M V2	REVIEW MOTOR V2
REV MOTOR F/R	REVIEW MOTOR FORWARD/REVERSE
REV MOTOR V1	REVIEW MOTOR V1
REV MOTOR V2	REVIEW MOTOR V2
REV MOTOR [+]	REVIEW MOTOR (+)
REV MOTOR [–]	REVIEW MOTOR (+)
REV. M. GND	REVIEW MOTOR GND
RF. CHROMA	RF CHROMINANCE SIGNAL

RF OUT	RF OUTPUT
RF Y	RF LUMINANCE SIGNAL
RF. Y. IN	RF LUMINANCE SIGNAL INPUT
RF. Y. OUT	RF LUMINANCE SIGNAL OUTPUT
ROTAR. SW	ROTARY SW
ROTARY	ROTARY SW
RST	RESET
RST [L]	RESET Ⓛ
Rch/INST	Rch/INSERT
S IN	SERIAL DATA INPUT
S OUT	SERIAL DATA OUTPUT
S-PHOTO	SUPPLY PHOTO TRANSISTOR
S-RL. PLS	SUPPLY REEL PULSE
S. CLK	SERIAL CLOCK
S. CLK/AV	SERIAL CLOCK/AV
S. DATA	SERIAL DATA
S. DATA/A	SERIAL DATA
S. PHOTO	SUPPLY PHOTO TRANSISTOR
S. TAB [L]	SAFETY TAB SW ON Ⓛ
S/P/N	SECAM/PAL/NTSC
SC IN	SERIAL CLOCK INPUT
SC OUT	SERIAL CLOCK OUTPUT
SCK SELECT	SERIAL CLOCK SELECT
SEL OUT [L]	SELECT OUTPUT (L)
SEL OUT [R]	SELECT OUTPUT (R)
SHUTTLE 1	SHUTTLE 1
SIF	SOUND INTERMEDIATE FREQUENCY
SLMUT [H]	INPUT SELECT MUTE Ⓗ
SLNID [+]	SOLENOID (+)
SLNID [–]	SOLENOID (–)
SLW TR. MM	SLOW TRACKING MONO MULTI
SLW TR. REF	SLOW TRACKING REFERENCE VOLTAGE
SNS. GND	SENSOR GND
SOFT [H]	SOFT TAPE PLAY Ⓗ
SOFT [H]/NORMAL	SOFT TAPE PLAY Ⓗ/NORMAL Ⓗ
SOLENOID ON [L]	SOLENOID ON Ⓛ
SP [H]	SP Ⓗ
SP/L/SLP	SP/LP
SSS [L]	SLOW/STILL/STOP
STEREO LED	STEREO LED
STEREO [H]	STEREO Ⓗ
STEREO [L]	STEREO Ⓛ
STOP. PO	STOP POSITION
STOP/5V	STOP POSITION/5V
STOP1/TAPE SEL	STOP1 POSITION/TAPE SELECT
STOP1/PAL:ST	STOP1 POSITION/PAL
STOP2. PO	STOP 2 POSITION
STOP2/S-TAB	STOP 2 POSITION/SAFETY TAB SW
STREO [H]	STEREO Ⓗ
SUB BIAS	SUB BIAS
SUB. SW	SUB SW
SVHS CAS [L]	S-VHS CASSETTE Ⓛ
SW. 5. DET	SW 5V DETECT
SYNC [L]	SYNC Ⓛ
SYSCON 5V	SYSTEM CONTROL 5V
SYSTEM	SYSTEM SW
T-PHOTO	TAKE-UP PHOTO TRANSISTOR
T-RL. PLS	TAKE-UP REEL PULSE
T. BUSCLK	TIMER BUS CLOCK
T. BUSLSN	TIMER BUS LISTEN
T. BUSTLK	TIMER BUS TALK
T. END [L]	TAPE END Ⓛ
T. PHOTO	TAKE-UP PHOTO TRANSISTOR
TAPE END [L]	TAPE END Ⓛ
TAPE END [L]/CAM	TAPE END Ⓛ/CAMERA PAUSE
TEST	TEST MODE
TPZ	TRAPEZOIDAL WAVE CIRCUIT
TRIC [L]	TRIC PLAY Ⓛ
TRICK [L]	TRIC PLAY Ⓛ
TRK. ENV	AUTO TRACKING ENVELOPE DETECT
TU. AUDIO	TUNER AUDIO
TU. GND	TUNER GND
TU. V. IN	TUNER VIDEO SIGNAL INPUT
TU. VIDEO	TUNER VIDEO
TUN NOR IN	TUNER NORMAL INPUT
TUN R	TUNER AUDIO (R)
TUN. AUDIO IN	TUNER AUDIO INPUT
TUNER 12V	TUNER 12V
TUNER L	TUNER AUDIO (L)
TUNER V IN	TUNER VIDEO SIGNAL INPUT
TUNER [L]	TUNER AUDIO (L)
TUNER [N]	TUNER AUDIO (NORMAL)
TUNER [R]	TUNER AUDIO (R)
TUNER. 12	TUNER 12V
TUOFF [H]	TUNER OFF Ⓗ
TV. AUDIO	TV AUDIO
TV/VTR	TV/VTR
TXTON [L]	TEXT ON Ⓛ
U. REG45V	UNREGULATOR 45V
UNREG	UNREGULATOR
UNREG19V	UNREGULATOR 19V
V. REF	REFERENCE VOLTAGE
V. EE [H]	VIDEO EE Ⓗ
V. EE [L]	VIDEO EE Ⓛ
VCO REF	REFERENCE OSCILLATER
VD. IN	VIDEO SIGNAL INPUT
VD. OUT	VIDEO SIGNAL OUTPUT
VIDEO EE [L]	VIDEO EE Ⓛ
VIDEO IN	VIDEO SIGNAL INPUT
VIDEO OUT	VIDEO SIGNAL OUTPUT
VM	MOTOR VOLTAGE
VM DOWN [L]	MOTOR VOLTAGE DOWN Ⓛ
VSS	VERTICAL SYNC SIGNAL
VTR [H]	VTR Ⓗ
VTR. 12V	VTR 12V
X IN	OSCILLATOR INPUT
X OUT	OSCILLATOR OUTPUT

8 SCHEMATIC DIAGRAMS

8.1. POWER TRANSFORMER SECTION IN MAIN SCHEMATIC DIAGRAM

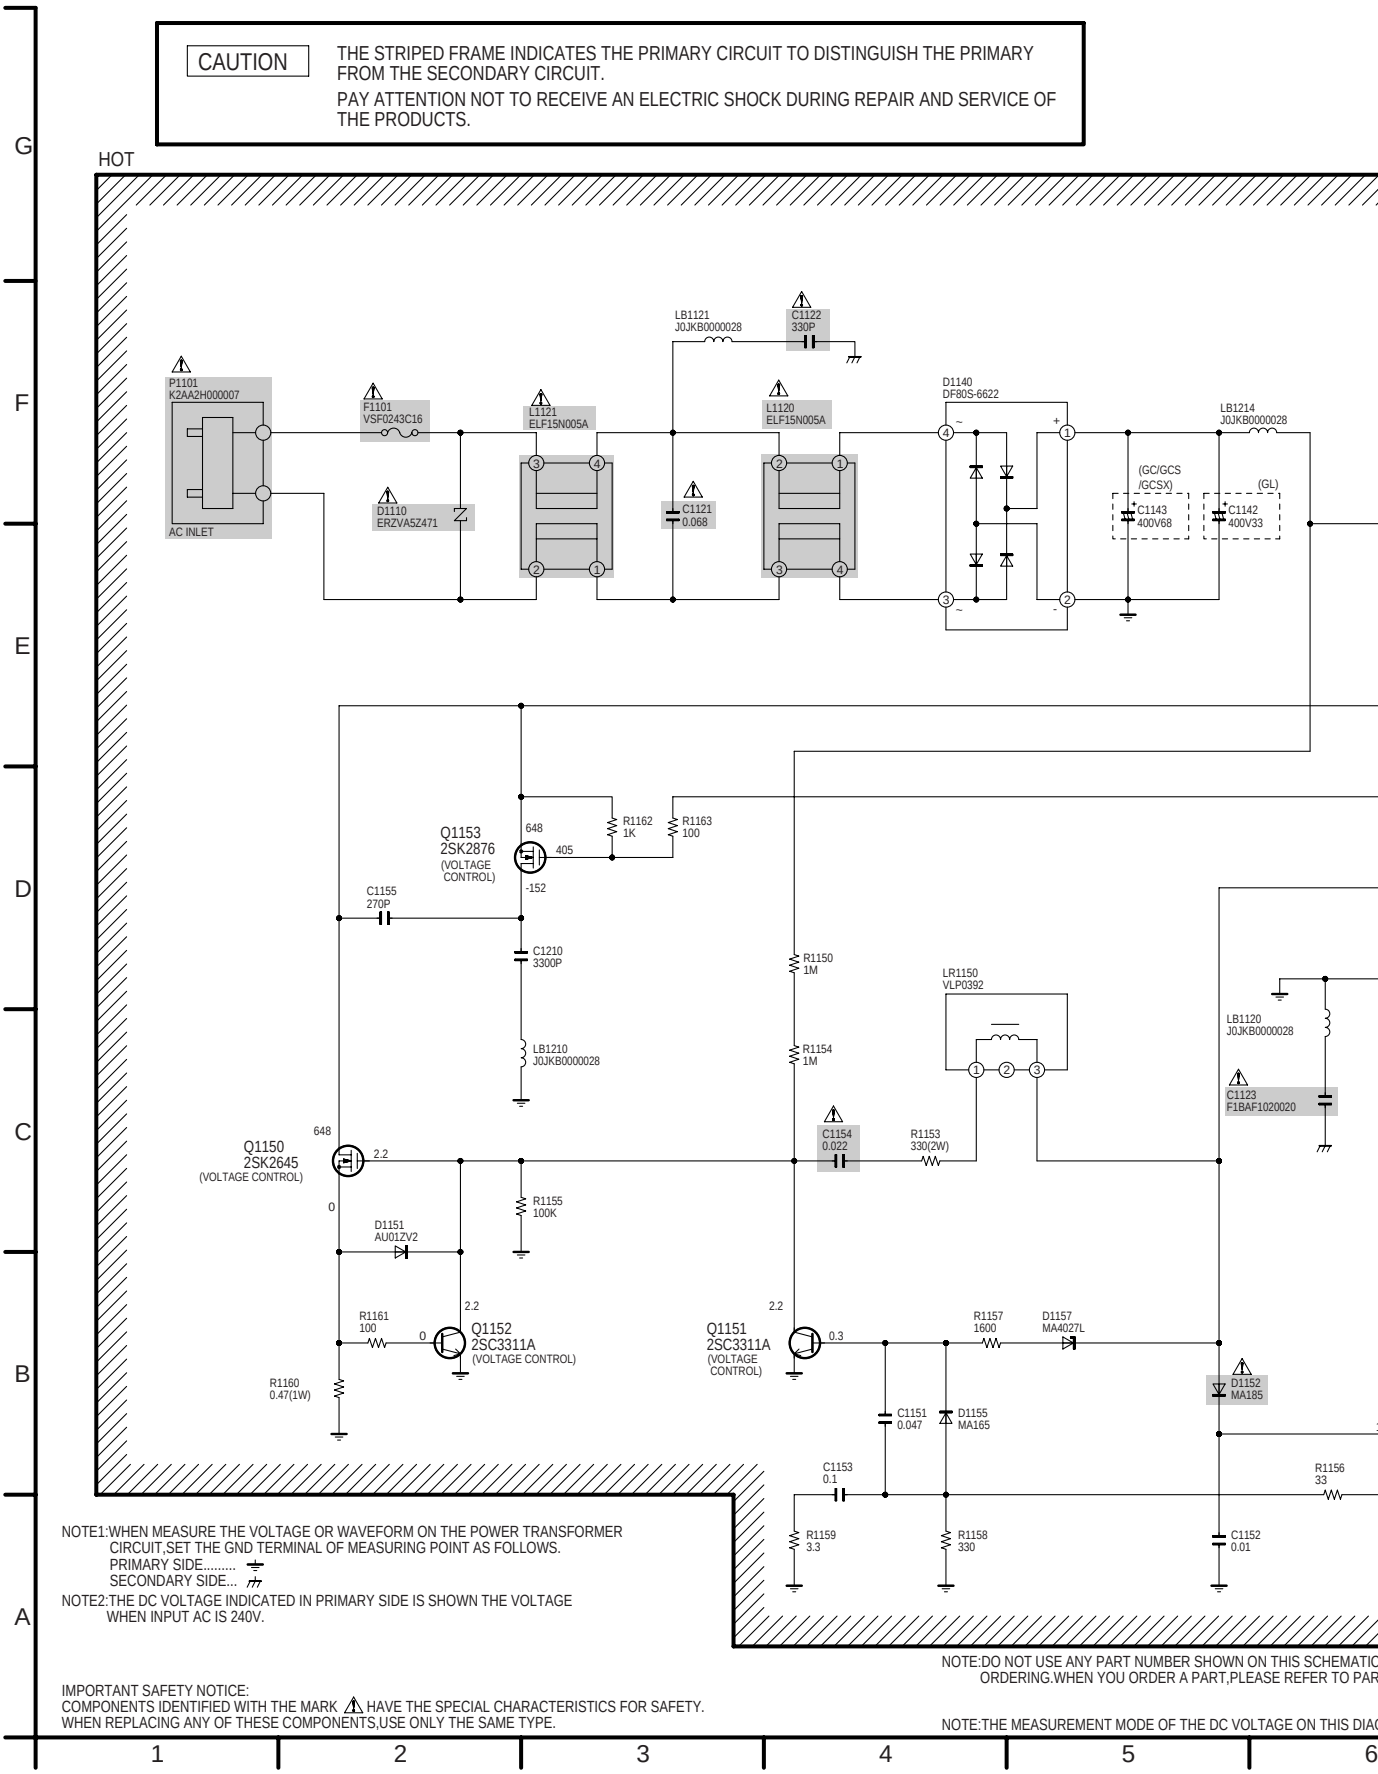

M

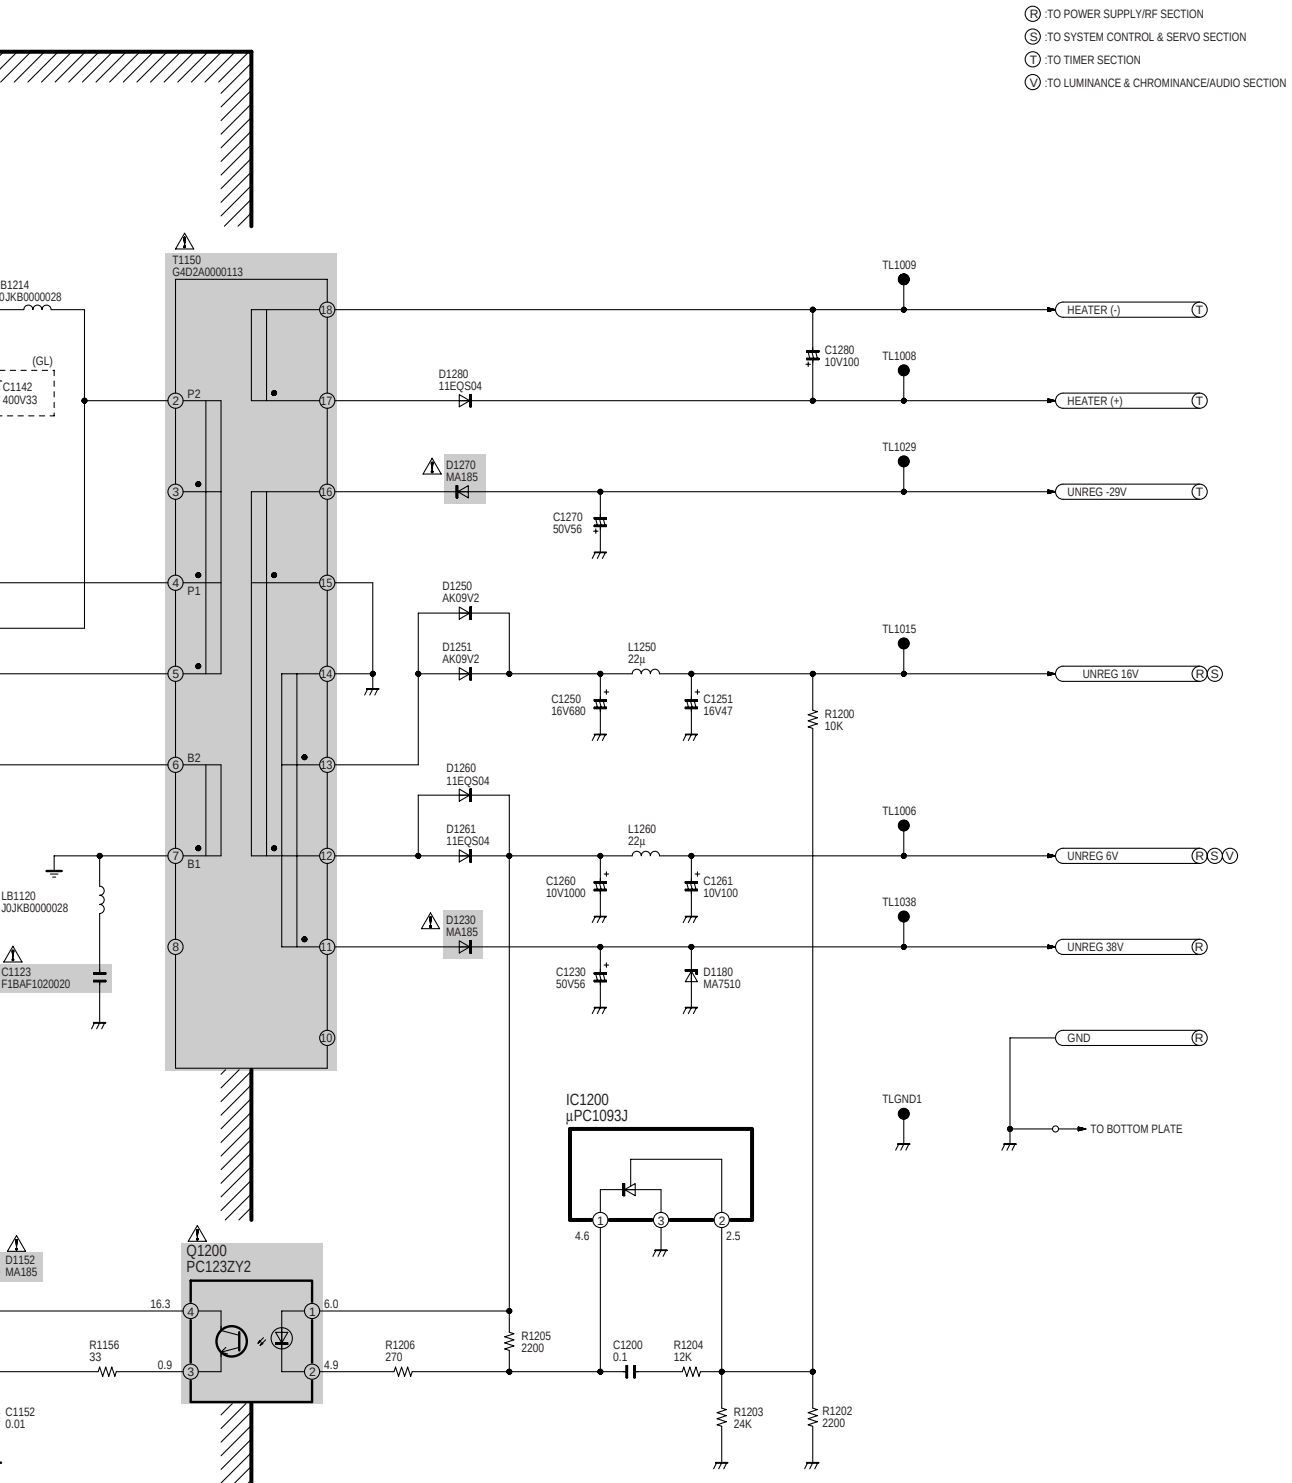

WN ON THIS SCHEMATIC DIAGRAM FOR
,PLEASE REFER TO PARTS LIST.

C VOLTAGE ON THIS DIAGRAM IS STOP MODE.

NV-HV61GL/GC/GCS/GCSX
POWER TRANSFORMER
SECTION SCHEMATIC DIAGRAM

6 | 7 | 8 | 9 | 10 | 11

8.2. POWER SUPPLY/ RF SECTION IN MAIN SCHEMATIC DIAGRAM

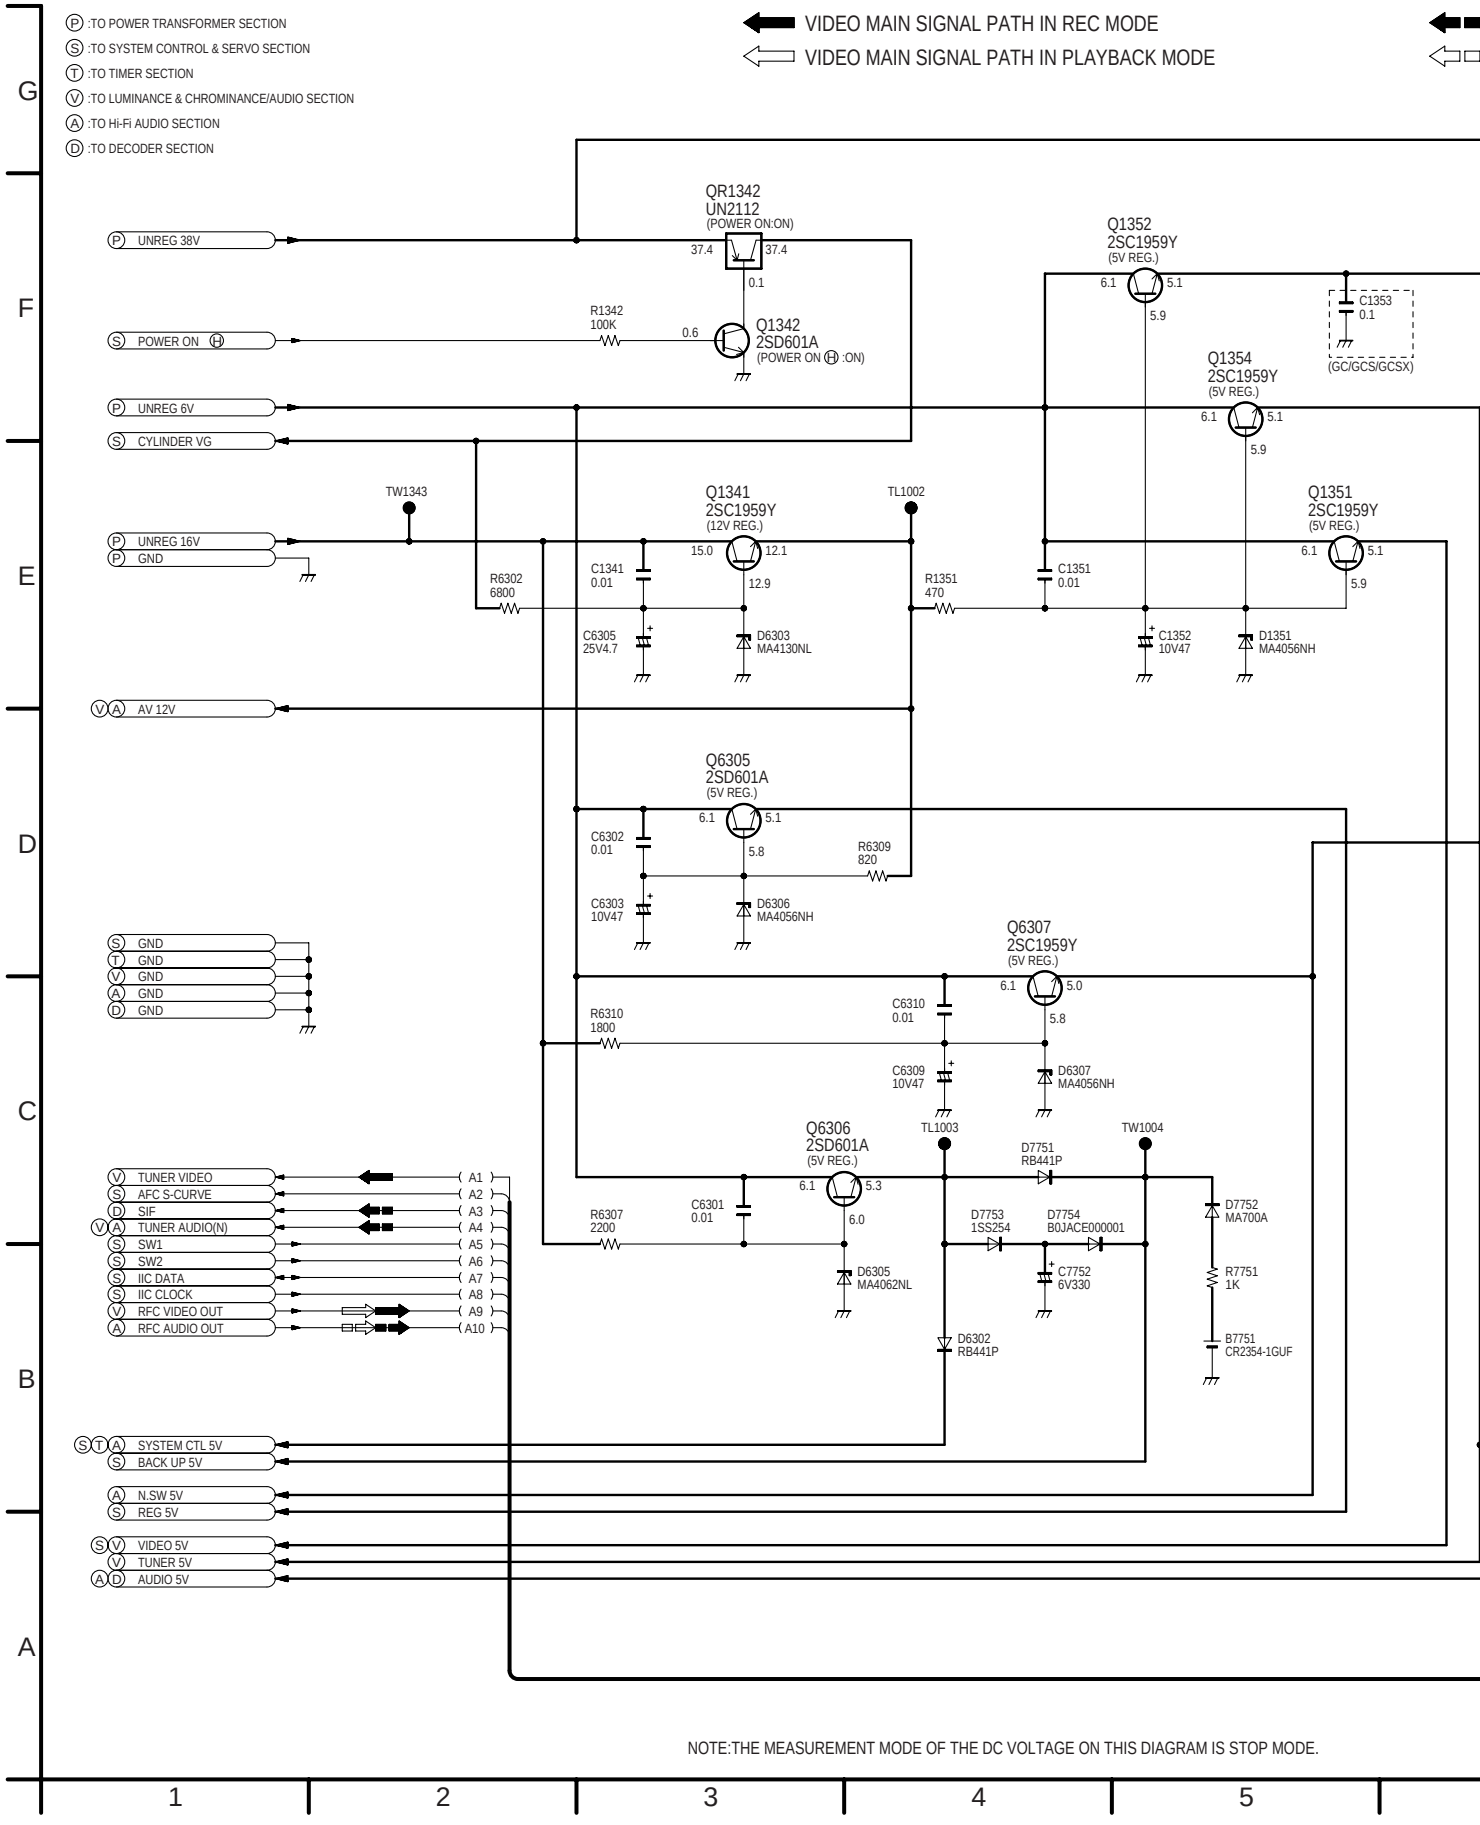

AUDIO MAIN SIGNAL PATH IN REC MODE

AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

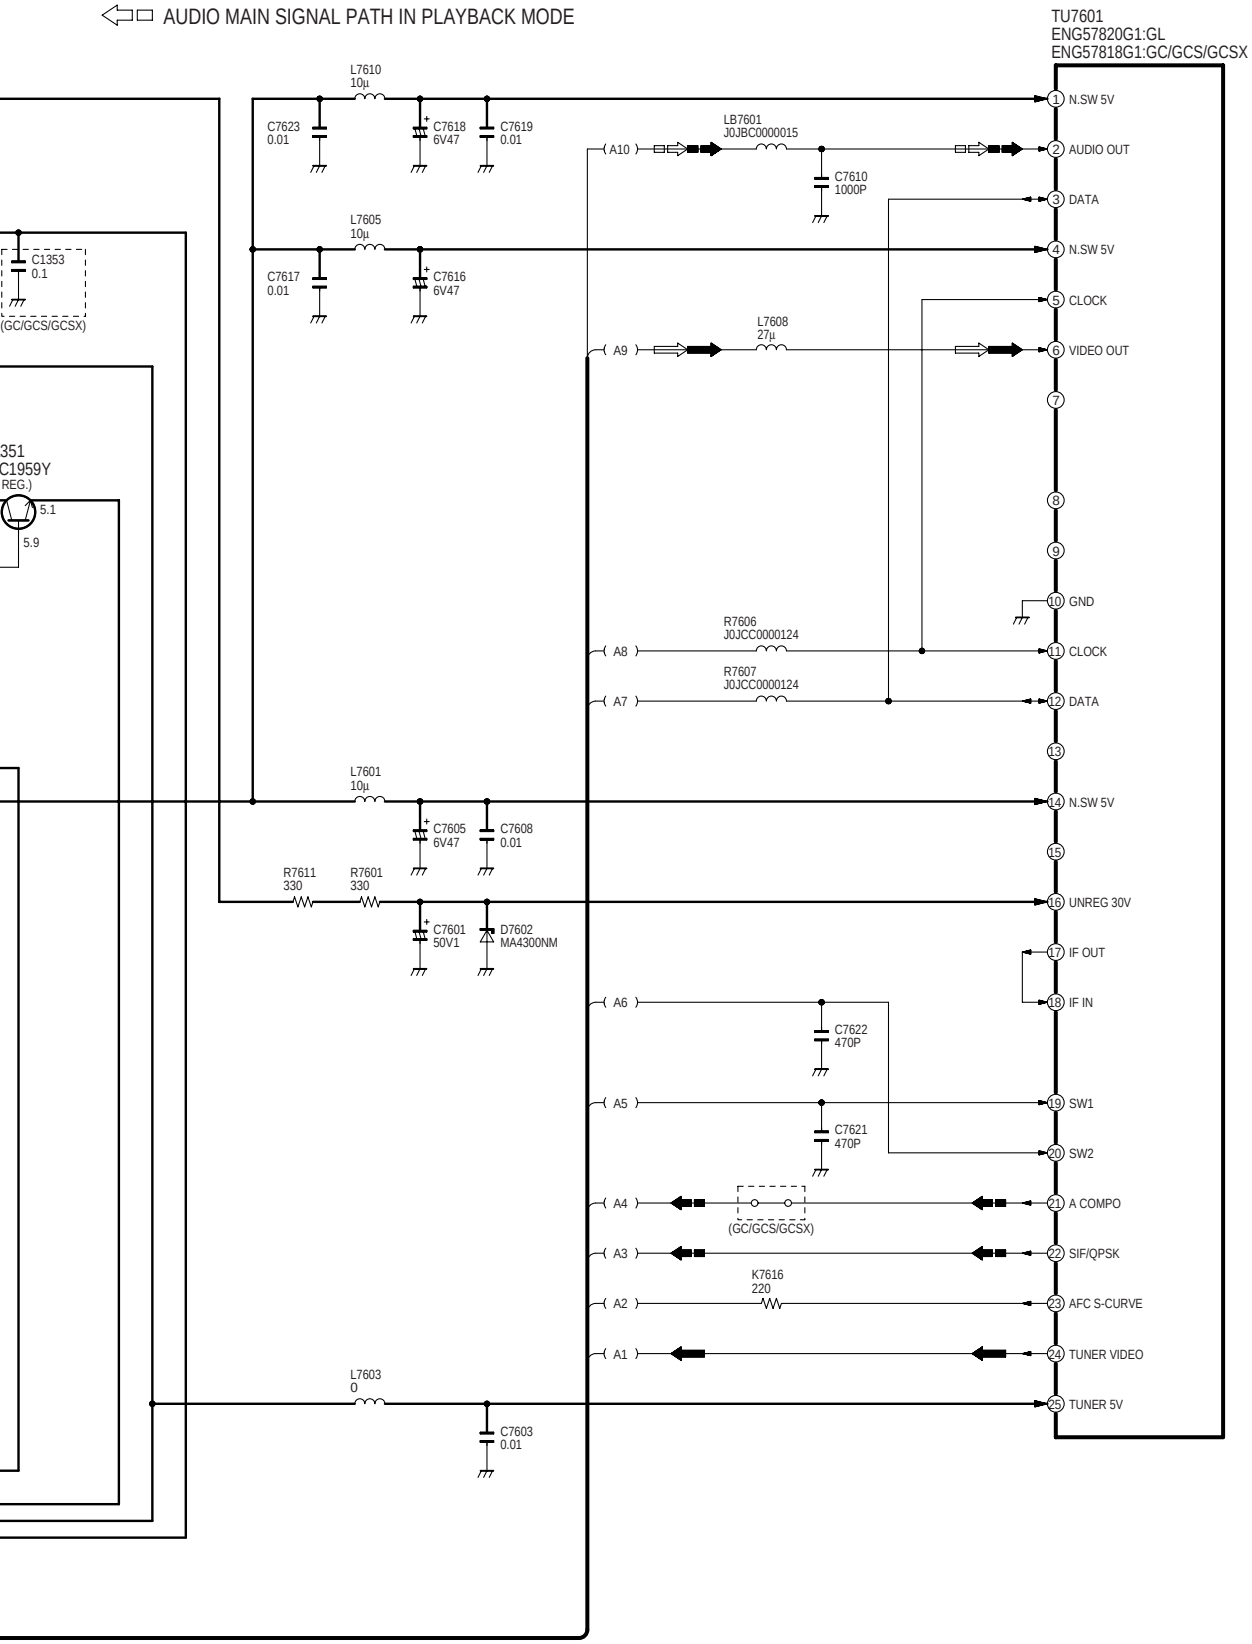

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
POWER SUPPLY/RF
SECTION SCHEMATIC DIAGRAM

6 | 7 | 8 | 9 | 10

8.3. TIMER SECTION IN MAIN SCHEMATIC DIAGRAM

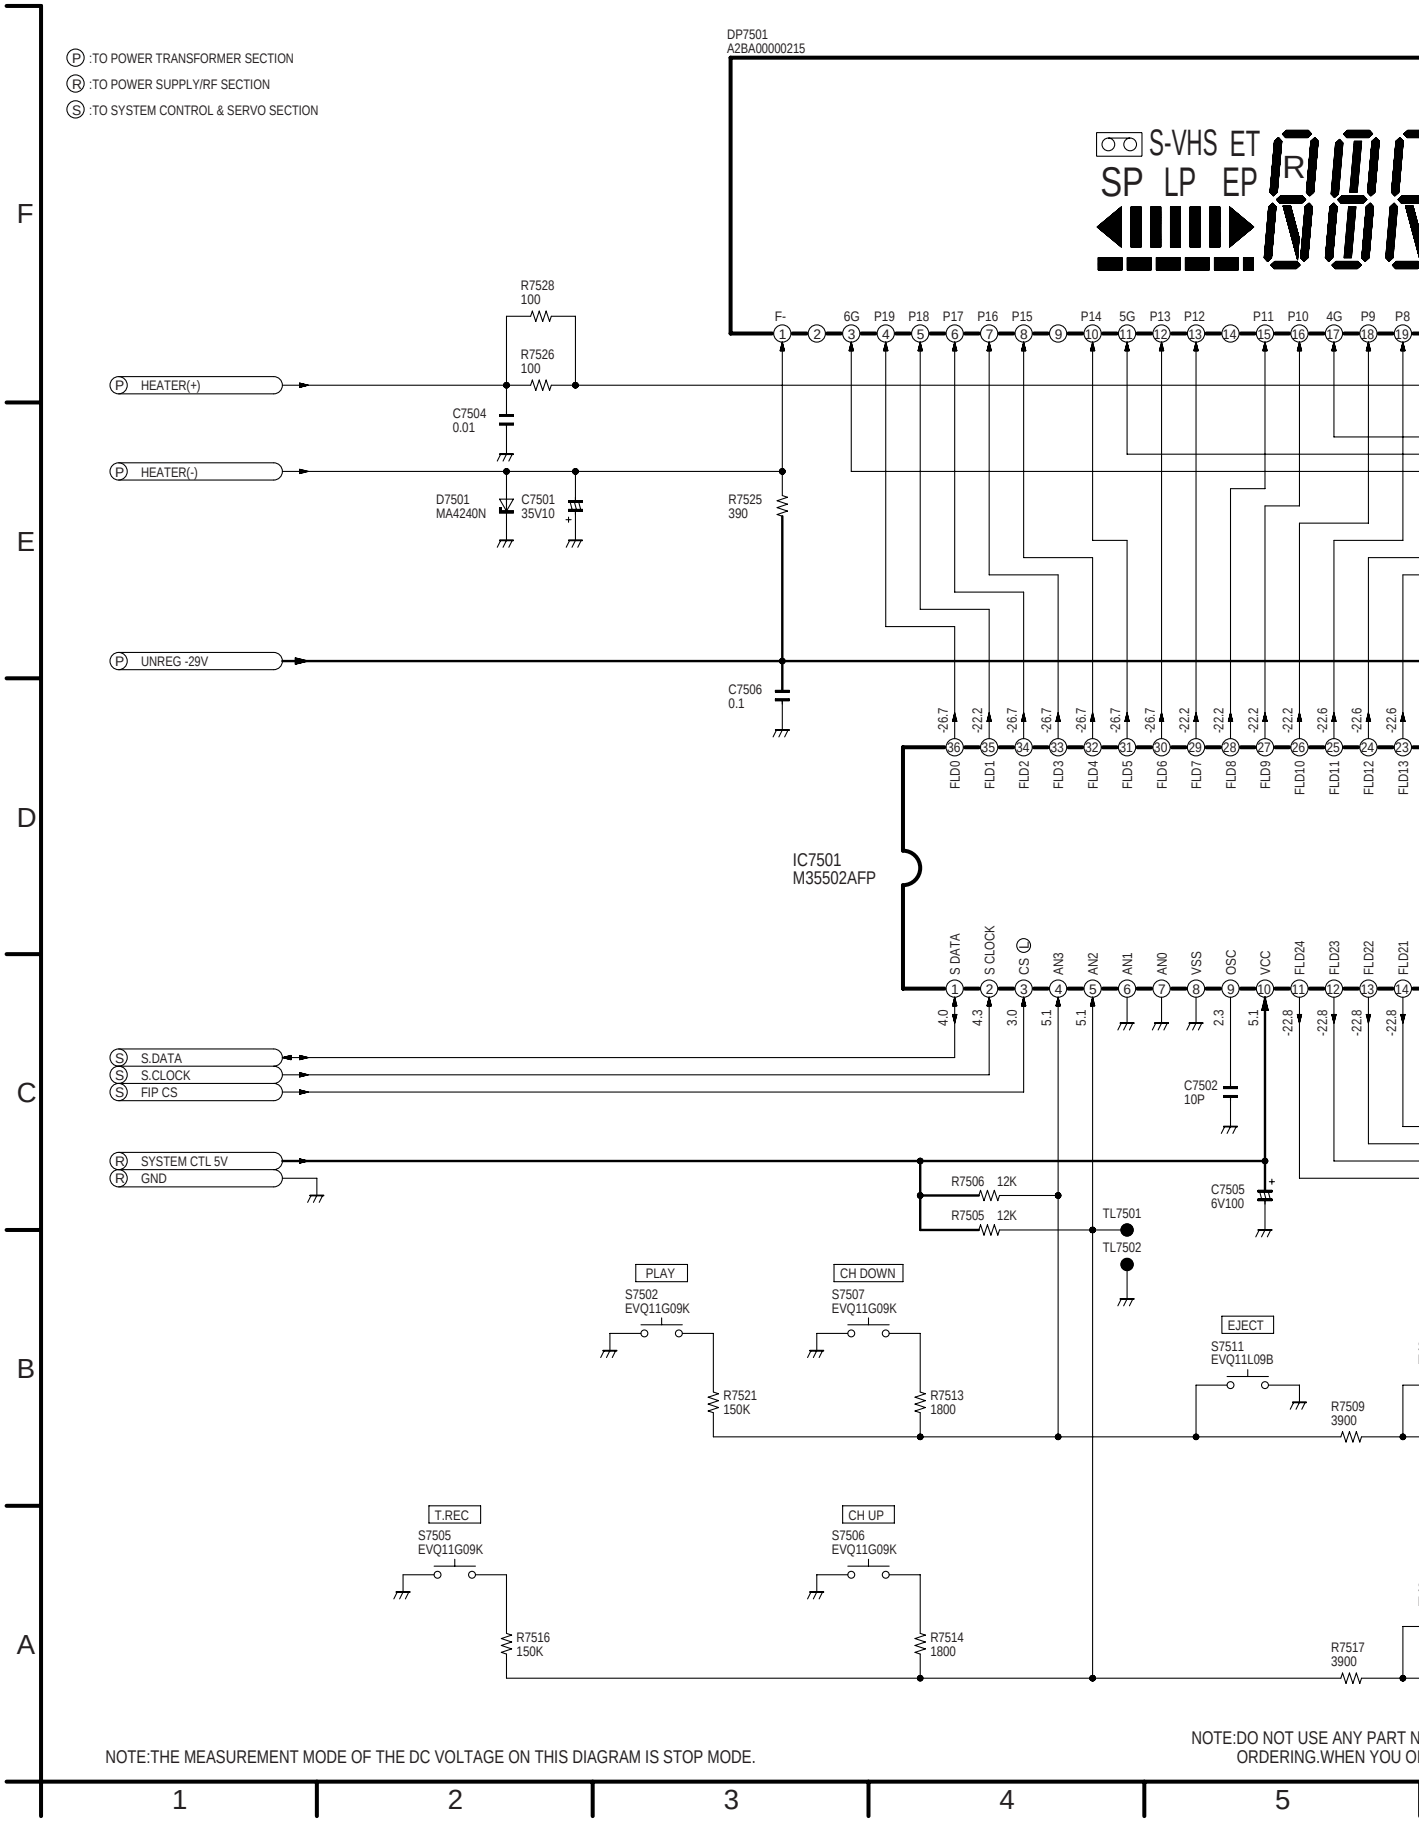

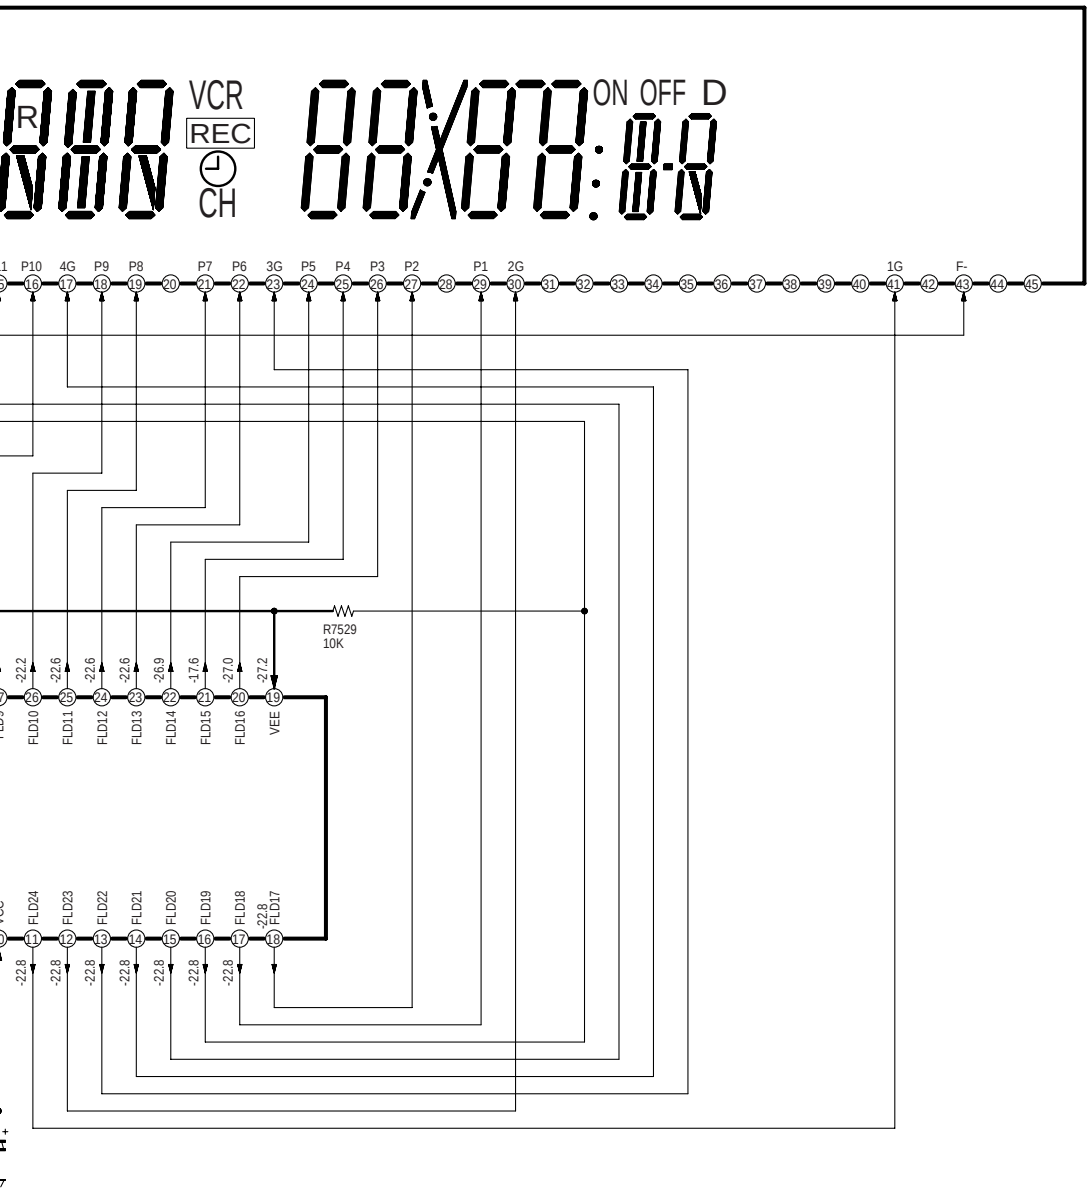
VCR
REC
CH
ON OFF D
P10 4G P9 P8 P7 P6 3G P5 P4 P3 P2 P1 2G 1G F-
R7529
10K
FLD10 FLD11 FLD12 FLD13 FLD14 FLD15 FLD16 VEE
FLD24 FLD23 FLD22 FLD21 FLD20 FLD19 FLD18 FLD17

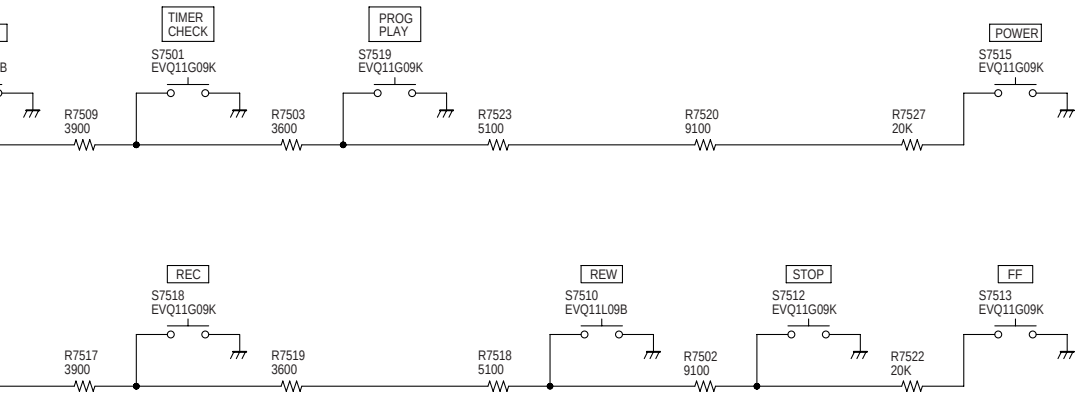

NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR
DERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
TIMER SECTION SCHEMATIC DIAGRAM

5 | 6 | 7 | 8 | 9 | 10

8.4. SYSTEM CONTROL & SERVO SECTION IN MAIN SCHEMATIC DIAGRAM

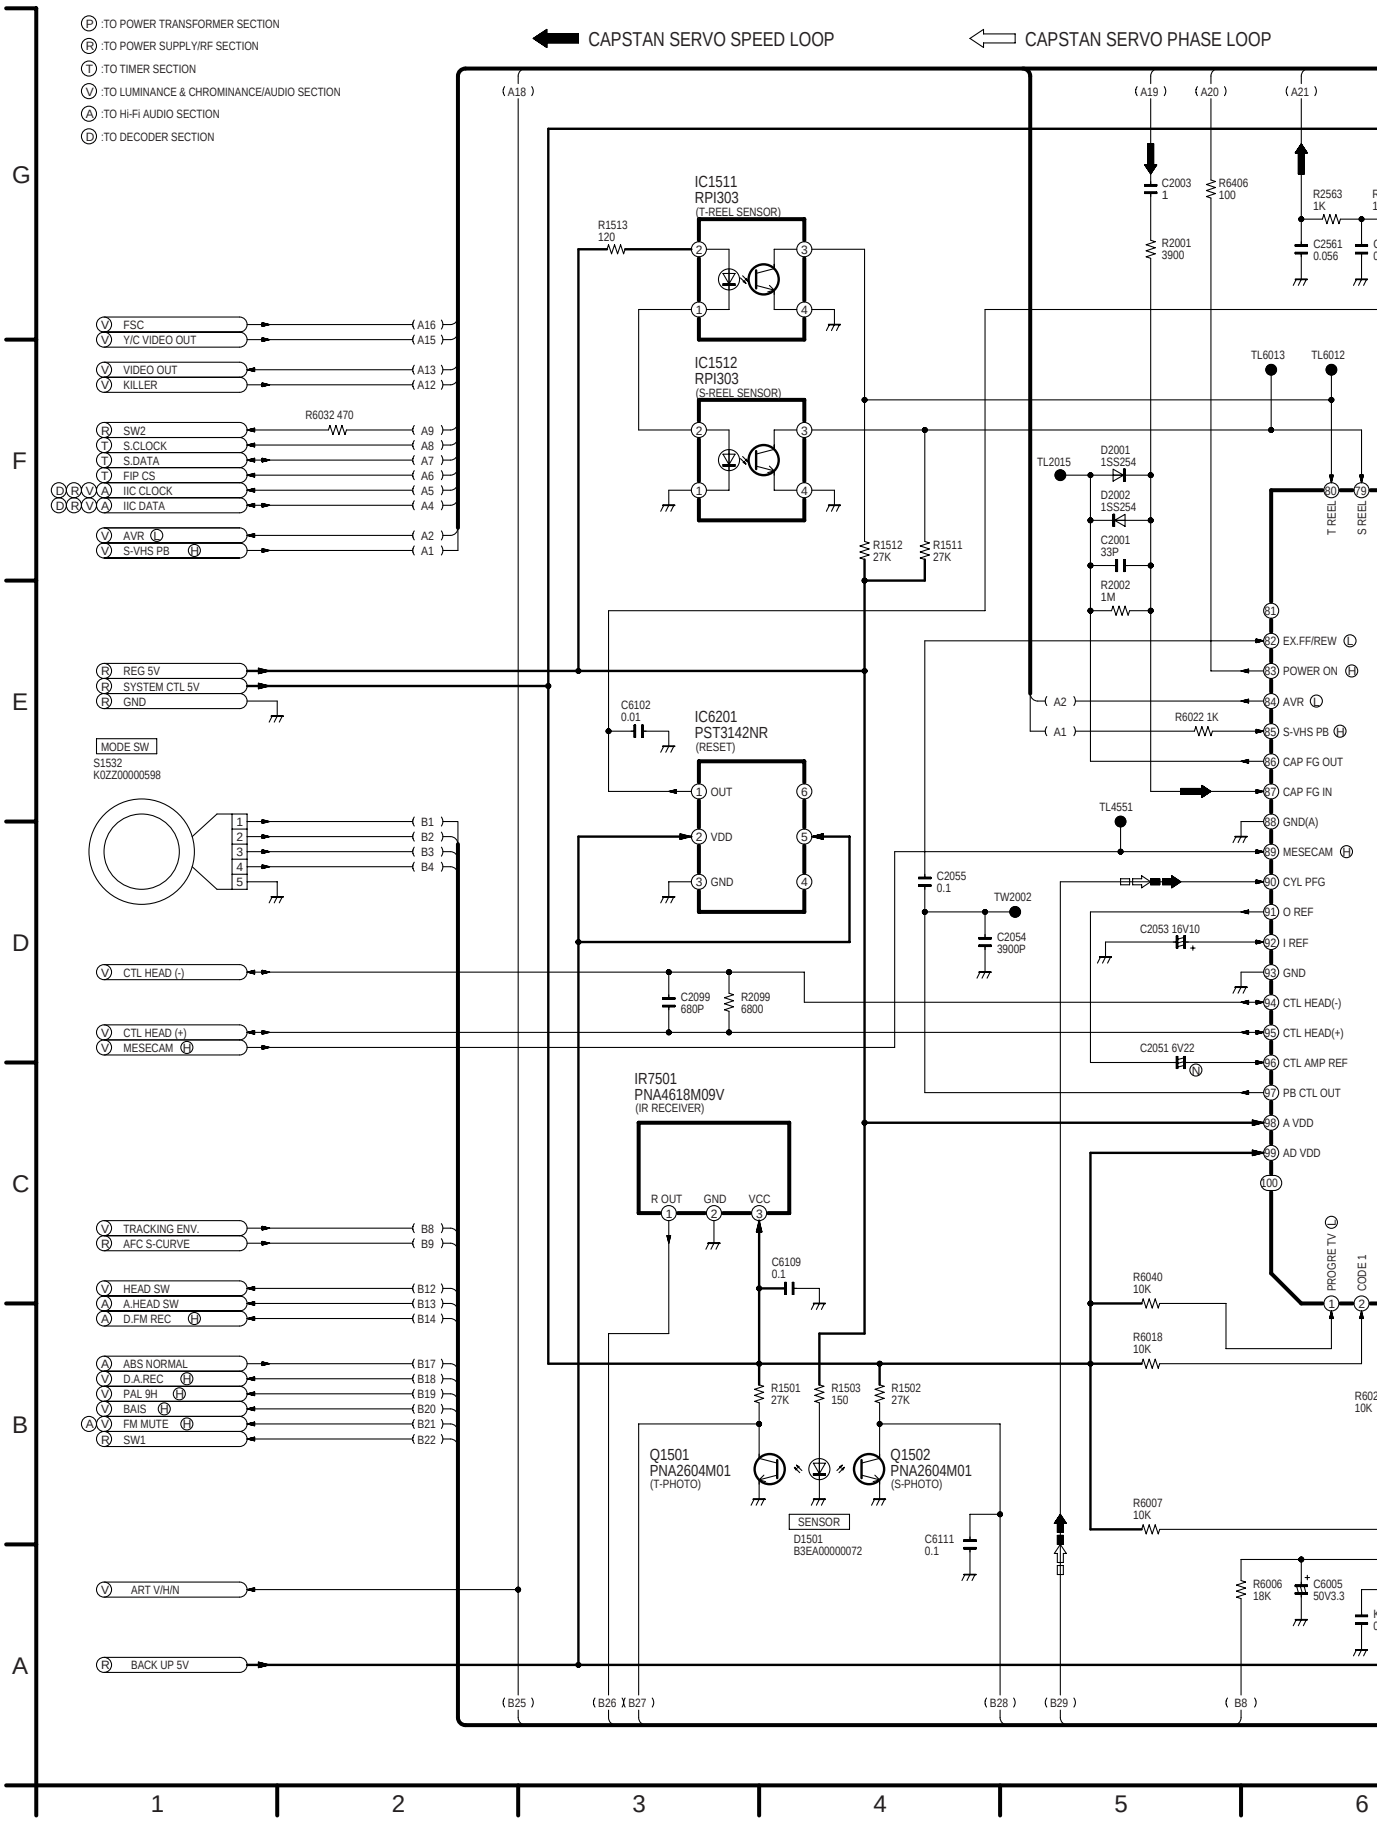

LOOP ◀■ CYLINDER SERVO SPEED LOOP ⇦□ CYLINDER SERVO PHASE LOOP

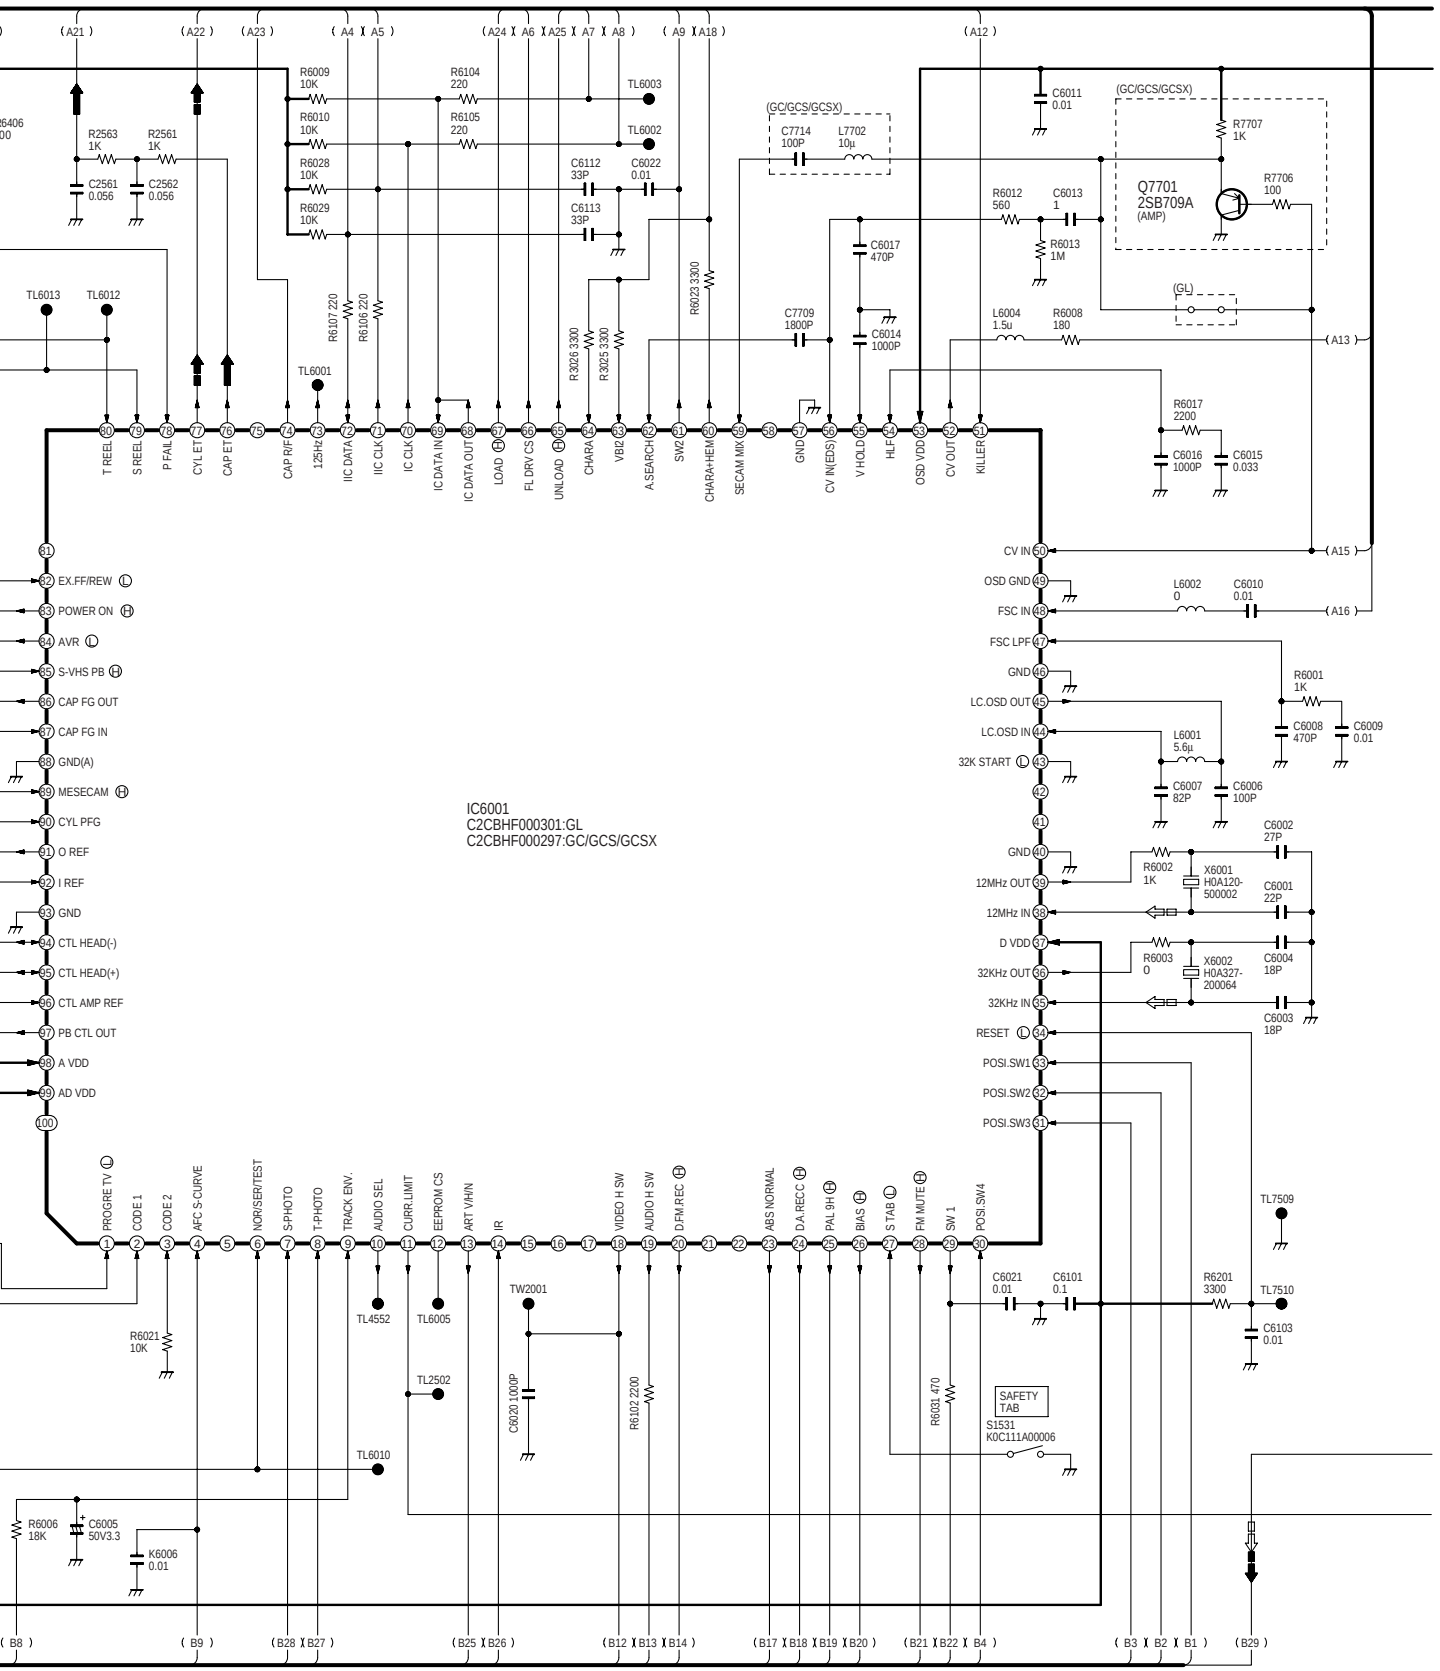

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO SECTION SCHEMATIC DIAGRAM

6 | 7 | 8 | 9 | 10 | 11

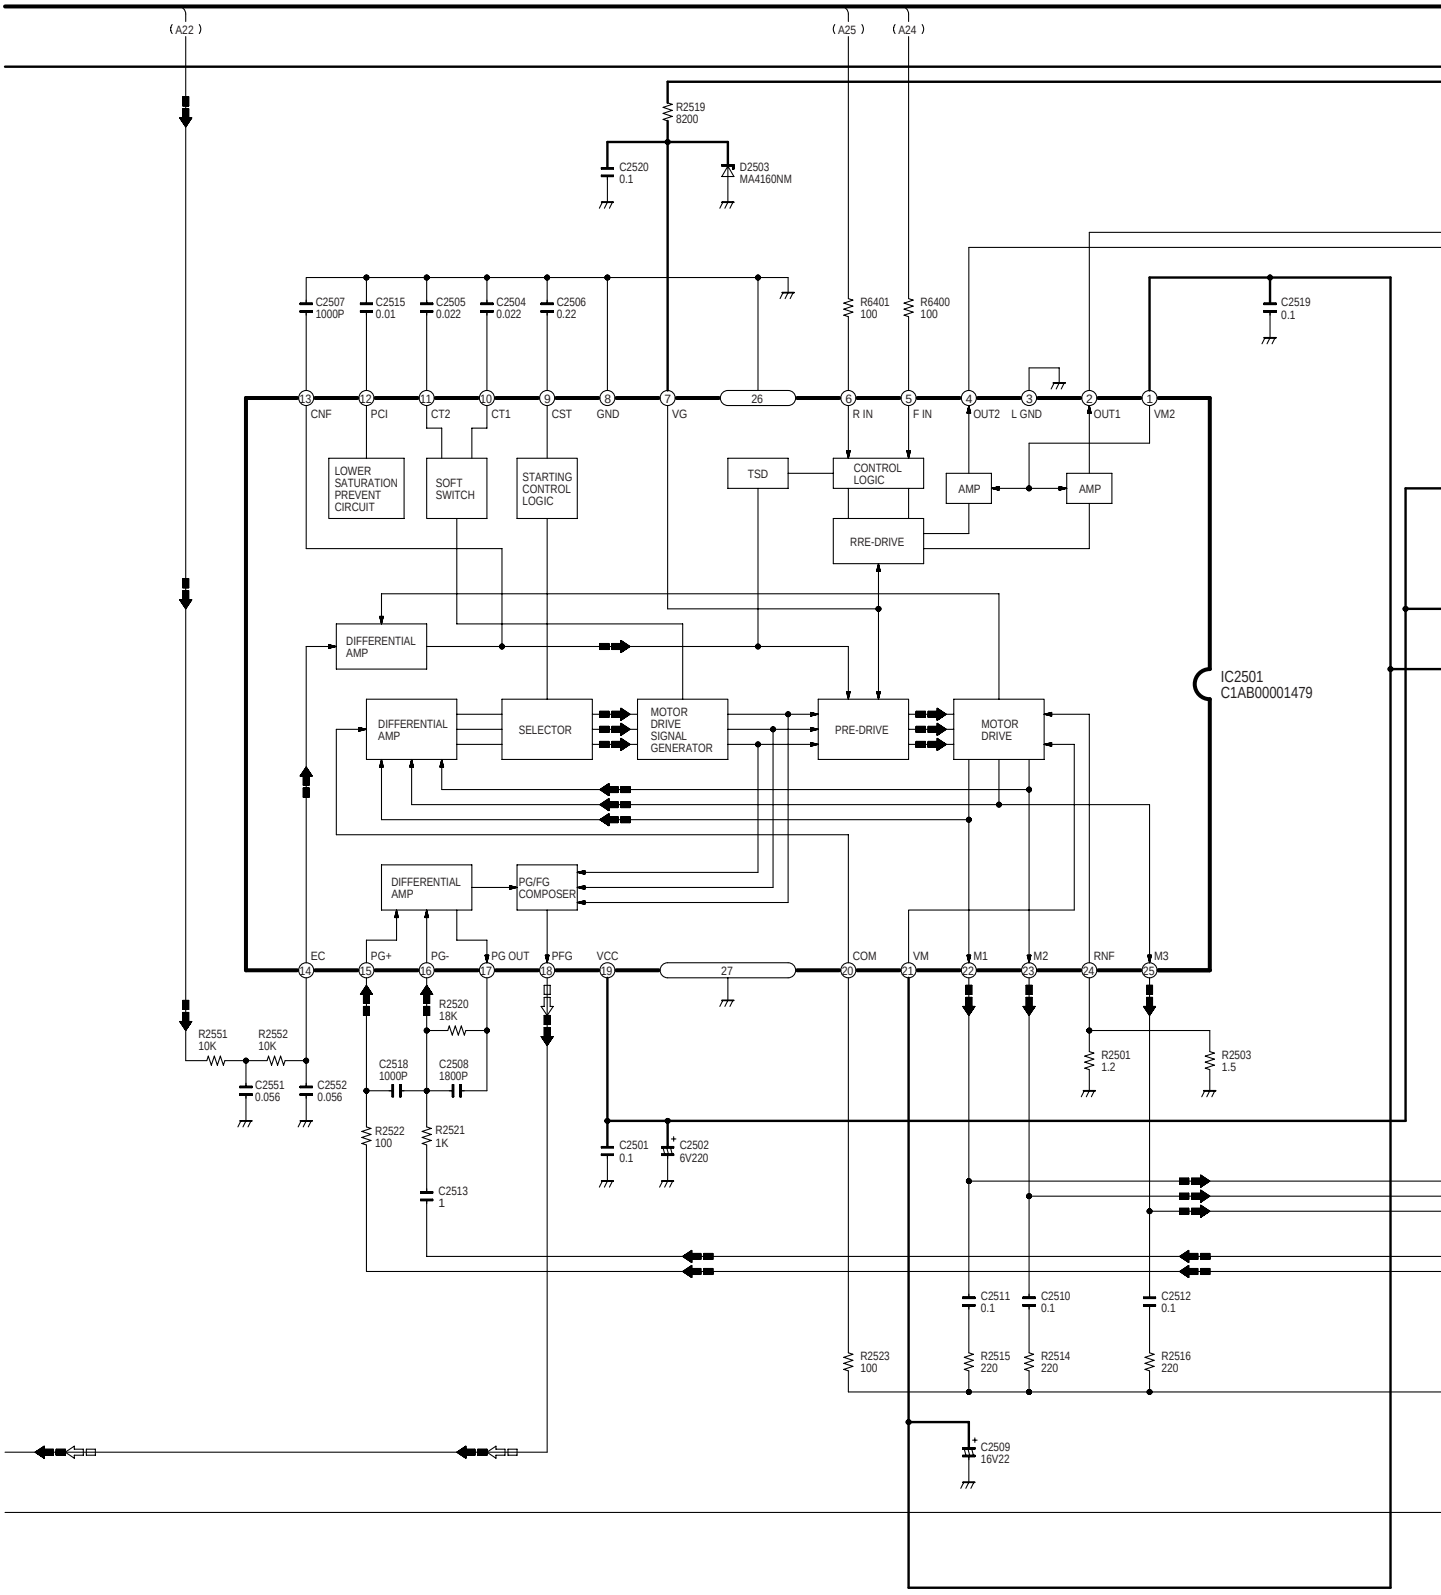

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO SECTION SCHEMATIC DIAGRAM

12	13	14	15	16	17

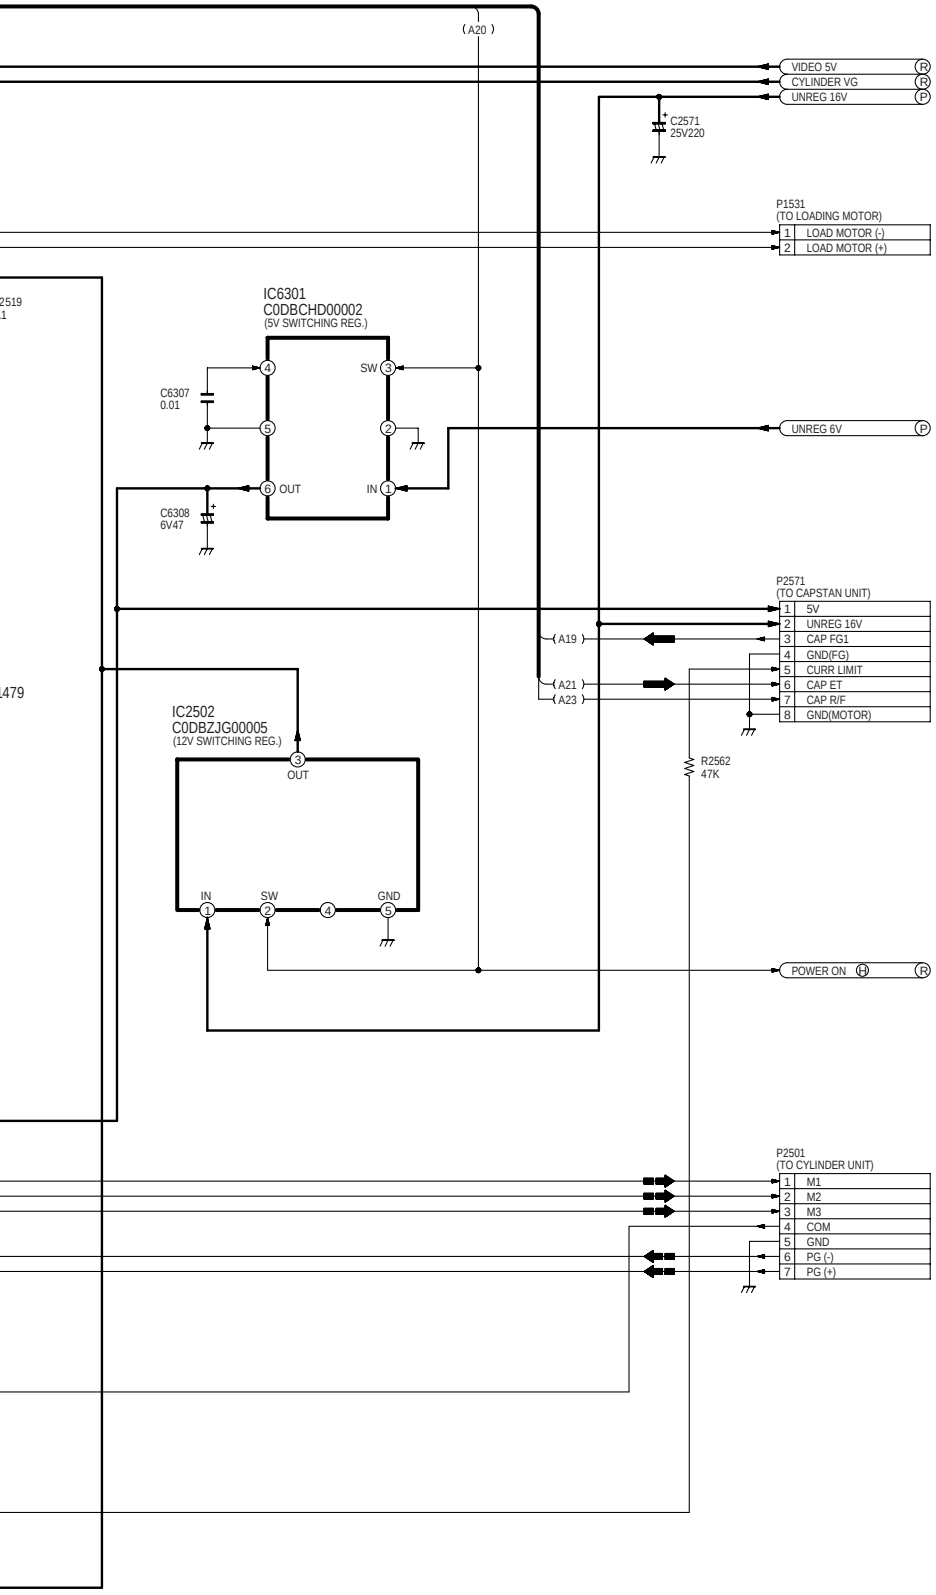

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
SYSTEM CONTROL & SERVO
SECTION SCHEMATIC DIAGRAM

17 | 18 | 19 | 20 | 21 | 22

8.5. LUMINANCE & CHROMINANCE/ AUDIO SECTION IN MAIN SCHEMATIC DIAGRA

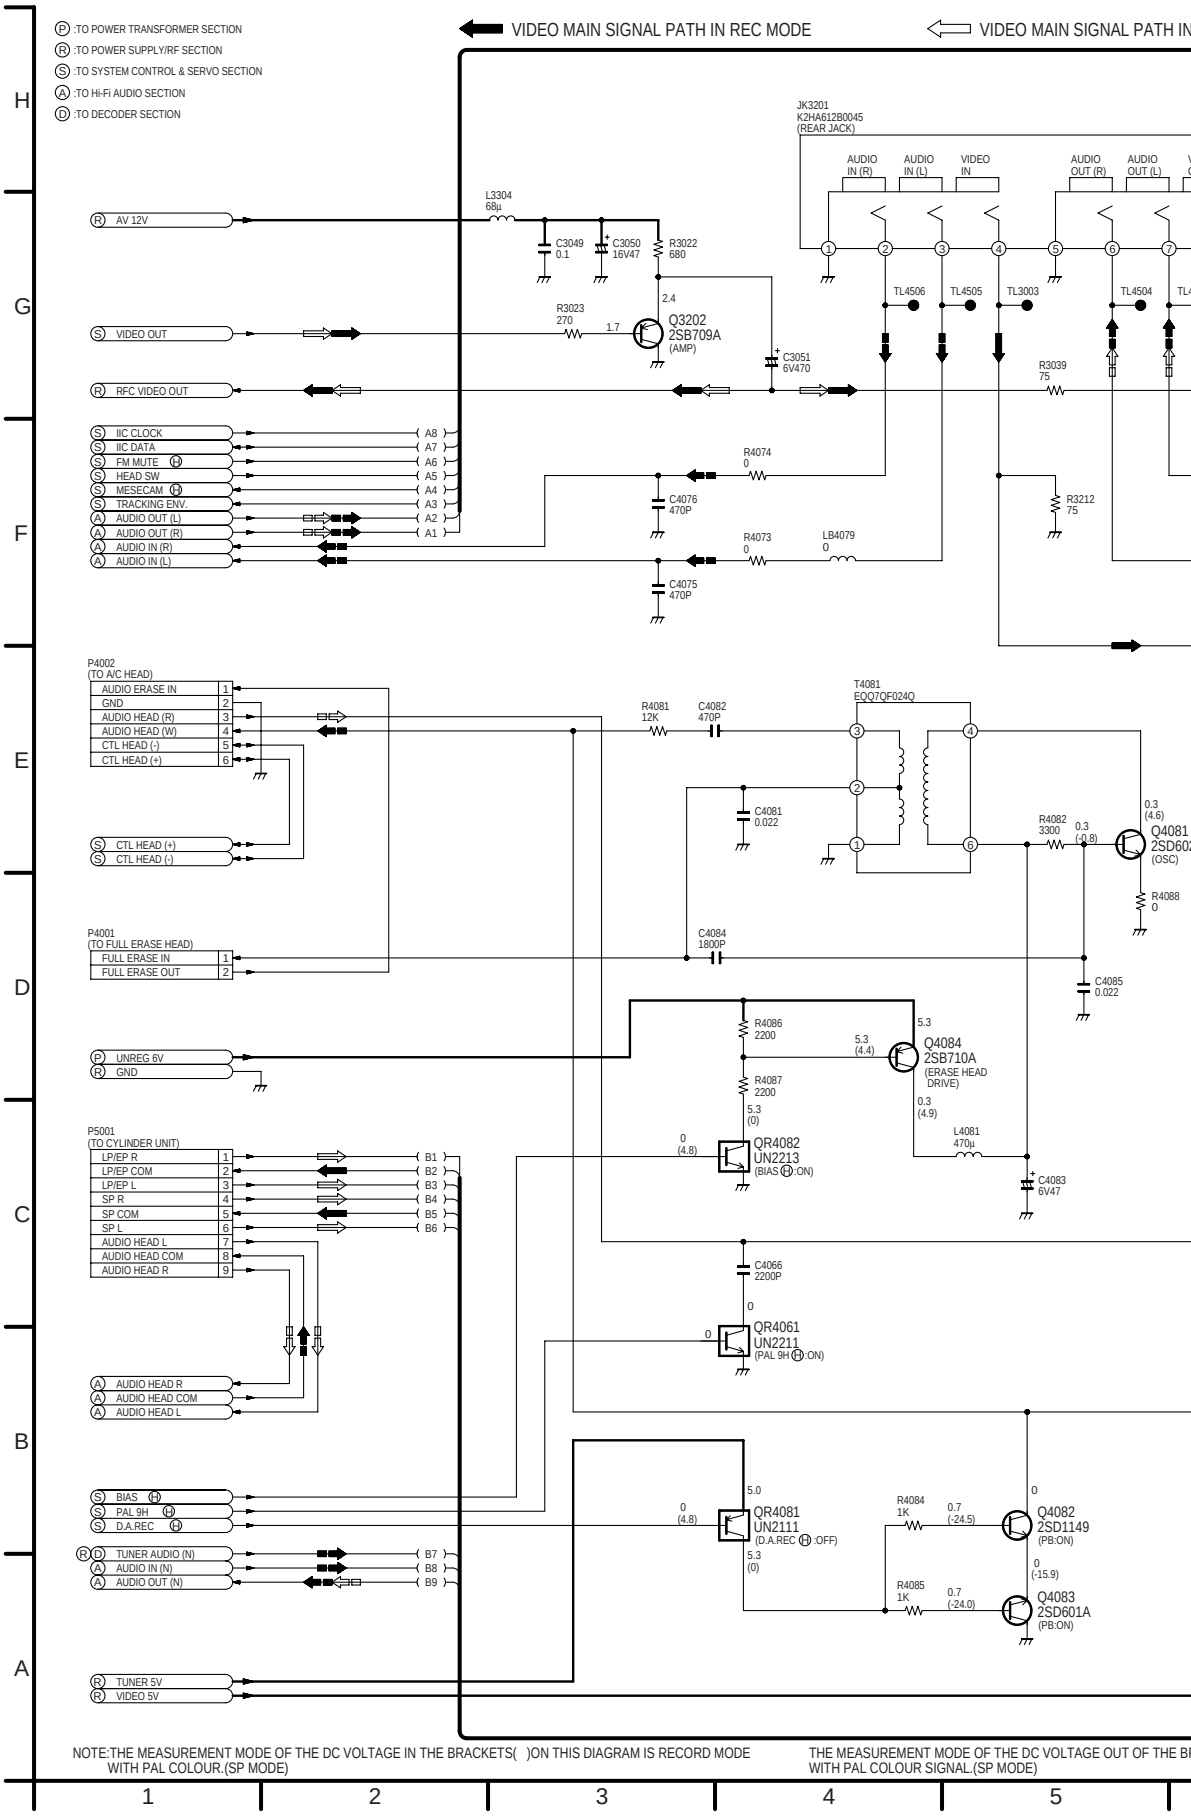

C DIAGRAM

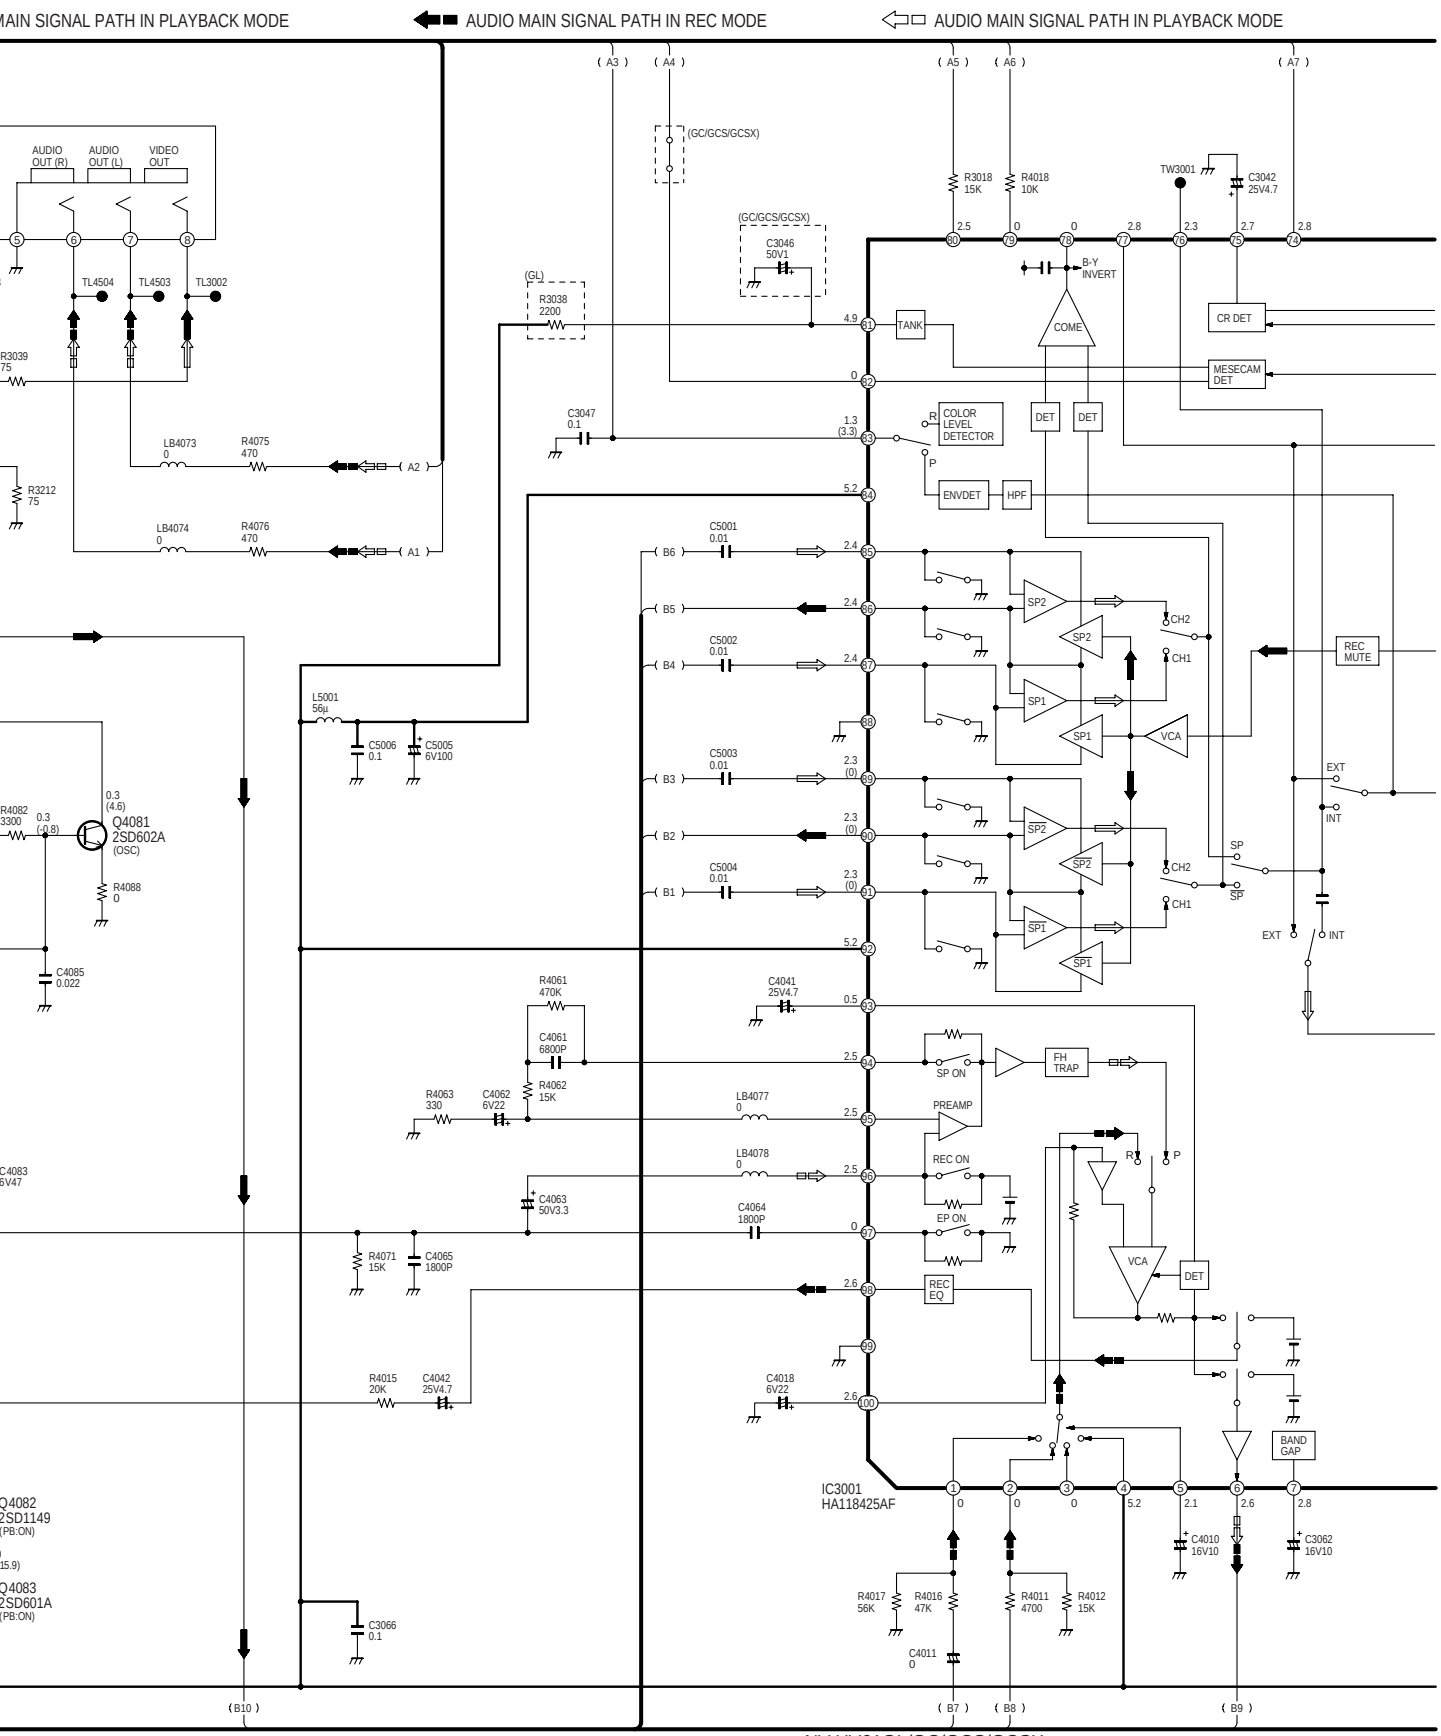

VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE

NV-HV61GL/GC/GCS/GCSX
LUMINANCE & CHROMINANCE/AUDIO SECTION SCHEMATIC DIAGRAM

5 | 6 | 7 | 8 | 9 | 10 | 11

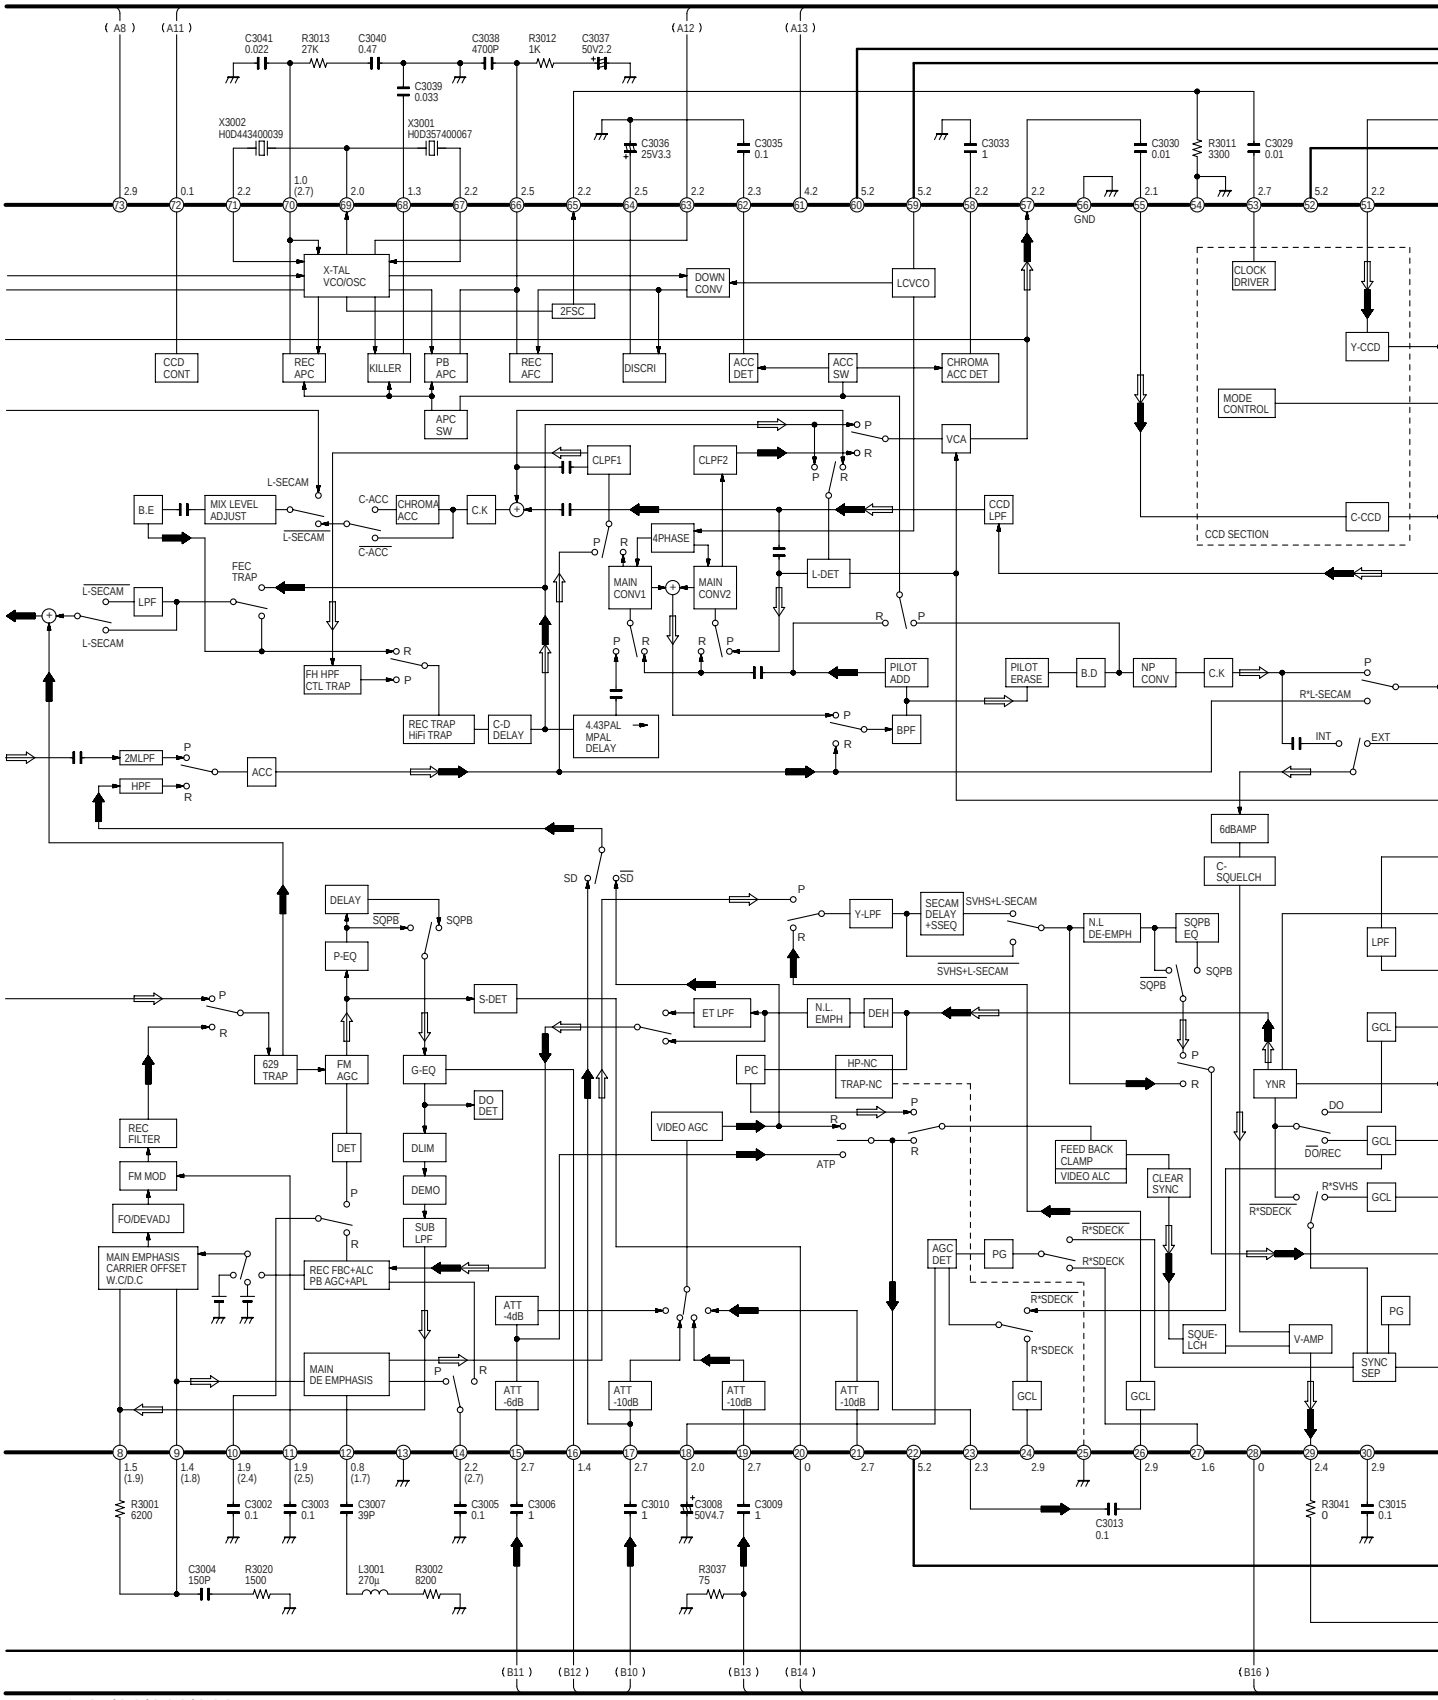

NV-HV61GL/GC/GCS/GCSX
LUMINANCE & CHROMINANCE/AUDIO SECTION SCHEMATIC DIAGRAM

12 | 13 | 14 | 15 | 16 | 17 | 18

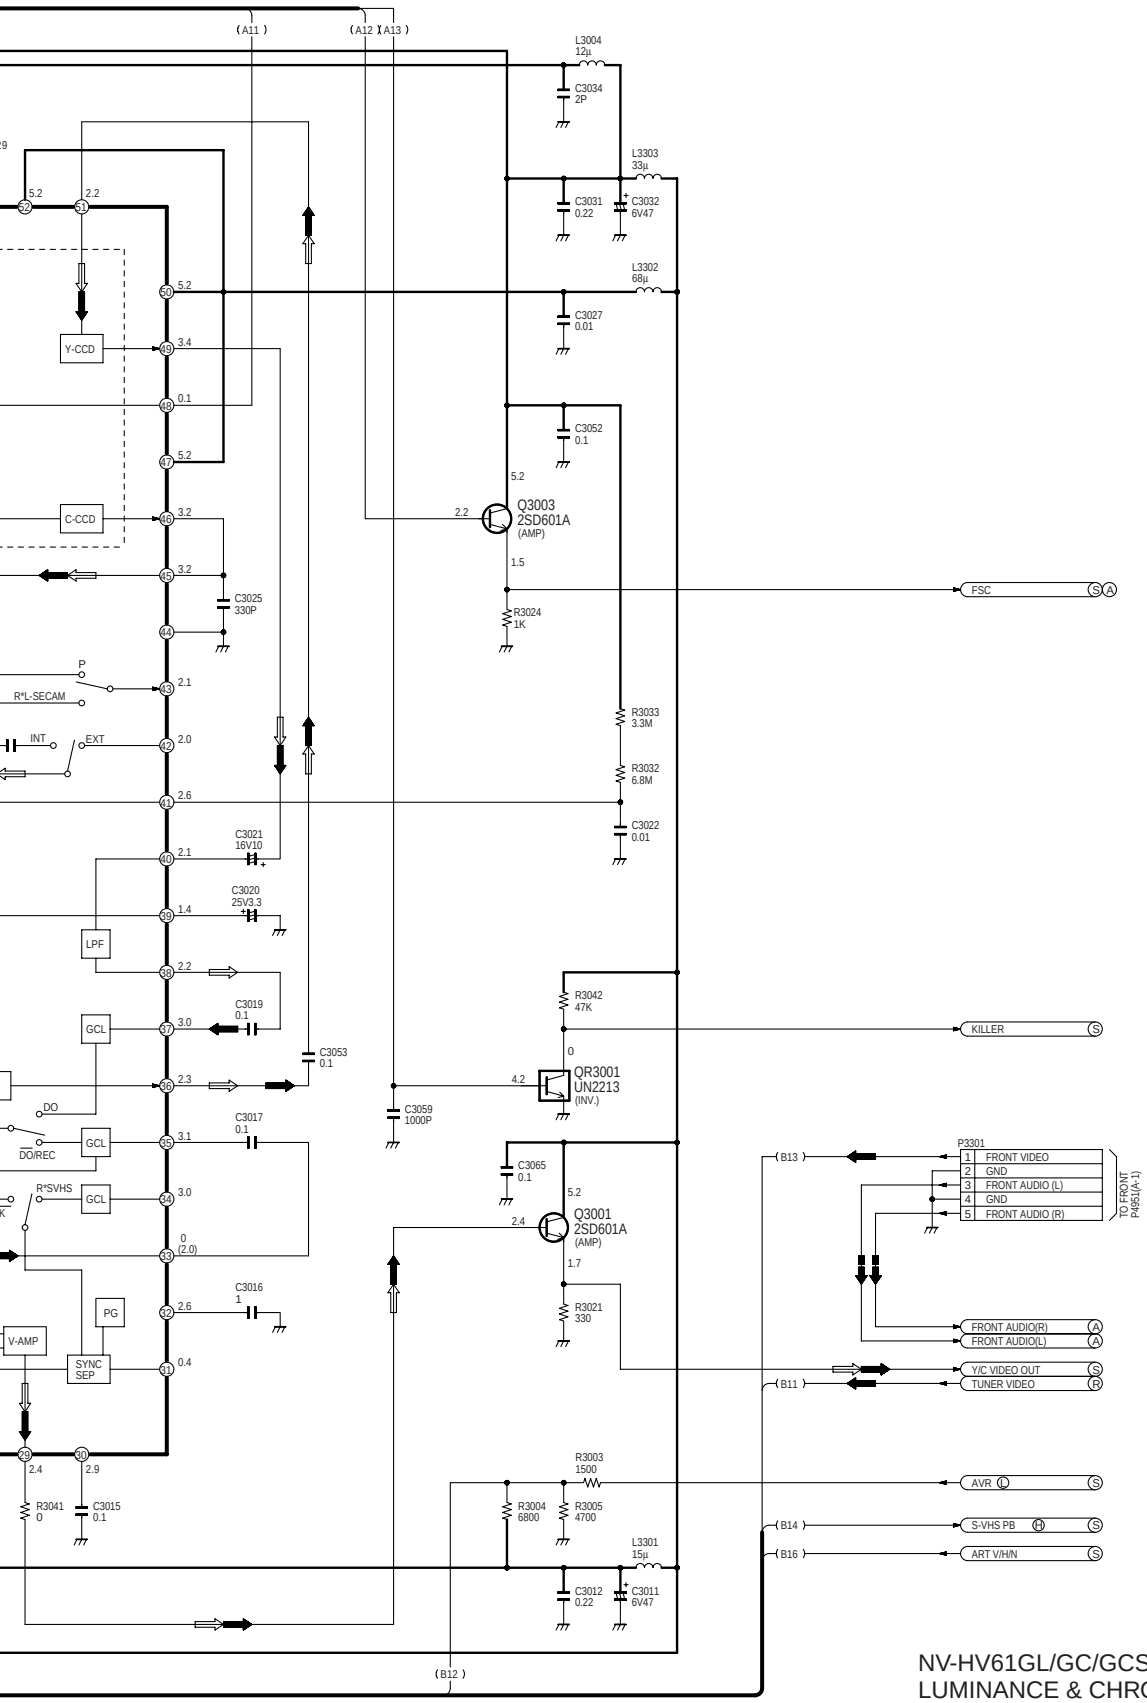

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
LUMINANCE & CHROMINANCE/AUDIO
SECTION SCHEMATIC DIAGRAM

18	19	20	21	22	23

8.6. Hi-Fi AUDIO SECTION IN MAIN SCHEMATIC DIAGRAM

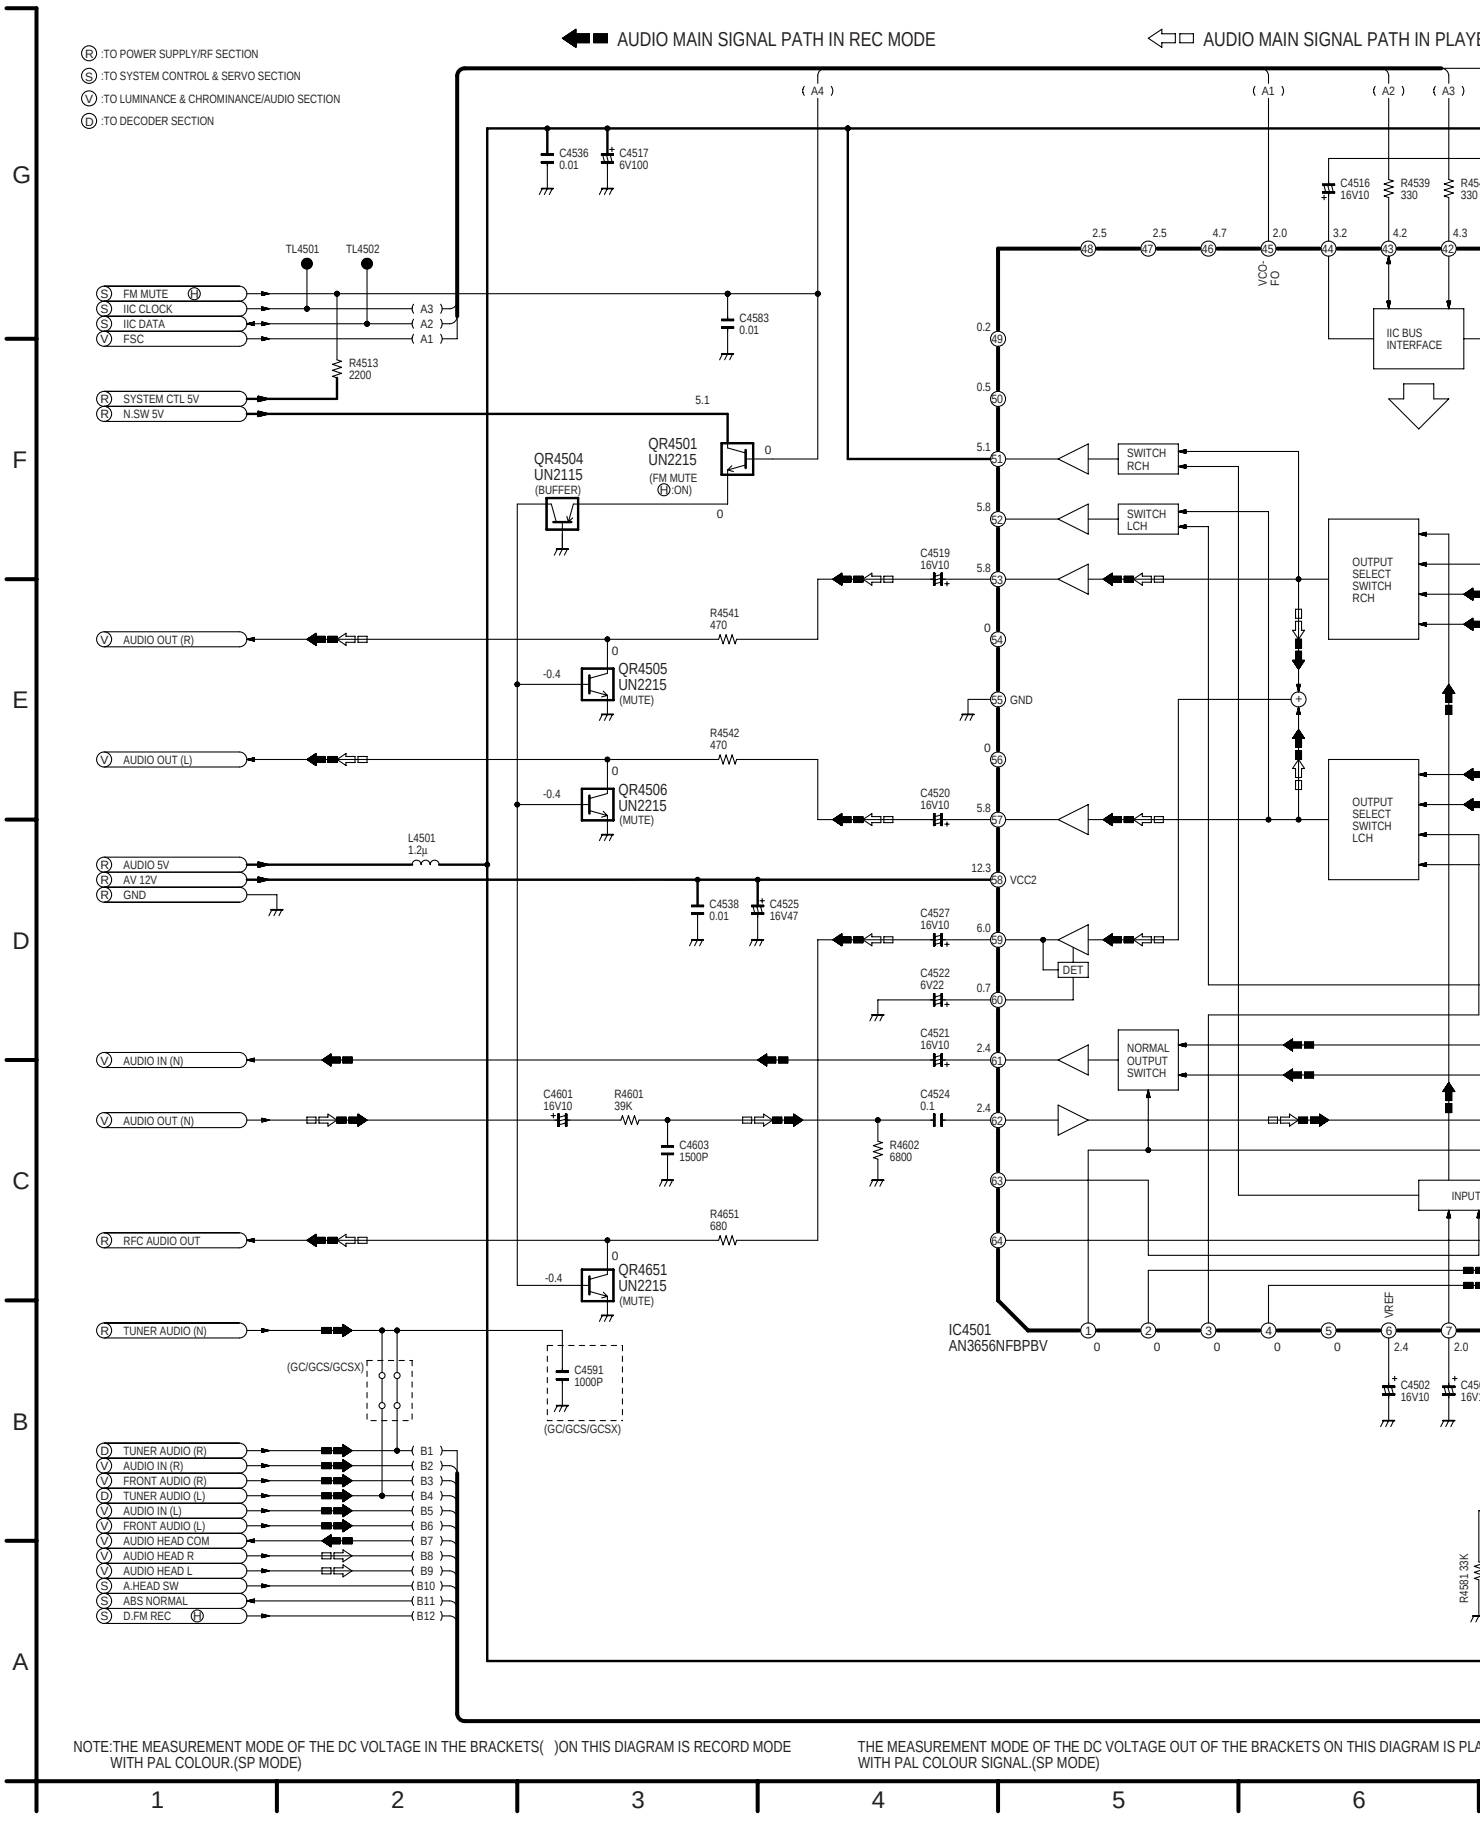

GNAL PATH IN PLAYBACK MODE

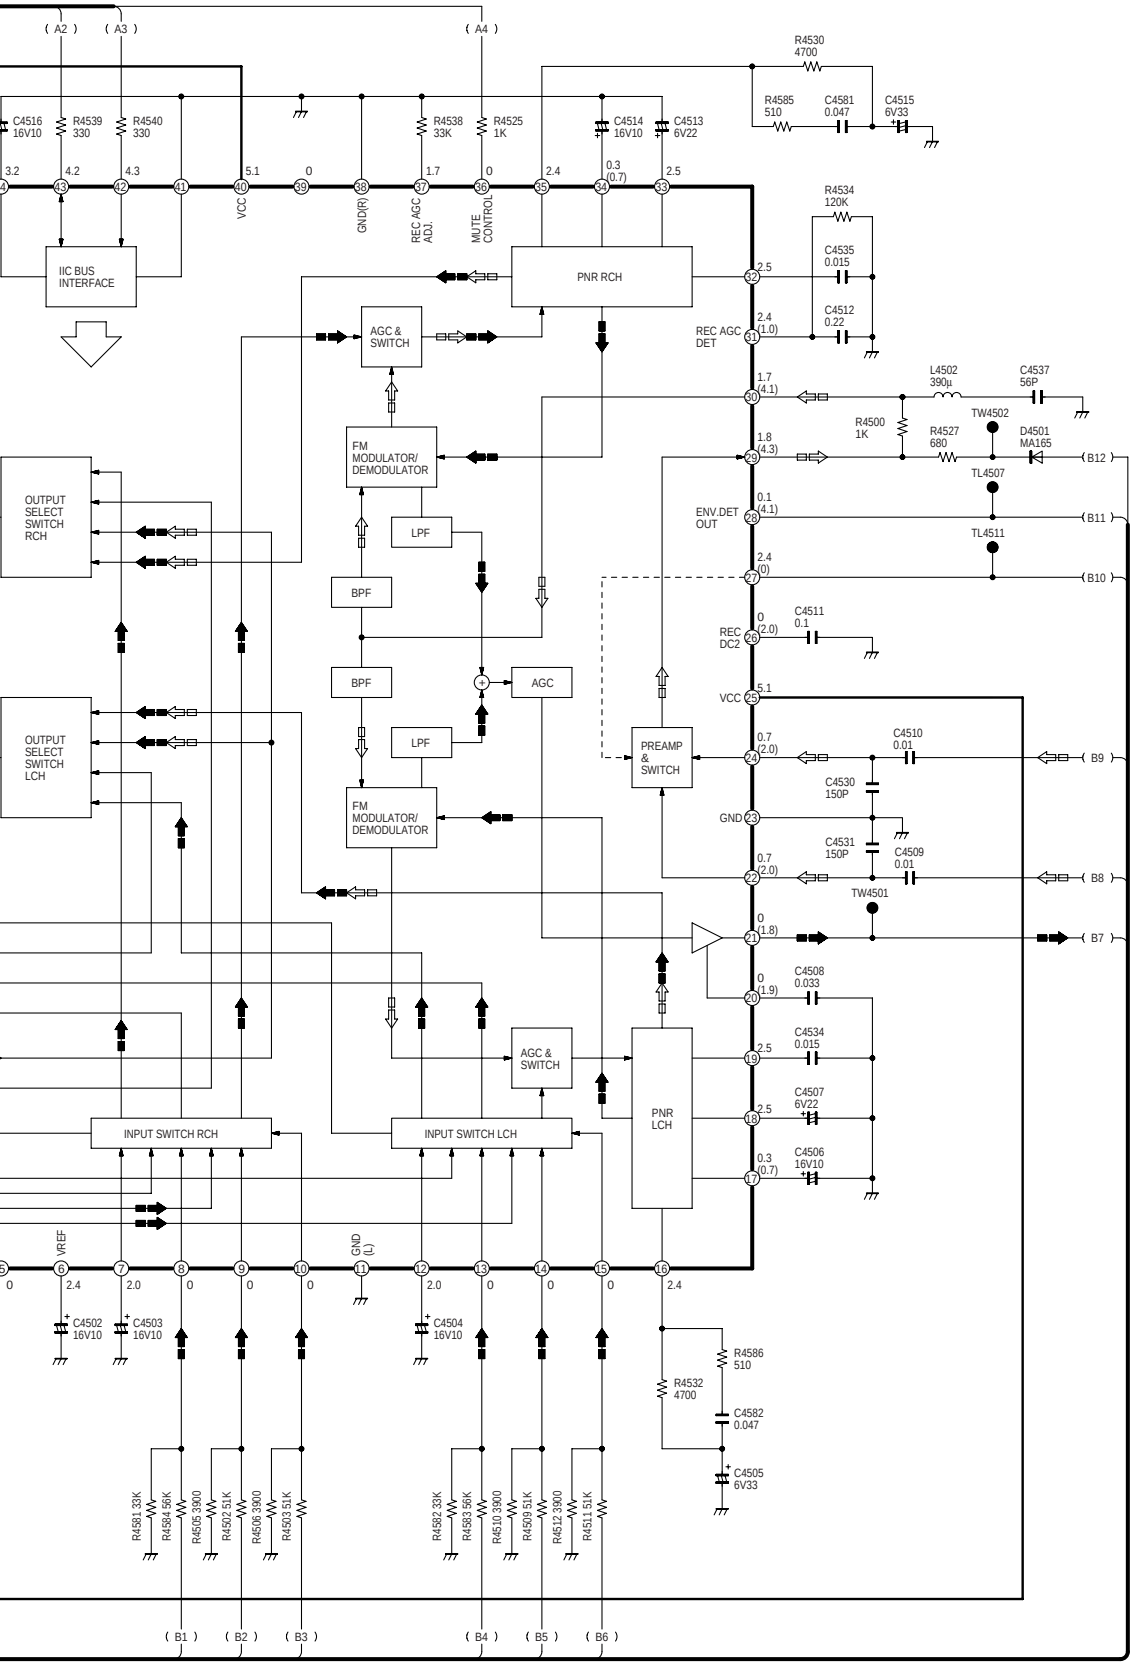

ON THIS DIAGRAM IS PLAYBACK MODE

NOTE:DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL/GC/GCS/GCSX
Hi-Fi AUDIO SECTION SCHEMATIC DIAGRAM

6 | 7 | 8 | 9 | 10 | 11

8.7. DECODER SECTION IN MAIN SCHEMATIC DIAGRAM (NV-HV61GL)

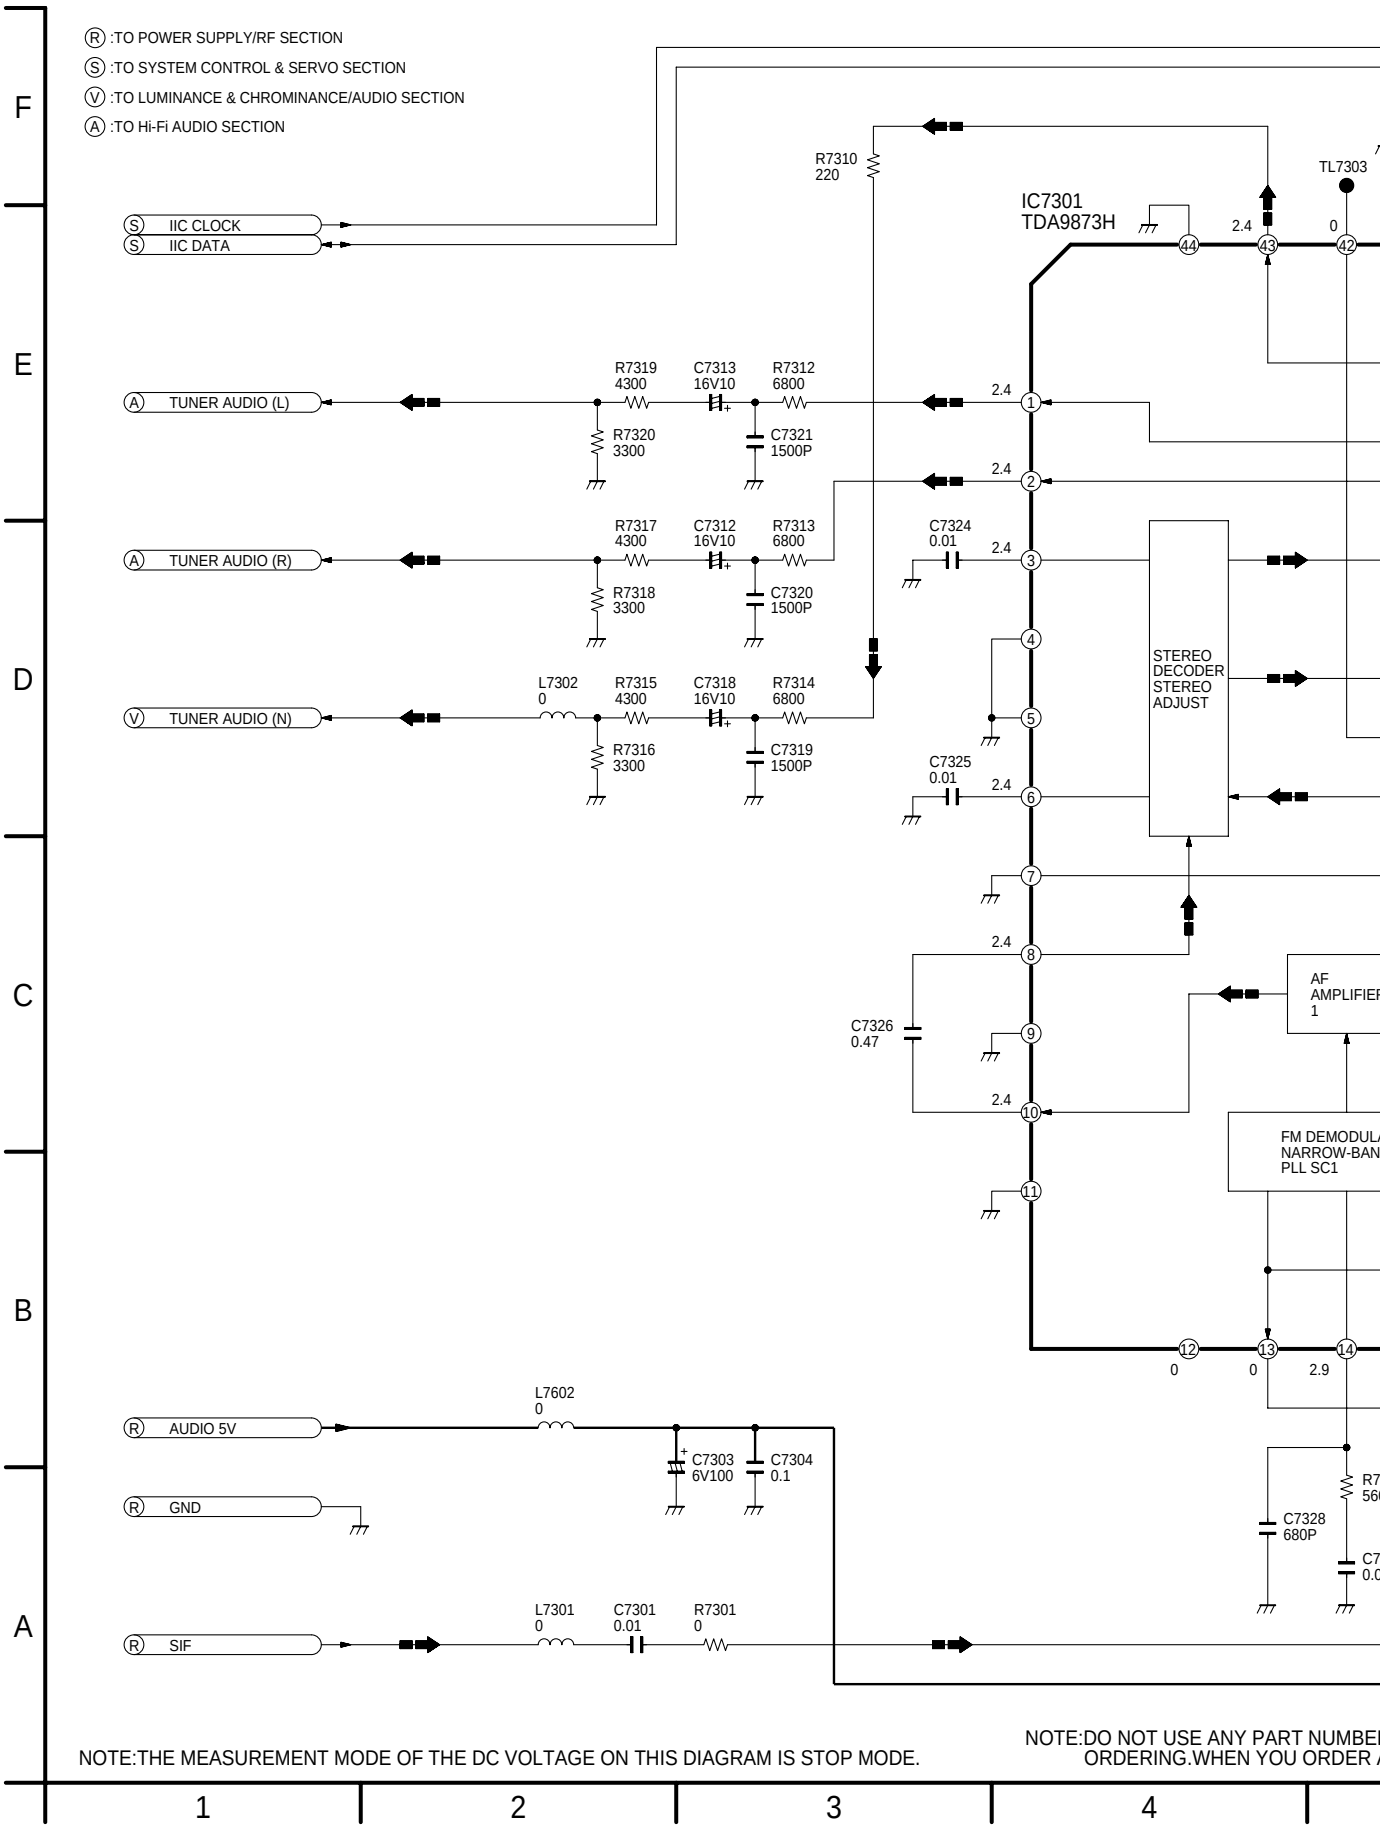

AUDIO SIGNAL PATH

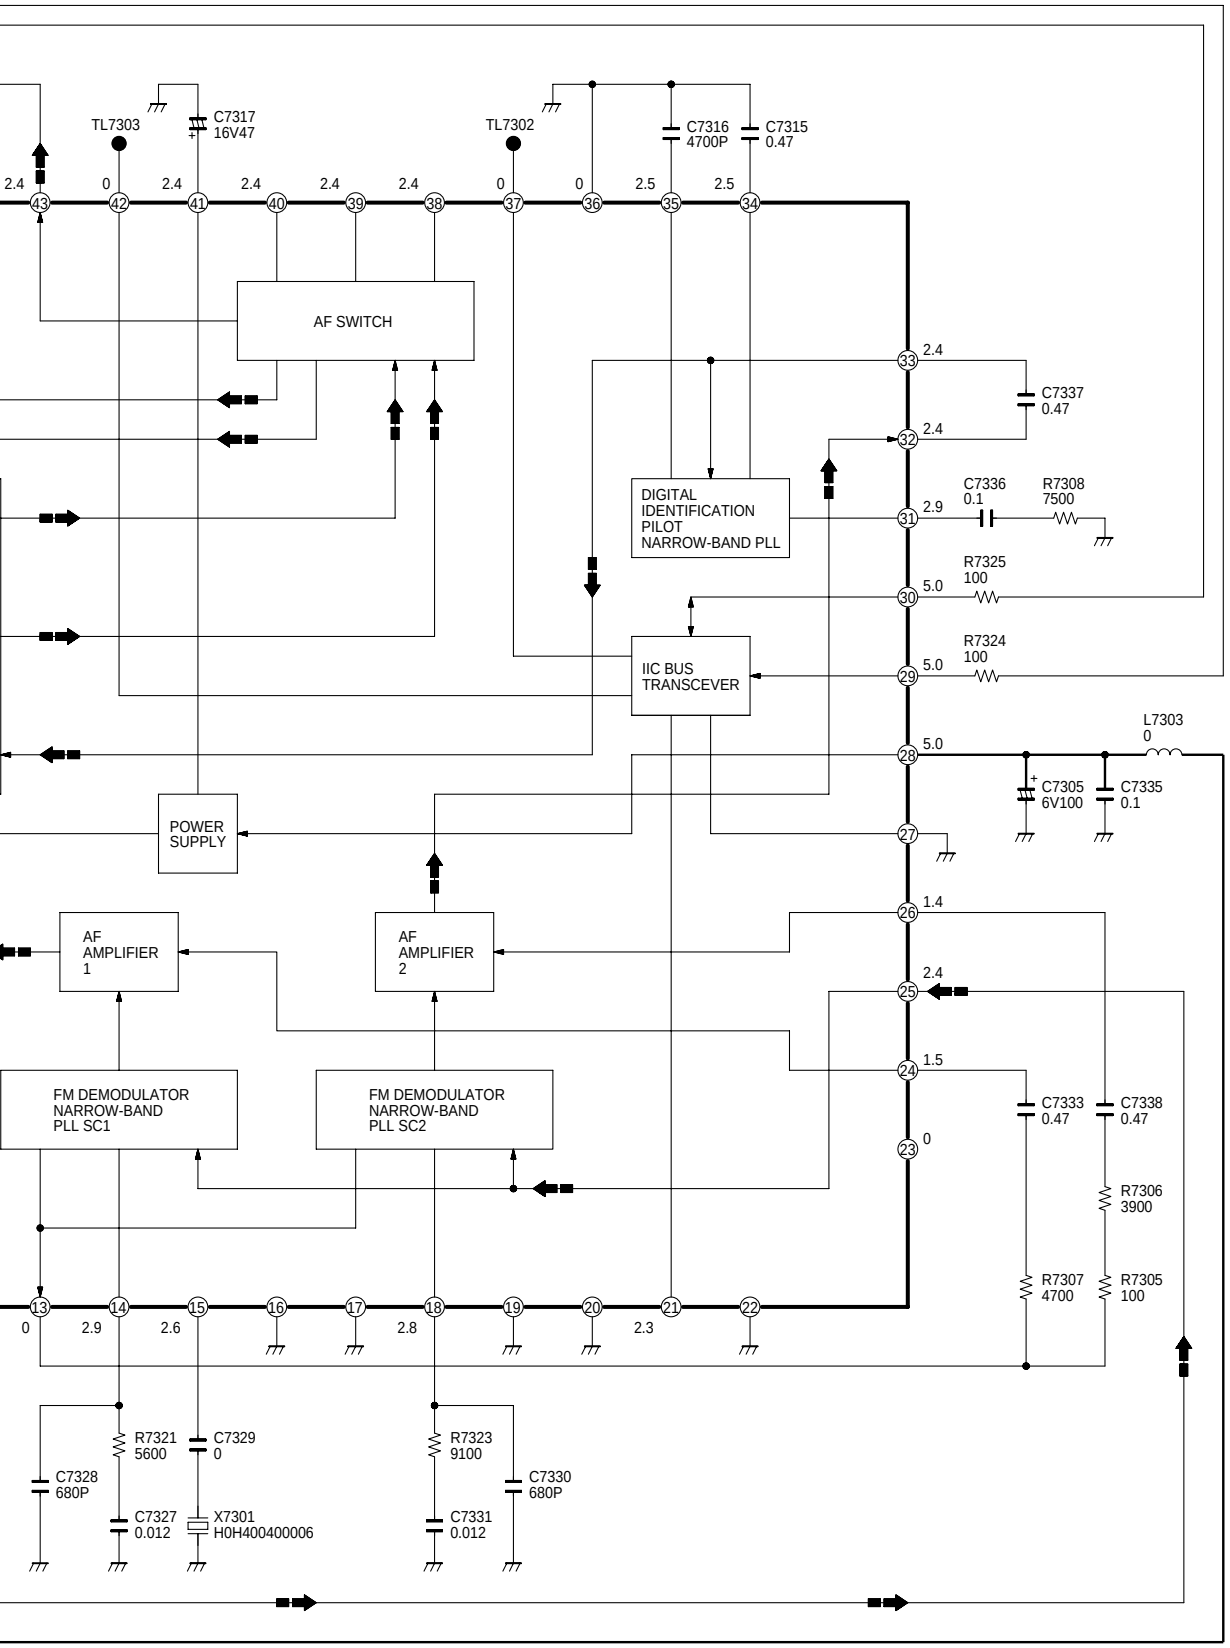

NY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR
EN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.

NV-HV61GL
DECODER SECTION SCHEMATIC DIAGRAM

5	6	7	8

8.8. FRONT SCHEMATIC DIAGRAM

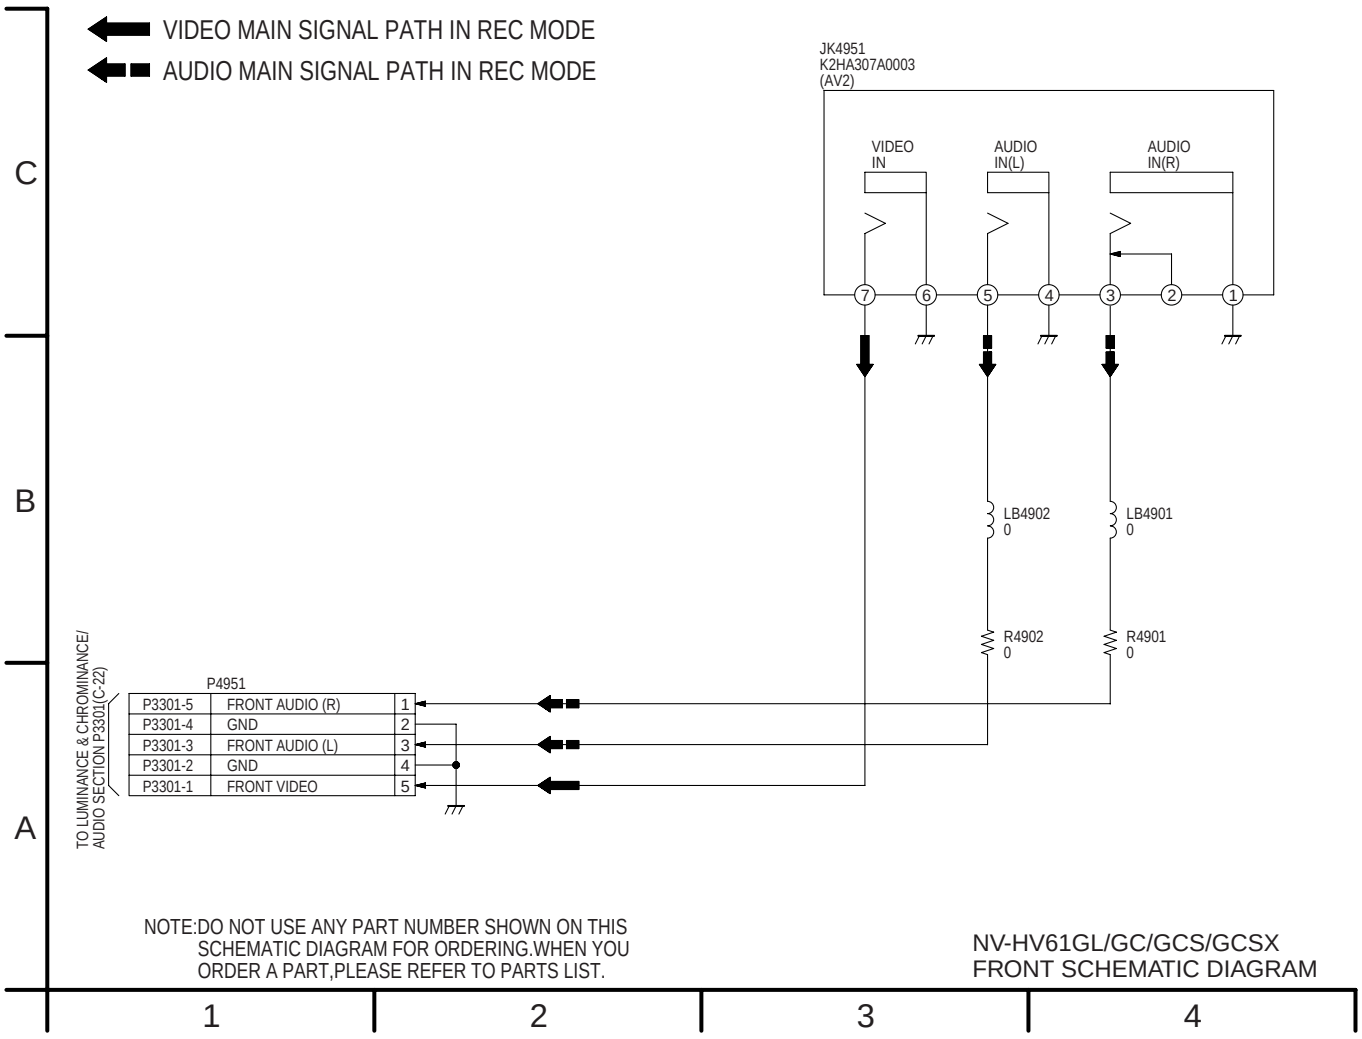

T1150-2 STOP
3.8Vp-p (2msec.div.)

T1150-4 STOP
560Vp-p (5usec.div.)

T1150-6 STOP
33Vp-p (5usec.div.)

T1150-11 STOP
100Vp-p (5usec.div.)



T1150-12 STOP
18Vp-p (5usec.div.)

T1150-13 STOP
40Vp-p (5usec.div.)

T1150-16 STOP
76Vp-p (5usec.div.)

Q1200-1 STOP
0.4Vp-p (5usec.div.)



IC2501-22,23,25 PLAY
7.0Vp-p (2msec.div.)

IC6001-13 STILL
5.0Vp-p (5msec.div.)

IC6001-18 REC
5.0Vp-p (10msec.div.)

IC6001-50 REC/PLAY
2.0Vp-p (20usec.div.)

IC6001-52 REC/PLAY
2.0Vp-p (20usec.div.)

IC6001-68,69 REC
5.0Vp-p (5msec.div.)

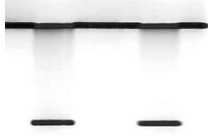

IC6001-70 REC
5.0Vp-p (5msec.div.)

IC6001-71 REC
5.0Vp-p (5usec.div.)

IC6001-72 REC
5.0Vp-p (5msec.div.)

IC6001-79,80 FF/REW
5.0Vp-p (1msec.div.)

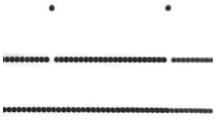

IC6001-90 REC
5.0Vp-p (10msec.div.)



IC6001-94,95 REC
6.8Vp-p (10msec.div.)

IC6001-97 PLAY
0.8Vp-p (10msec.div.)

IC3001-6 REC/PLAY
1.2Vp-p (0.5msec.div.)

IC3001-17 REC
1.2Vp-p (20µsec.div.)

IC3001-26 REC
0.5Vp-p (20µsec.div.)

IC3001-29 REC/PLAY
2.2Vp-p (20µsec.div.)

IC3001-45,46 PLAY
0.5Vp-p (20µsec.div.)

IC3001-49 PLAY
0.5Vp-p (20µsec.div.)

IC3001-73 REC/PLAY
5.0Vp-p (5msec.div.)

IC3001-74 REC/PLAY
5.0Vp-p (5msec.div.)

IC3001-80 REC/PLAY
0.5Vp-p (10msec.div.)

IC3001-85 PLAY
1.8Vp-p (20µsec.div.)



IC3001-86 REC
1.8Vp-p (5msec.div.)



IC3001-87 PLAY
150mVp-p (20µsec.div.)



IC3001-96 PLAY
5.0Vp-p (5msec.div.)



IC3001-98 REC
1.6Vp-p (0.5msec.div.)

IC4501-9,14 REC
0.4Vp-p (0.5msec.div.)

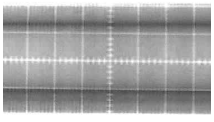

IC4501-21 REC
1.4Vp-p (20usec.div.)

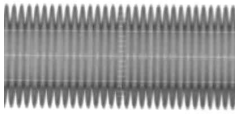

IC4501-22,24 PLAY
1.4Vp-p (20usec.div.)

IC4501-53,57 REC/PLAY
1.8Vp-p (0.5msec.div.)

MAIN SIGNAL PATH IN REC MODE

MAIN SIGNAL PATH IN PLAYBACK MODE

IC4501

JK4951
(FRONT JACK)

IN (R) ③ FRONT AUDIO (R) — P4951 1 / P3301 5 — ⑩

IN (L) ⑤ FRONT AUDIO (L) — P4951 3 / P3301 3 — ⑮

JK3201
(REAR JACK)

IN (R) ② AUDIO IN (R) — TL4506 — ⑨

IN (L) ③ AUDIO IN (L) — TL4505 — ⑭

OUT (R) ⑥ AUDIO OUT (R) — TL4504 — QR4505 MUTE — ⑬

OUT (L) ⑦ AUDIO OUT (L) — TL4503 — QR4506 MUTE — ⑰

TO TUNER — RFC AUDIO OUT — QR4651 MUTE — ⑲

(GL)

FROM DECODER

TUNER AUDIO (R) ⑧

TUNER AUDIO (L) ⑬

(GC/GCS/GCSX)

IC3001

FROM TUNER/ DECODER — TUNER AUDIO (N) ①

NORMAL AUDIO HEAD — P4002 4 ⑱ — REC EQ — MUTE — VCA — R / P — ② ⑥⑫

P4002 3 ⑯ — fh TRAP — MUTE CTL ⑲ — MUTE CTL ⑯

FROM SYSTEM CONTROL — FM MUTE Ⓗ

INPUT SELECT SWITCH RCH

INPUT SELECT SWITCH LCH

OUTPUT SELECT SWITCH RCH

OUTPUT SELECT SWITCH LCH

PNR RCH

PNR LCH

NORMAL SELECT SWITCH

AGC & SWITCH

FM MODULATOR/ DEMODULATOR

LPF

BPF

BPF

AGC

LPF

FM MODULATOR/ DEMODULATOR

AGC & SWITCH

IIC BUS INTERFACE ㊷ ㊸ — TL4501 TL4502 — IIC CLOCK / IIC DATA — TO/FROM SYSTEM CONTROL

VCO F0 ㊺ — FSC — FROM LUMINANCE & CHROMINANCE

TL4511 — ㉗ — AUDIO H.SW — FROM SYSTEM CONTROL

TW4502 — ㉚ — D.FM REC Ⓗ — FROM SYSTEM CONTROL

PREAMP & SWITCH ㉙

㉔ ㉑ ㉒ — P5001 7 / P5001 8 / P5001 9 — Hi-Fi AUDIO HEAD (L / R)

NV-HV61GL/GC/GCS/GCSX
AUDIO BLOCK DIAGRAM

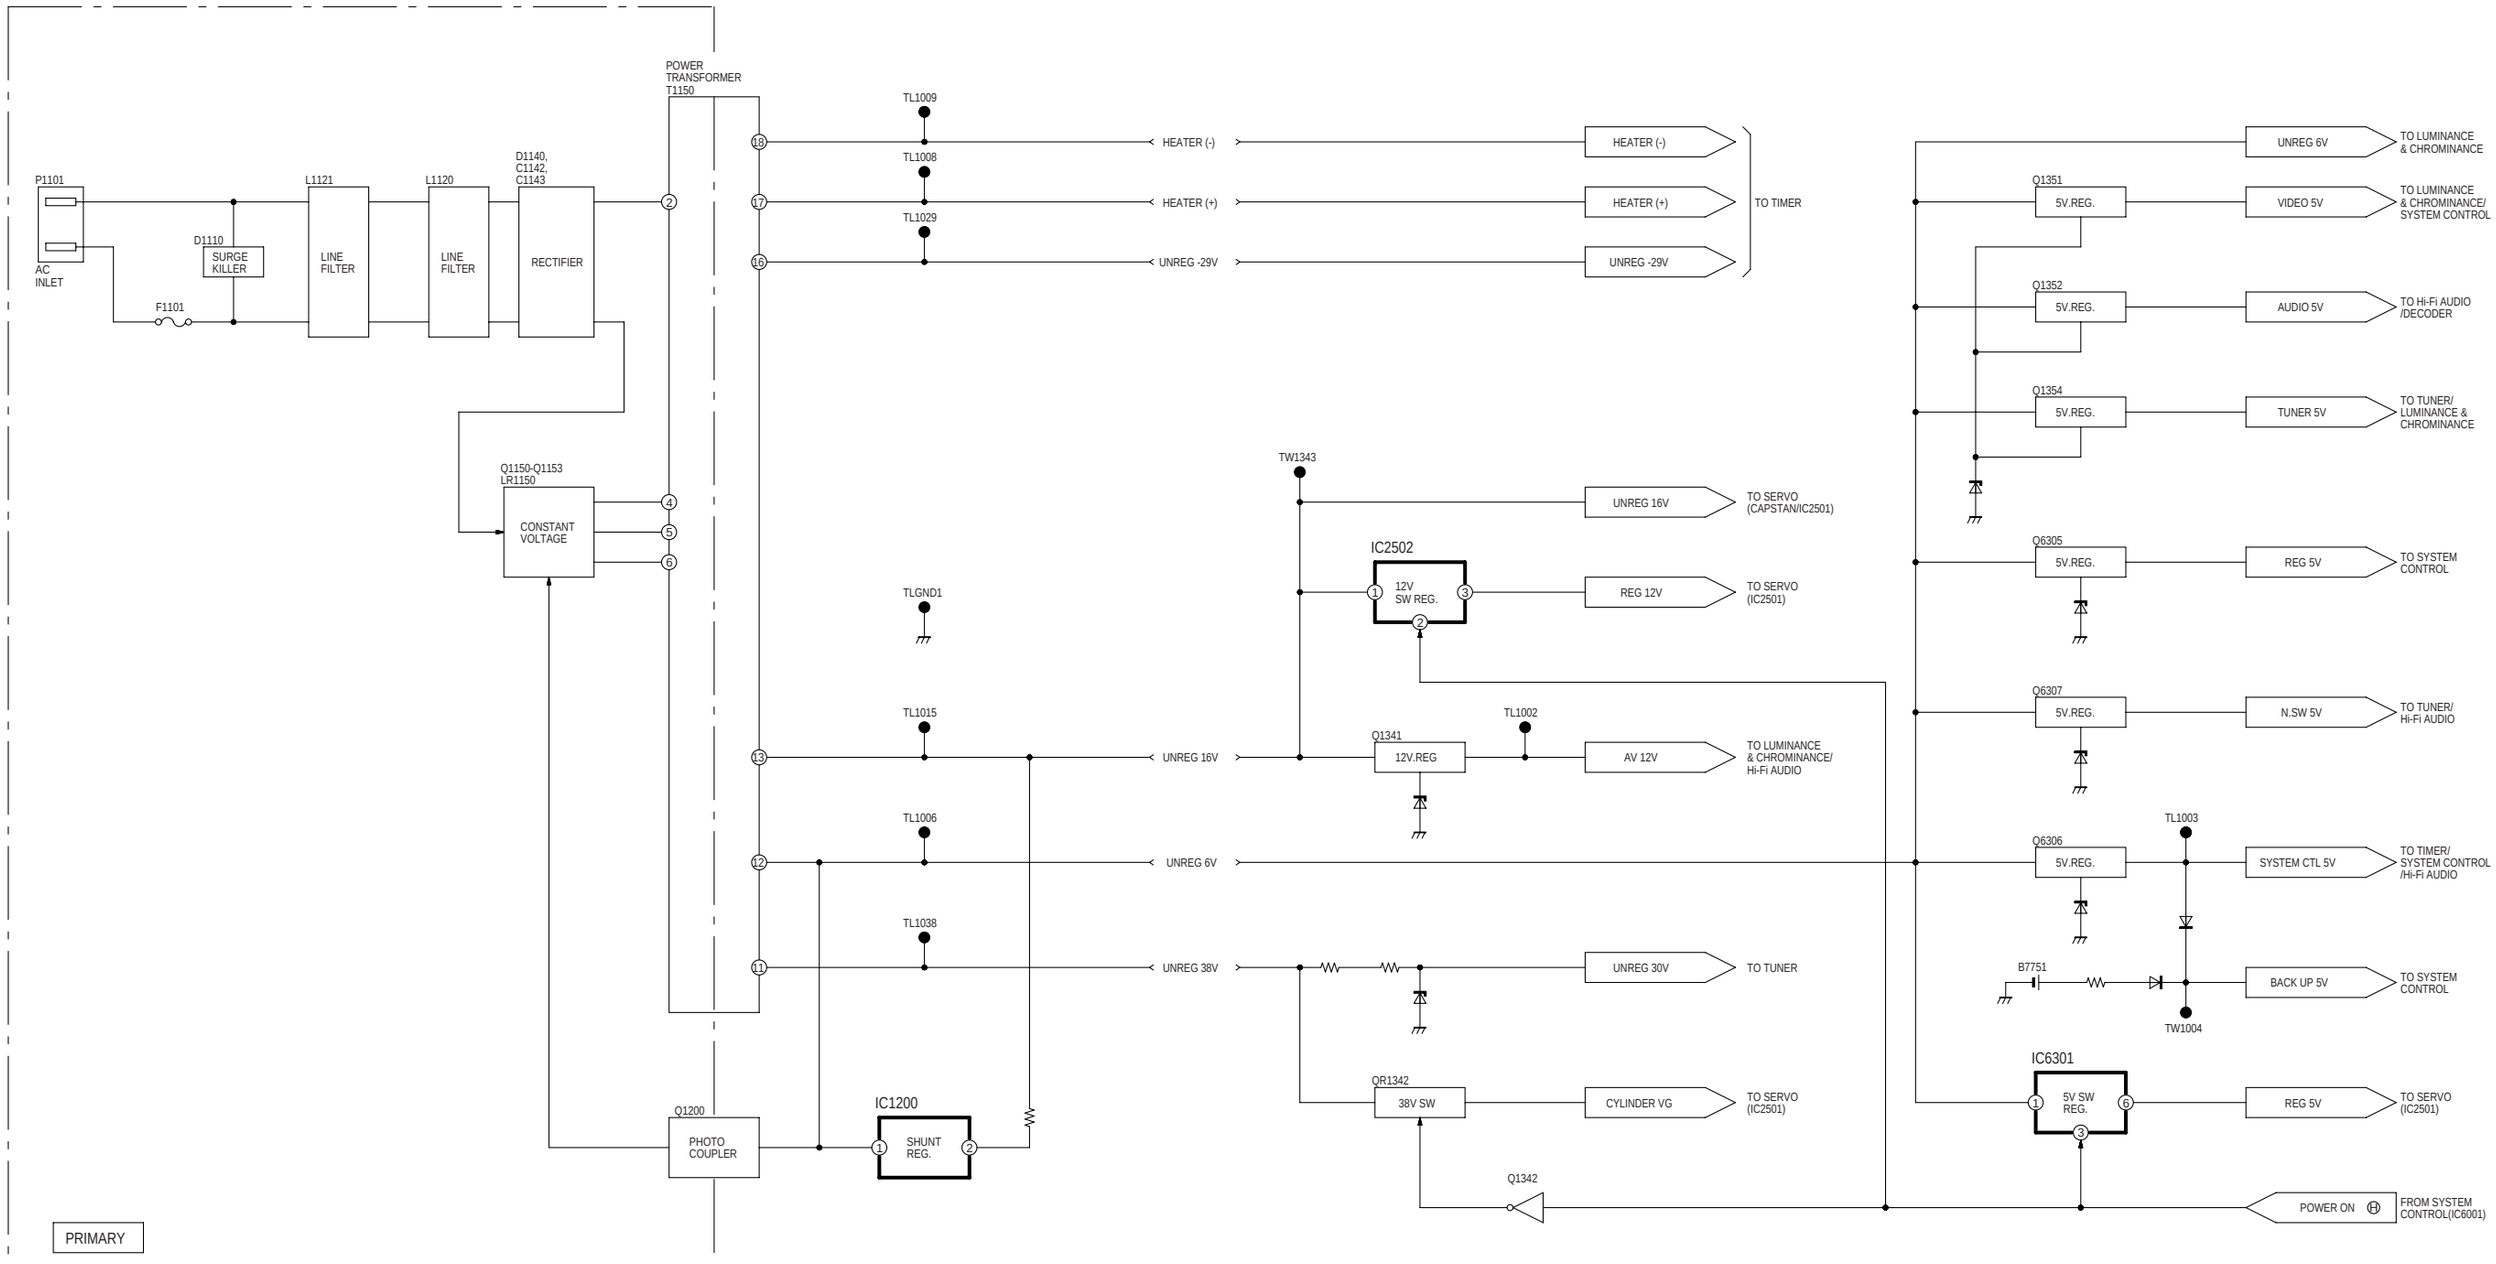

NV-HV61GL/GC/GCS/GCSX
POWER BLOCK DIAGRAM